

DX80R

Shop Manual

K1044971E

Serial Number 50001 and Up

DOOSAN reserves the right to improve its products continuously, delivering the best possible product to the marketplace. These improvements can be implemented at any time with no obligation to change materials previously sold. It is recommended that consumers periodically contact their distributors for most recent documentation on purchased equipment.

This documentation may include attachments and optional equipment not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Table of Contents

Safety

Track Excavator Safety.....	SP001631
-----------------------------	----------

Specifications

Specification for DX80R.....	SP001632
------------------------------	----------

General Maintenance

General Maintenance Procedures.....	SP000016
Standard Torques.....	SP000813

Upper Structure

Cabin	SP001623
Swing Bearing	SP001633

Lower Structure and Chassis

Track Assembly	SP001634
----------------------	----------

Engine and Drive Train

Engine.....	SP001434
Drive Coupling (Main Pump)	SP001635

Hydraulics

Accumulator	SP000028
Center Joint (Swivel).....	SP001628
Cylinders.....	SP001636
Swing Motor.....	SP001637
Travel Motor.....	SP001638
Main Control Valve.....	SP001691
Main Pump.....	SP001648

Remote Control Valve (Work Lever / Joystick)	SP001649
Travel Control Valve.....	SP001650
Dozer Valve	SP001651
Pedal Valve.....	SP001652
Hydraulic Schematic	SP001694

Electrical System

Electrical System	SP001687
Electrical Schematic (DX60R/DX80R)	SP001688

Attachments

Boom and Arm.....	SP001653
Bucket.....	SP001643

SP001631

Track Excavator Safety

Edition 1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$