



Service Manual

320D2 L EXCAVATOR

ESG00001-UP

Tip: Use Bookmarks panel to navigate

Printed by Heavy Equipment Manuals
v2.20

Printed in U.S.A

[Heavy Equipment Manuals](#)

UENR0199-06 320D2 Excavator Engine Supplement _____	2
UENR0674-08 C7.1 (Mech) Engines for Caterpillar Built Machines _____	253
UENR3252-07 320D2 Excavator Machine Systems _____	678
UENR4125-06 Air Conditioning and Heating R134a for All Cat Machines ____	1637

Water Temperature Regulator - Remove and Install _____	4
Water Temperature Regulator - Remove and Install (2) _____	9
Water Separator and Fuel Filter (Primary) - Remove and Install _____	12
Water Separator and Fuel Filter (Primary) - Remove and Install (2) _____	15
Water Pump - Remove and Install _____	17
Water Pump - Remove and Install (2) _____	24
System Pressure - Release _____	30
System Pressure - Release (2) _____	33
Refrigerant Receiver-Dryer - Remove and Install _____	37
Refrigerant Receiver-Dryer - Remove and Install (2) _____	41
Refrigerant Condenser - Remove and Install _____	44
Refrigerant Condenser - Remove and Install (2) _____	47
Refrigerant Compressor - Remove and Install _____	50
Refrigerant Compressor - Remove and Install (2) _____	55
Radiator and Hydraulic Oil Cooler - Remove _____	58
Radiator and Hydraulic Oil Cooler - Remove (2) _____	62
Radiator and Hydraulic Oil Cooler - Install _____	66
Radiator and Hydraulic Oil Cooler - Install (2) _____	70
Oil Pan - Remove and Install _____	74
Oil Pan - Remove and Install (2) _____	82
Muffler - Remove and Install _____	89
Muffler - Remove and Install (2) _____	94
Fuel Priming Pump and Fuel Filter Base - Remove and Install _____	98
Fuel Priming Pump and Fuel Filter Base - Remove and Install (2) _____	101
Flywheel - Remove and Install _____	105
Flywheel - Remove and Install (2) _____	111
Fan Guard - Remove and Install _____	116
Fan Guard - Remove and Install (2) _____	118
Fan Drive - Remove and Install _____	120
Fan Drive - Remove and Install (2) _____	123

Fan - Remove and Install _____	125
Fan - Remove and Install (2) _____	127
Exhaust Manifold - Remove and Install _____	129
Exhaust Manifold - Remove and Install (2) _____	138
Engine Rear Mount - Remove _____	146
Engine Rear Mount - Remove (2) _____	149
Engine Rear Mount - Install _____	151
Engine Rear Mount - Install (2) _____	154
Engine Oil Pump - Remove and Install _____	156
Engine Oil Pump - Remove and Install (2) _____	159
Engine Oil Filter and Oil Filter Base - Remove and Install _____	161
Engine Oil Filter and Oil Filter Base - Remove and Install (2) _____	164
Engine Oil Cooler - Remove and Install _____	166
Engine Oil Cooler - Remove and Install (2) _____	171
Engine Front Mount - Remove _____	175
Engine Front Mount - Remove (2) _____	178
Engine Front Mount - Install _____	180
Engine Front Mount - Install (2) _____	183
Engine - Remove and Install _____	185
Engine - Remove and Install (2) _____	192
Electric Starting Motor - Remove and Install _____	197
Electric Starting Motor - Remove and Install (3) _____	200
Electric Starting Motor - Remove and Install (2) _____	202
Crankshaft Vibration Damper and Pulley - Remove and Install _____	205
Crankshaft Vibration Damper and Pulley - Remove and Install (2) _____	209
Crankshaft Front Seal - Remove and Install _____	214
Coolant Tank (Expansion) - Remove and Install _____	218
Coolant Tank (Expansion) - Remove and Install (2) _____	220
Battery - Remove and Install _____	222
Battery - Remove and Install (2) _____	227

Alternator - Remove and Install _____	230
Alternator - Remove and Install (2) _____	235
Air Cleaner - Remove and Install _____	238
Air Cleaner - Remove and Install (2) _____	244
Aftercooler - Remove and Install _____	248
Aftercooler - Remove and Install (2) _____	250

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$