

Rodney DeLoach
Red E Services Inc.
2042 southwest 760A
arcadia, FL 34266

Email address:
redeservicesinc@gmail.com

Phone:
+18639904545

586H
588H
Tier 4B (final)
Rough Terrain Forklift

SERVICE MANUAL

Part number 47821916
1st edition English
April 2015





SERVICE MANUAL

586H Four-Wheel Drive (4WD) TIER 4B (FINAL)

586H Two-Wheel Drive (2WD) TIER 4B (FINAL)

588H Four-Wheel Drive (4WD) TIER 4B (FINAL)

588H Two-Wheel Drive (2WD) TIER 4B (FINAL)

Link Product / Engine

Product	Market Product	Engine
586H Two-Wheel Drive (2WD) TIER 4B (FINAL)	North America	F5HFL463D*F005
586H Four-Wheel Drive (4WD) TIER 4B (FINAL)	North America	F5HFL463D*F005
588H Two-Wheel Drive (2WD) TIER 4B (FINAL)	North America	F5HFL463A*F001
588H Four-Wheel Drive (4WD) TIER 4B (FINAL)	North America	F5HFL463A*F001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.216] Fuel tanks	10.3
[10.206] Fuel filters	10.4
[10.218] Fuel injection system.....	10.5
[10.220] Throttle linkage.....	10.6
[10.254] Intake and exhaust manifolds and muffler	10.7
[10.304] Engine lubrication system.....	10.8
[10.400] Engine cooling system	10.9
[10.414] Fan and drive	10.10
[10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment	10.11
Transmission.....	21
[21.109] Transmission cooler and lines.....	21.1
[21.112] Power shuttle transmission.....	21.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.550] Non-powered rear axle.....	27.4
Brakes and controls	33

[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.300] Reservoir, cooler, and filters.....	35.4
[35.322] Regulated/Low pressure system	35.5
[35.359] Main control valve.....	35.6
[35.728] Telescopic arm control	35.7
[35.740] Telescopic arm hydraulic system.....	35.8
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders	41.3
Wheels.....	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Electrical systems.....	55
[55.100] Harnesses and connectors.....	55.1
[55.201] Engine starting system.....	55.2
[55.301] Alternator.....	55.3
[55.302] Battery.....	55.4
[55.408] Warning indicators, alarms, and instruments	55.5
[55.991] Telematics	55.6
[55.DTC] FAULT CODES.....	55.7

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$