



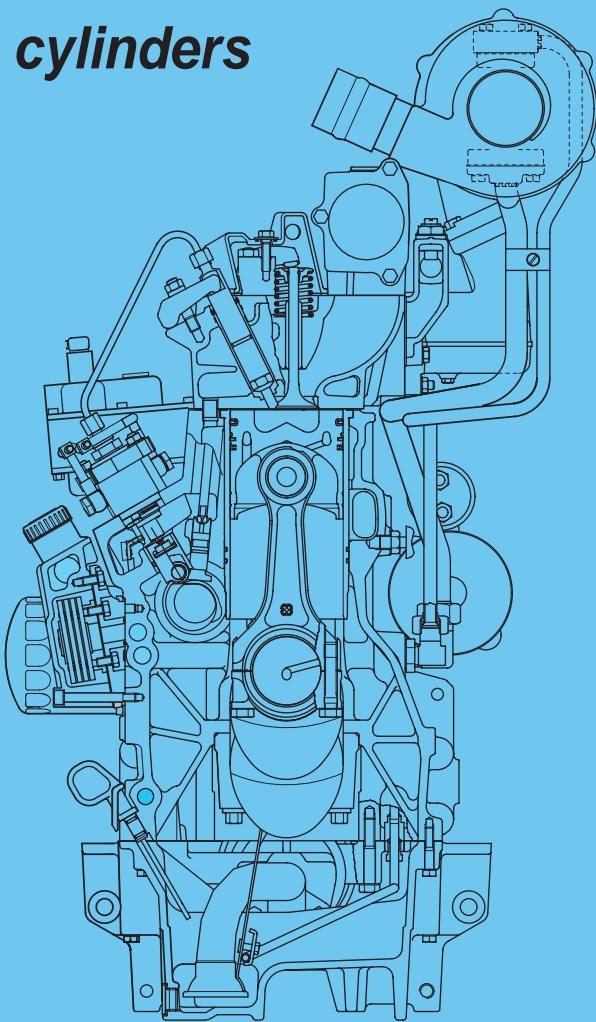

ENGINE EURO 2

SAME DEUTZ-FAHR
ITALIA S.p.A.

SERIE 1000/3-4-6 cylinders

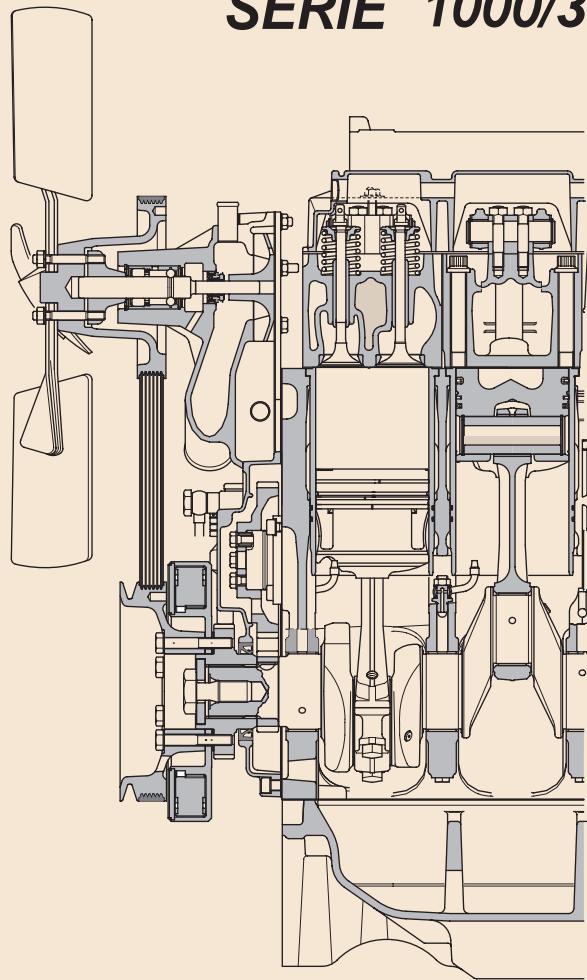

WORKSHOP MANUAL

CONTENTS

IMPORTANT PRELIMINARY INFORMATION.....	1	upper housings	44
HOW TO CONSULT THE MANUAL.....	3	• • 8.1.2 Assembly of the lower housing	49
HOW TO USE AND UPDATE THE MANUAL	4	• • 8.1.3 Adjusting the height of the lever control bush.....	50
LIFTING INSTRUCTIONS.....	5	• • 8.1.5 Assembly of the upper housing	54
STANDARD TIGHTENING TORQUES FOR NUTS AND BOLTS	6	• • 8.1.6 Assembly of the governor housing ..	54
THREADLOCKERS, ADHESIVES, SEALANTS AND LUBRICANTS.....	7	• 8.2 DISASSEMBLY OF THE GOVERNOR WITH L.D.A. VALVE.....	55
SPECIAL TOOLS	9	• • 8.2.1 Separating the upper and lower housings	55
CONVERSION FACTORS	10	• • 8.2.2 Renewal of the membrane.....	56
ENGINE TYPE IDENTIFICATION AND SERIAL NUMBERS.....	11	• • 8.2.3 Completion of the disassembly	57
IDENTIFICATION OF INJECTORS AND INJECTION PUMPS	13	• • 8.2.4 Assembly of the governor with L.D.A. valve.....	59
DETERMINING THE INJECTION ADVANCE ANGLE	14	• 8.3 BENCH ADJUSTMENT OF L.D.A. VALVE.....	61
ENGINE DISASSEMBLY			
1. PRELIMINARY REMOVAL OPERATIONS	15	• • 8.3.1 Adjusting the length of the tie-rod ...	61
2. REMOVAL OF THE COOLING AND INTAKE PIPES	18	• • 8.3.2 Adjusting the spring load	61
3. REMOVAL OF THE CYLINDER HEADS	20	• • 8.3.3 Adjusting the membrane travel	62
• 3.1 Dismantling the cylinder heads	28	• 8.4 FINAL ADJUSTMENTS	62
• 3.2 Dismantling the rocker arm supports	29	• • 8.4.1 Adjusting the fuel flow rate	62
4. REMOVAL AND TESTING OF THE THERMOSTATS.....	30	• • 8.4.2 Calibration for mechanical governors.....	63
• 4.1 REMOVAL	30	• • 8.4.3 Adjusting the maximum speed	64
• 4.2 TESTING THE THERMOSTATS	31	• • 8.4.4 Hunting adjustment.....	64
5. REMOVAL OF THE COOLANT PUMP	32	• • 8.4.5 Adjusting the idle speed	65
• 5.1 3- AND 4-CYLINDER VERSIONS.....	32	• • 8.4.6 Sealing the governor.....	65
• 5.2 6-CYLINDER VERSIONS.....	32	9. ADJUSTMENT OF THE ELECTRONIC ACTUATOR.....	66
6. REMOVAL OF THE UNIT PUMPS, ACTUATOR AND FUEL LIFT PUMP	33	• 9.1 CALIBRATION OF ELECTRONIC ACTUATORS.....	67
7. OVERHAUL OF THE MECHANICAL GOVERNOR DRIVE	38	10. REMOVAL OF THE INJECTION PUMP CONTROL ROD	68
• 7.1 DISASSEMBLY	38	11. REMOVAL AND DISASSEMBLY OF THE HEAT EXCHANGER <i>(For 4- and 6-cylinder versions)</i>	69
• 7.2 ASSEMBLY	40	12. DISMANTLING THE VALVE TIMING DRIVE	70
8. OVERHAUL OF THE MECHANICAL GOVERNOR (STANDARD AND WITH L.D.A.)	44	13. DISMANTLING THE CRANKSHAFT	73
• 8.1. DISASSEMBLY OF THE STANDARD GOVERNOR	44	• 13.1 REMOVAL OF THE HARMONIC BALANCER (4-cylinder versions when fitted)	75
• 8.1.1 Separation of the lower and		• 13.2 OVERHAUL OF THE HARMONIC BALANCER (when fitted).....	75
		• • 13.2.1 Disassembly	75
		• • 13.2.2 Assembly	76
		• 13.3 REMOVAL OF THE CRANKSHAFT	76
		• 13.4 DISMANTLING THE OIL PUMP	79
		• • 13.4.1 3- and 4-cylinder versions	79
		• • 13.4.2 6-cylinder version.....	80

14. REMOVAL OF THE PISTONS AND CYLINDER LINERS	81
• 14.1 SEPARATING THE PISTON-CONNECTING ROD ASSEMBLY	81
15. RENEWAL OF THE REAR CRANKSHAFT OIL SEAL	83
16. TESTS - TECHNICAL DATA AND DIMENSIONS.....	84
• 16.1 CYLINDER HEADS - VALVES - ROCKER ASSEMBLIES.....	84
• • 16.1.1 Inspection and renewal of valve guides.....	84
• • 16.1.2 Renewal of the valve guides	84
• • 16.1.3 Inspecting the valve seats.....	84
• • 16.1.4 Inspecting the valves.....	85
• • 16.1.5 Inspecting the valve springs.....	85
• • 16.1.6 Testing the valve seals.....	86
• • 16.1.7 Checking injector protrusion	86
• • 16.1.8 Renewal of the copper bushes	87
• • 16.1.9 Inspecting the rocker arms and pivot posts.....	87
• • CYLINDER HEADS - VALVE GUIDES - VALVE SEATS	88
• • VALVES - VALVE SPRINGS	89
• • ROCKER ARMS - ROCKER PIVOT POSTS - TAPPETS.....	90
• 16.2 INJECTORS - INJECTION PUMPS	91
• • 16.2.1 Testing the injectors.....	91
• • INJECTOR TECHNICAL DATA - NATURALLY ASPIRATED ENGINES.....	92
• CALIBRATION METHOD	93
• • INJECTOR TECHNICAL DATA - TURBOCHARGED ENGINES	94
• • INJECTOR TECHNICAL DATA - INTERCOOLER ENGINES	96
• 16.3 PISTONS - CONNECTING RODS	98
• • 16.3.1 Inspection of the pistons and piston rings.....	98
• • 16.3.2 Inspecting the connecting rods - gudgeon pins	99
• 16.4 INSPECTION OF THE BIG-END CAP BOLTS100	
• • PISTONS code 0.013.1456.0 (3-4-6 cylinder W engines)	101
• • PISTON RINGS	101
• • PISTONS code 0.012.8912.0 (3- cylinder WT engines).....	102
• • PISTON RINGS	102
• • PISTONS code 0.012.8913.0 (4-6 cylinder WT engines).....	103
• • PISTON RINGS	103
• • PISTONS code 0.012.8483.4/20 (4-6 cylinder WTI engines).....	104
• • PISTON RINGS	104
• • CONNECTING RODS (FOR PISTONS W-WT).....	105
• • CONNECTING RODS (FOR PISTONS WTI).....	106
• 16.5 CRANKSHAFT	107
• • CRANKSHAFT (3-CYLINDER VERSION) ..	109
• • CRANKSHAFT (4-CYLINDER VERSION) ..	110
• • CRANKSHAFT (6-CYLINDER VERSION) ..	111
• 16.6 ENGINE BLOCK - CYLINDER LINERS	112
• • 16.6.1 Engine block.....	112
• • 16.6.2 Inspection of the cylinder liners.....	112
• • ENGINE BLOCK - CYLINDERS.....	114
• 16.7 CAMSHAFT	115
• • CAMSHAFT (13° STATIC ADVANCE).....	116
• • CAMSHAFT (16° STATIC ADVANCE).....	117
• 16.8 TIMING GEARS	118
• • 16.8.1 Removal of the gear shaft	118
• • TIMING GEARS	119
• 16.9 HARMONIC BALANCER (For 4 cylinder engines only).....	120
• • HARMONIC BALANCER	121
• 16.10 FLYWHEEL.....	122
ENGINE ASSEMBLY	
17. FITTING THE PISTON COOLING NOZZLES.....	123
18. FITTING THE CYLINDER LINERS, PISTONS AND CONNECTING RODS.....	124
19. FITTING THE CAMSHAFT-CRANKSHAFT AND CONNECTING ROD BIG-ENDS	126
20. ASSEMBLY OF THE HARMONIC BALANCER (For 4-cylinder engines only, only when fitted)	130
21. REFITTING THE OIL PUMP - SUMP PAN.....	131
• 21.1 3- AND 4-CYLINDER VERSIONS	131
• 21.2 6-CYLINDER VERSION	131
• 21.3 ASSEMBLY OF THE ENGINE OIL SUMP	132
22. CALCULATING THE THICKNESSES OF THE HEAD GASKETS AND REFITTING THE CYLINDERHEADS	133
23. REFITTING THE CYLINDER HEADS	134
24. REFITTING THE INJECTION PUMP CONTROL ROD	136
25. REFITTING THE MECHANICAL GOVERNOR DRIVE AND THE ELECTRONIC GOVERNOR SUPPORT .	137
26. ADJUSTMENT OF THE TIMING GEARS	138
27. VALVE TIMING.....	140
• 27.1 Checking the camshaft timing.....	141
28. TIMING THE INJECTION PUMPS	142
29. REFITTING THE ROCKER ASSEMBLIES	147
30. ADJUSTMENT OF VALVE CLEARANCES - INJECTOR ASSEMBLY	148
• 30.1 Valve clearance adjustment	148
• 30.2 Injector assembly	148
31. FINAL ENGINE ASSEMBLY OPERATIONS	149
32. FINAL ENGINE ASSEMBLY - REAR END	161
33. ENGINE TESTS	164
• 33.1 Initial start-up and oil pressure check	164
• 33.2 Synchronizing the injection pumps.	165
• • 33.2.1 Test.....	165
• • 33.2.2 Angular adjustment of the injection pumps	165

IMPORTANT PRELIMINARY INFORMATION...

⚠ For reasons of clarity, the illustrations in this manual show the engine and its components with safety guards and covers removed, and do not contain any specific indications regarding the safety precautions to be taken; in addition to normal safety precautions and good working practices, it is important to observe the general rules given here below.

- During disassembly and assembly operations, observe all the safety and accident prevention measures prescribed by EEC Directives; in particular, do not use improvised or worn tools, wear fuel and oil resistant gloves, do not allow any spilt oil or grease to remain on the floor - clean it up straight away, wear suitable clothing, shoes with non-slip soles, etc.
- If splashed with oil or fuel, change your clothing and wash thoroughly any contaminated parts of the body.
- Dispose of all lubricants, fuel, gaskets, oil seals and any other items considered as special waste in a proper manner in accordance with the applicable regulations.
- The disassembly, assembly and inspection operations described in this manual refer to engines that have been removed from the vehicle and/or industrial assembly and mounted on a suitable engine stand.
- Before fixing the engine to the stand, ensure that all apertures (intake, exhaust, turbocharger, air compressor, fuel and oil filler holes, etc.) are covered and clean the engine thoroughly. Use steam or pressurized hot water for general cleaning and then paraffin or degreasing agents to remove any particularly stubborn dirt.

After cleaning, dry the engine with a low-pressure air jet (2-3 bar) and protect all machined parts with a thin film of lubricant or anti-corrosion product.

- Before fixing the engine to the stand, remove all accessories that could prevent fixing to the stand and those which would be impossible to remove once the engine is mounted on the stand (flexible coupling, starter motor, flywheel, flywheel cover, fan, rear oil seal).
- The disassembly and assembly operations described in this manual refer to a 4-cylinder engine; except for the specific shape and dimensions of a few external parts (e.g., rocker covers, inlet and exhaust manifolds, fans, etc.) and the presence of certain internal assemblies (e.g. harmonic balancer), the instructions given apply to all versions.

Any differences regarding calibration data or parts are indicated with the notes «For versions with..... cylinders only» or «W - WT - WTI versions».

- The engine type codes indicate:

W =water cooled

T =turbocharger

I =Intercooler

N° =engine version

- Before disassembly of engines for overhaul of the injection pump, injectors or cams, first determine the basic technical data (engine type, serial number, injection pump type, injector type, static injection advance angle) by following the procedures indicated in the first pages of this manual and referring to the section «TECHNICAL DATA AND DIMENSIONS».

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$