

SERVICE MANUAL

Boomer™ 46D CVT

Boomer™ 54D CVT

Tier 4B (final)

Compact Tractor

Part number 47851943

1st edition English

February 2016





SERVICE MANUAL

Boomer™ 46D CVT
Boomer™ 54D CVT

Link Product / Engine

Product	Market Product	Engine
Boomer™ 46D CVT Boomer 46D, CVT, TIER 4B (FINAL), ROPS	North America	R 753 IE4
Boomer™ 46D CVT Boomer 46D, CVT, TIER 4B (FINAL), Cab	North America	R 753 IE4
Boomer™ 54D CVT Boomer 54D, CVT, TIER 4B (FINAL), ROPS	North America	R 753 IE4
Boomer™ 54D CVT Boomer 54D, CVT, TIER 4B (FINAL), Cab	North America	R 753 IE4

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.110] Balancer and damper	10.2
[10.202] Air cleaners and lines	10.3
[10.400] Engine cooling system	10.4
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.5
Transmission.....	21
[21.504] Continuously Variable Transmission (CVT)	21.1
Four-Wheel Drive (4WD) system	23
[23.101] Mechanical control	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.310] Final drives	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.120] Central Power Take-Off (PTO)	31.3
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.120] Mechanical service brakes.....	33.2
Hydraulic systems.....	35

[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.204] Remote control valves	35.3
[35.300] Reservoir, cooler, and filters.....	35.4
Steering.....	41
[41.200] Hydraulic control components.....	41.1
[41.206] Pump	41.2
[41.216] Cylinders	41.3
Cab climate control	50
[50.100] Heating.....	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.024] Transmission control system.....	55.2
[55.100] Harnesses and connectors.....	55.3
[55.201] Engine starting system.....	55.4
[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.404] External lighting	55.7
[55.408] Warning indicators, alarms, and instruments	55.8
[55.518] Wiper and washer system.....	55.9
[55.640] Electronic modules	55.10
[55.DTC] FAULT CODES.....	55.11
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.116] Fenders and guards.....	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$