

# SERVICE MANUAL

**E35B**

**Tier 4B (final)**

**Compact Hydraulic Excavator**

*PIN NETN36001(PX17-40001) and above*

**Part number S5HX001IE01**

1<sup>st</sup> edition English

October 2014





# **SERVICE MANUAL**

**E35B Cab TIER 4B (FINAL)  
E35B Canopy TIER 4B (FINAL)**

# Contents

---

## INTRODUCTION

Machine completion and equipment.....	05
[05.102] Machine completion.....	05.1
Engine.....	10
[10.202] Air cleaners and lines.....	10.1
[10.216] Fuel tanks.....	10.2
[10.254] Intake and exhaust manifolds and muffler.....	10.3
[10.400] Engine cooling system.....	10.4
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.304] Combination pump units.....	35.3
[35.352] Hydraulic swing system.....	35.4
[35.353] Hydraulic travel system.....	35.5
[35.357] Pilot system.....	35.6
[35.359] Main control valve.....	35.7
[35.525] Auxiliary hydraulic valves and lines.....	35.8
[35.736] Boom hydraulic system.....	35.9
[35.737] Dipper hydraulic system.....	35.10
[35.738] Excavator and backhoe bucket hydraulic system.....	35.11
[35.739] Swing arm hydraulic system.....	35.12
[35.741] Dozer blade cylinders.....	35.13
Frames and ballasting.....	39
[39.101] Upper frame.....	39.1
Tracks and track suspension.....	48
[48.100] Tracks.....	48.1

[48.130] Track frame and driving wheels .....	48.2
[48.134] Track tension units .....	48.3
[48.138] Track rollers .....	48.4
<b>Cab climate control .....</b>	<b>50</b>
[50.200] Air conditioning.....	50.1
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.011] Fuel tank system .....	55.2
[55.012] Engine cooling system .....	55.3
[55.036] Hydraulic system control .....	55.4
[55.100] Harnesses and connectors.....	55.5
[55.201] Engine starting system .....	55.6
[55.301] Alternator.....	55.7
[55.302] Battery.....	55.8
[55.404] External lighting .....	55.9
[55.408] Warning indicators, alarms, and instruments .....	55.10
[55.512] Cab controls.....	55.11
[55.514] Cab lighting .....	55.12
[55.518] Wiper and washer system.....	55.13
[55.525] Cab engine controls.....	55.14
[55.640] Electronic modules .....	55.15
<b>Booms, dippers, and buckets .....</b>	<b>84</b>
[84.100] Bucket.....	84.1
[84.114] Boom pivoting support .....	84.2
[84.910] Boom .....	84.3
[84.912] Dipper arm .....	84.4
<b>Dozer blade and arm.....</b>	<b>86</b>
[86.110] Dozer blade .....	86.1

Platform, cab, bodywork, and decals .....	90
[90.150] Cab .....	90.1
[90.151] Cab interior .....	90.2

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$