2019 HARLEY-DAVIDSON® SERVICE MANUAL SUPPLEMENT: FLHXSE MODEL

- Foreword
 - Foreword
 - <u>General</u>
 - <u>How To Use Your Service Manual Supplement</u>
 - <u>Preparation For Service</u>
 - <u>Service Bulletins</u>
 - <u>Use Genuine Replacement Parts</u>
 - <u>Warnings and Cautions</u>
 - <u>Product References</u>
 - Product Registered Marks
 - H-D U.S.A., LLC Trademark Information
 - Contents
- Maintenance
 - FASTENER TORQUE VALUES
 - Fastener Torque Values in this Chapter
 - MAINTENANCE SCHEDULE
 - <u>General -[JPN]</u>
 - AIR FILTER ELEMENT
 - <u>General</u>
 - Remove
 - Install
 - LUBRICANTS
 - <u>Change and Check Lubricants</u>
 - REAR SUSPENSION ADJUSTMENTS
 - Manual Suspension Preload
- Chassis
 - FASTENER TORQUE VALUES
 - Fastener Torque Values in this Chapter
 - SPECIFICATIONS: CHASSIS
 - <u>General</u>
 - Vehicle Identification Number (VIN)
 - <u>Vehicle Identification Number (VIN)</u>
 - FRONT AXLE COVERS
 - Replacement
 - WHEELS
 - Front Wheel Service
 - <u>Tire Pressure Monitoring System (TPMS)</u>
 - HANDLEBAR
 - <u>Removal and Installation</u>
 - Hand grips
 - <u>Right Hand Grip</u>
 - Left Hand Grip
 - FOOTBOARDS AND CONTROLS
 - <u>Rider Footboards</u>
 - <u>Shift Levers</u>
 - <u>Rear Brake Pedal Pad</u>
 - <u>Passenger Footrests</u>
 - SEAT
 - Seat and Pillion
 - SADDLEBAGS
 - Remove
 - Install
 - Latch Handle Removal and Installation

REAR FENDER

- Preparing Motorcycle
- <u>Removal</u>
- Installation
- Final Assembly
- <u>Seat Pad Replacement</u>
- REAR FASCIA
 - <u>Removal</u>
 - Installation
- LICENSE PLATE LAMP/BRACKET ASSEMBLY
 - <u>Removal</u>
 - <u>Installation</u>
- Engine
 - SPECIFICATIONS: ENGINE
 - <u>General</u>
 - Manufacturing Tolerances
 - SERVICE WEAR LIMITS
 - <u>General</u>
 - Troubleshooting
 - <u>General</u>
- Fuel System
 - FASTENER TORQUE VALUES
 - Fastener Torque Values in this Chapter
 - AIR CLEANER BACKPLATE ASSEMBLY
 - <u>General</u>
 - Remove
 - Install
 - MUFFLER END CAP
 - Replacement
- Drive
 - CLUTCH
 - <u>No Unique Content</u>
- Transmission
 - SPECIFICATIONS: TRANSMISSION
 - <u>General</u>
- Electrical
 - FASTENER TORQUE VALUES
 - Fastener Torque Values in this Chapter
 - ELECTRICAL PROTECTION
 - Fuses and Relays
 - FUEL TANK CONSOLE LAMP
 - Lighted Fuel Tank Emblem
 - LED TURN SIGNAL LAMPS
 - <u>LED Assembly</u>
 - Rear Lighting
 - Tail Lamp Lens: Canadian Models
 - <u>Rear Fascia Lamp</u>
 - Fork Lock
 - Fork Lock
 - DASH PANEL AND SWITCHES
 - Remove
 - Installation
 - RADIO SOFTWARE UPDATE
 - <u>General</u>
 - <u>Updating Radio Software</u>
 - Radio
 - <u>General</u>
 - <u>Hidden Antenna</u>

- <u>XM Satellite Radio Module</u>
- XM Antenna and Bracket
- <u>XM Radio Activation</u>
- Wireless Headset Interface Module (WHIM)
- Audio Amplifier
 - <u>Amplifier Removal</u>
 - Installation
- Premium Sound System
 - Front Fairing Speakers
 - <u>Fairing Lower Speakers</u>
 - <u>Saddlebag Speakers</u>
 - <u>Rear Amplifier</u>
 - <u>Saddlebag Amplifier</u>
 - Saddlebag Audio Harness Removal and Installation
- POWER LOCKS
 - Actuator: Saddlebag
 - <u>KEY FOB</u>
 - <u>Relay Bracket</u>
- Initial Diagnostics
 - Description and Operation
 - Symptoms
- No Vehicle Power, DTC U0140
 - Description and Operation
 - No Vehicle Power, DTC U0140
- Power Lock Diagnostics
 - Description and Operation
 - DTC <u>B2188</u>
 - <u>DTC B2193</u>
 - <u>DTC B2231</u>
 - Power Locks Inoperative
 - <u>DTC B2233</u>
 - Power Locks Dash Switch Inoperative
- REAR TURN SIGNAL DIAGNOSTICS
 - <u>Description and Operation</u>
 - <u>DTC B2151</u>
 - <u>DTC B2153, B2154</u>
 - DTC B2156
 - DTC B2158, B2159
- STOP LAMP DIAGNOSTICS
 - Description and Operation
 - <u>Stop Lamp Inoperative</u>
 - <u>Stop Lamp Always On, DTC B2223</u>
 - <u>DTC B2161</u>
 - DTC B2163, B2164
- RUNNING LAMP DIAGNOSTICS
 - Description and Operation
 - <u>Running Lamps Inoperative</u>
 - DTC B2168, B2169
 - <u>License Plate Lamp Inoperative</u>
- BACKLIT HAND CONTROLS INOPERATIVE
 - <u>Description and Operation</u>
 - Backlit Hand Control Buttons Inoperative
- TPMS DIAGNOSTICS
 - Description and Operation
 - DTC C0077
 - DTCs C2000, C2001, C2003, C2004
 - DTCs C2006, C2007
- AUDIO VOLTAGE DIAGNOSTICS

- Description and Operation
- <u>DTC B1401</u>
- DTC B1402
- RADIO DIAGNOSTICS
 - <u>Description and Operation</u>
 - <u>DTC B1337</u>
 - <u>DTC B1339</u>
 - <u>DTC B1340</u>
 <u>DTC D1245</u>
 - <u>DTC B1345</u>
 <u>DTC D1247</u>
 - <u>DTC B1347</u>
 <u>DTC D1248</u>
 - <u>DTC B1348</u>
 DTC B1241
 - <u>DTC B1341</u>
 DTC B1343
 - <u>DTC B1343</u>
 <u>DTC D1244</u>
 - DTC B1344
 DTC B1349
 - DIC B1349
 DTC B1251
 - <u>DTC B1351</u>
 DTC B1252
 - <u>DTC B1352</u>
- AUDIO DIAGNOSTICS AMPLIFIER 1
 - Description and Operation
 - DTC B1403, B1404
 - <u>DTC B1410</u>
 - <u>DTC B1411</u>
 - <u>DTC B1412</u>
 - <u>DTC B1413</u>
 - <u>DTC B1420</u>
 - <u>DTC B1421</u>
 - <u>DTC B1422</u>
 - <u>DTC B1423</u>
 - <u>DTC B1430</u>
 <u>DTC B1421</u>
 - <u>DTC B1431</u>
 DTC B1422
 - <u>DTC B1432</u>
 <u>DTC B1433</u>
 - DTC B1433
 DTC B1440
 - DTC B1440
 DTC B1441
 - DTC B1441
 DTC B1442
 - DTC D1442
 DTC B1443
 - <u>All Amplifier 1 Speakers Inoperative</u>
 - Left Fairing Woofer Speaker Low or No Audio
 - Left Fairing Tweeter/Mid Speaker Low or No Audio
 - Both Left Speakers Low or No Audio
 - <u>Right Fairing Woofer Speaker Low or No Audio</u>
 - <u>Right Fairing Tweeter/Mid Speaker Low or No Audio</u>
 - Both Right Speakers Low or No Audio
- AUDIO DIAGNOSTICS AMPLIFIER 2
 - Description and Operation
 - DTC B1403, B1404
 - <u>DTC B1410</u>
 - <u>DTC B1411</u>
 - DTC B1412
 - DTC B1413
 - DTC B1420
 - DTC B1421
 - DTC B1422
 - DTC B1423
 - <u>DTC B1430</u>
 - <u>DTC B1431</u>
 - <u>DTC B1432</u>
 - DTC B1433

- <u>DTC B1440</u>
- <u>DTC B1441</u>
- <u>DTC B1442</u>
- <u>DTC B1443</u>
- <u>All Amplifier 2 Speakers Inoperative</u>
- Left Saddlebag Woofer Speaker Low or No Audio
- Left Saddlebag Tweeter/Mid Speaker Low or No Audio
- Both Left Speakers Low or No Audio
- AUDIO DIAGNOSTICS AMPLIFIER 3
 - <u>Description and Operation</u>
 - DTC B1403, B1404
 - <u>DTC B1410</u>
 - <u>DTC B1411</u>
 - DTC B1412
 - <u>DTC B1413</u>
 - DTC B1420
 DTC D1421
 - <u>DTC B1421</u>
 DTC B1422
 - <u>DTC B1422</u>
 DTC B1422
 - <u>DTC B1423</u>
 <u>DTC B1420</u>
 - DTC B1430
 DTC B1431
 - DTC B1431
 DTC B1432
 - DTC B1432
 DTC B1433
 - DTC B1433
 DTC B1440
 - DTC B1440
 DTC B1441
 - DTC B1441
 DTC B1442
 - DTC B1442
 DTC B1443
 - <u>All Amplifier 3 Speakers Inoperative</u>
 - Right Saddlebag Woofer Speaker Low or No Audio
 - <u>Right Saddlebag Tweeter/Mid Speaker Low or No Audio</u>
 - Both Right Speakers Low or No Audio
- WIRELESS HEADSET DIAGNOSTICS
 - Description and Operation
 - DTC U0185, U1405
 - DTC B1367, U1302
 - Loss of Wireless Headsets
 - <u>Software Update Fails</u>
 - Front Microphone Inoperative
 - <u>Rear Microphone Inoperative</u>
 - Front Headset Right Speaker Inoperative
 - Front Headset Left Speaker Inoperative
 - <u>Rear Headset Right Speaker Inoperative</u>
 - <u>Rear Headset Left Speaker Inoperative</u>
 - Intermittent Volume Level Front or Rear Headsets
- Wiring
 - WIRING DIAGRAMS
 - <u>General</u>
 - Wiring Diagrams
 - WIRE HARNESS CONNECTORS
 - <u>General</u>
 - <u>Connector End Views</u>
 - <u>Connector Locations</u>
 - Tyco HDSC Sealed Connector Repair
 - <u>Repair</u>
- Reference
 - GLOSSARY
 - Acronyms and Abbreviations
 - METRIC CONVERSION

It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$