

SERVICE MANUAL

Cursor 11 Tier 4B (final) and Stage IV Engine

See the following page for engine model numbers



SERVICE MANUAL

**F3GFE613A*B001
F3GFE613B*B001**

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.101] Cylinder heads	10.2
[10.102] Pan and covers	10.3
[10.103] Crankshaft and flywheel.....	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.106] Valve drive and gears	10.6
[10.110] Balancer and damper	10.7
[10.114] Pump drives	10.8
[10.206] Fuel filters	10.9
[10.218] Fuel injection system.....	10.10
[10.250] Turbocharger and lines.....	10.11
[10.254] Intake and exhaust manifolds and muffler	10.12
[10.304] Engine lubrication system.....	10.13
[10.400] Engine cooling system	10.14
[10.408] Oil cooler and lines.....	10.15
[10.414] Fan and drive	10.16
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment	10.17
Electrical systems	55
[55.010] Fuel injection system.....	55.1
[55.012] Engine cooling system	55.2
[55.014] Engine intake and exhaust system.....	55.3
[55.015] Engine control system.....	55.4
[55.202] Cold start aid	55.5
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.6



INTRODUCTION

Contents

INTRODUCTION

Foreword - Important notice regarding equipment servicing	3
Safety rules	4
Safety rules - Ecology and the environment	5
Torque - Minimum tightening torques for normal assembly	6
Basic instructions - Shop and assembly	11

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$