

# SERVICE MANUAL

## Cursor<sup>®</sup> 9 Tier 4A (interim) and Stage IIIB Engine

*See the following page for engine model numbers*



## **SERVICE MANUAL**

**F2CFE613A\*A, F2CFE613C\*A, F2CFE613E\*A, F2CFE613F\*A, F2CFE613H\*A,  
F2CFE613J\*A, F2CFE613L\*A026, F2CFE613L\*A, F2CFE613N\*A,  
F2CFE613P\*A, F2CFE613R\*A, F2CFE614A\*A, F2CFE614B\*A, F2CFE614C\*A,  
F2CFE614D\*A, F2CFE614E\*A**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.120] Engine brake .....	10.2
[10.102] Pan and covers .....	10.3
[10.106] Valve drive and gears .....	10.4
[10.101] Cylinder heads .....	10.5
[10.105] Connecting rods and pistons.....	10.6
[10.103] Crankshaft and flywheel.....	10.7
[10.110] Balancer and damper .....	10.8
[10.114] Pump drives .....	10.9
[10.210] Lift pump and lines .....	10.10
[10.206] Fuel filters .....	10.11
[10.218] Fuel injection system.....	10.12
[10.250] Turbocharger and lines.....	10.13
[10.254] Intake and exhaust manifolds and muffler .....	10.14
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.15
[10.400] Engine cooling system .....	10.16
[10.414] Fan and drive .....	10.17
[10.304] Engine lubrication system.....	10.18
[10.408] Oil cooler and lines.....	10.19
Electrical systems.....	55
[55.015] Engine control system.....	55.1
[55.201] Engine starting system.....	55.2
[55.301] Alternator.....	55.3
[55.010] Fuel injection system.....	55.4
[55.014] Engine intake and exhaust system.....	55.5

[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.6
[55.012] Engine cooling system .....	55.7
[55.013] Engine oil system .....	55.8



It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$