

1150K CRAWLER Repair Manual Bur 87364101 Table of Contents

Description	Section Number	Publication Form Number
General		Tab 1
Section Index - General		5-4120
Standard Torque Specifications	1001	8-71603
Fluids and Lubricants	1002	5-4130
Metric Conversion Chart	1003	7-52590
Engine		Tab 2
Section Index- Engine		5-4140
Engine and Radiator Removal and Installation	2000	5-4150
After Cooler	2003	5-4160
For Engine Repair, see the Engine Repair Manual		87519803
Fuel System		Tab 3
Section Index- Fuel System		5-4170
For Fuel System Repair, see the Engine Repair Manual		87519803
Electrical		Tab 4
Section Index - Electrical		5-4180
Removal and Installation of Electrical Components	4001	5-4190
Electrical Specifications and Troubleshooting	4002	5-4200
Batteries	4003	6-47960
Instrument Cluster	4005	5-4210
Tracks		Tab 5
Section Index - Tracks		5-4220
Undercarriage Fundamentals	5001	5-4230
Inspection of Track Components	5502	5-4240
Case Lubricated Track	5504	5-4250
Track Frame and Suspension	5506	5-4260
Idler, Track Adjuster, and Recoil Housing	5508	5-4270
Sprocket	5509	5-4280
Track Roller	5511	5-4290

1150K CRAWLER Repair Manual Bur 87364101

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Power Train		Tab 6
Section Index - Power Train		5-4300
Hydrostatic Pumps and Motors System Overview	6000	5-4310
Removal and Installation of Hydrostatic Pumps and Motors	6001	5-4320
Transmission Specifications, Pressure Checks, Troubleshooting and Schematic	6002	5-4330
Transmission Controller	6003	5-4340
Final Drives	6007	5-4350
Brakes		Tab 7
Section Index - Brakes		5-4360
Removal and Installation of Brake Components	7001	5-4370
Brake System Troubleshooting	7002	5-4380
Hydraulics		Tab 8
Section Index - Hydraulics		5-4390
Removal and Installation of Hydraulic Components	8001	5-4400
Hydraulic System Specifications, Troubleshooting and Pressure Checks	8002	5-4410
Cleaning the Hydraulic System	8003	6-48180
Equipment Pump	8004	5-4420
Equipment Control Valve	8005	5-4430
Cylinders	8006	5-4440
Accumulator	8010	5-4450
Mounted Equipment		Tab 9
Section Index - Mounted Equipment		5-4460
Pedals and Levers	9001	5-4470
Air Conditioning Troubleshooting and System Checks For System With HFC 134a Refrigerant	9003	5-4480
Air Conditioning System Service	9004	5-4490
Removal and Installation of Heater and Air Conditioning System Components	9005	5-4500
Air Conditioning Compressor and Clutch	9006	6-48290
Dozer Blade	9007	5-4510
Rollover Protective Structure (ROPS) Cab Structural Frame (CSF)	9008	5-4520
Air and Mechanical Suspension Seats and Seat Belts	9009	5-4530
Ripper	9010	5-4540
Schematic Set		
Hydraulic and Electrical Schematics	In Rear Pocket	5-4550

SECTION INDEX

GENERAL

Section Title	Section Number
General Torque Specifications.....	1001
Fluid and Lubricants	1002
Metric Conversion Chart	1003

Section 1001

GENERAL TORQUE SPECIFICATIONS

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$