



Shop Manual

DL420A Wheel Loader

Serial Number 10001 and Up

DOOSAN and the DOOSAN logo are registered trademarks of DOOSAN Corporation in the United States and various other countries around the world.



950106-00817E

June 2012

Table of Contents

Safety

Wheel Loader Safety	SP002667
---------------------------	----------

Specifications

Specification for DL420A	SP002704
--------------------------------	----------

General Maintenance

General Maintenance Instructions	SP002454
Standard Torques	SP002404

Drivetrain

Transmission and Torque Converter	SP002705
Transmission Error Codes (ZF)	SP002673
Front Axle (ZF-MT-L 3105 II)	SP002402
Rear Axle (ZF-MT-L 3095 II)	SP002474
Driveshaft	SP002674

Brake

Service Brake	SP002727
Brake Supply Valve	SP002728
Parking Brake	SP002729
Brake Pedal Valve	SP000123
Accumulator	SP002677

Steering

Power Steering System	SP002730
Steering Unit	SP002731
Flow Amplifier	SP002434
Emergency Steering	SP002018

Frame

Articulation Center	SP002467
Counterweight.....	SP000130

Tank

Oil Tank	SP002732
Fuel Tank.....	SP002733

Hydraulics

Cylinders.....	SP001027
Main Pump.....	SP002734
Main Control Valve	SP002735
Load Isolation System	SP002736
Fan Drive Hydraulic Motor	SP002737
Unloader Valve	SP002738
Pilot System.....	SP002739
Hydraulic Schematic DL420A.....	SP002740

Electrical System

Air Conditioner	SP000172
Electrical System	SP002712
Electrical Schematic (DL420A)	SP002742

Safety

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$