

DX700LC

Shop Manual

950106-00013E

Serial Number 5001 and Up

Doosan reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

DX700LC

Serial Number 5001 and Up

Pub.No. DX700LC

Product Label



Instructions

**Trim Out The Label Along
The Lines And Insert Into
Pocket On The Binder Spine**

Table of Contents

Safety

Track Excavator Safety.....	SP002135
-----------------------------	----------

Specifications

Specification for DX700LC.....	SP002136
--------------------------------	----------

General Maintenance

General Maintenance Procedures.....	SP000016
Standard Torques.....	SP000813

Upper Structure

Cabin	SP002148
Counterweight.....	SP002141
Fuel Tank.....	SP002142
Fuel Transfer Pump (Opt).....	SP002143
Swing Bearing.....	SP002165
Swing Reduction Gear.....	SP002149

Lower Structure and Chassis

Track Assembly	SP002146
----------------------	----------

Engine and Drive Train

Engine.....	SP002261
Drive Coupling (Main Pump).....	SP000026

Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment	SP002166
Accumulator.....	SP000028
Center Joint (Swivel).....	SP002167

Cylinders.....	SP002137
Swing Motor.....	SP002168
Travel Motor.....	SP002145
Travel Reduction Gear.....	SP002144
Main Pump.....	SP002169
Regulator of Main Pump.....	SP002181
Gear Pump for Pilot.....	SP000033
Main Control Valve.....	SP002171
Remote Control Valve (Work Lever / Joystick).....	SP002174
Travel Control Valve (with Damper).....	SP002172
Fan Motor (Fan Cooling Drive).....	SP002175
Fan Pump (Fan Cooling Drive).....	SP002176
Solenoid Valve Assembly.....	SP001622
Breaker EPPR Valve (Opt).....	SP000192
Hydraulic Schematic (DX700LC).....	SP002147

Electrical System

Electrical System.....	SP002140
Electrical Schematic (DX700LC).....	SP002189

Attachments

Boom and Arm.....	SP002138
Bucket.....	SP002139
Auto Grease System.....	SP002216

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$