

HINO DIESEL ENGINE WORKSHOP MANUAL

J05E-TJ



(Shovel)

KSS-Z4J5-001E

2012.3

FOREWORD

This workshop manual has been prepared to provide information regarding repair procedures on Hino engine J05E-TJ Series.

The combination of machine models and specifications described in this manual is as follows.

Engine models	Machine model
J05ETJ-KSDM	SK200
J05ETJ-KSDA	SK225SR SK235SR

When making any repairs on your vehicle, be careful not to be injured through improper procedures.

All information and specifications in this manual are based upon the latest product information available at the time of printing.

Hino Motors reserves the right to make changes at any time without prior notice.

Hino Motors, Ltd.

GENERAL	1
STANDARD VALUE	2
PARTS TO BE PREPARED	3
ENGINE MOUNTING/DISMOUNTING	4
FUEL SYSTEM	5
EMISSION CONTROL	6
ELECTRICAL	7
INTAKE	8
ENGINE MECHANICAL	9
EXHAUST	10
COOLING	11
LUBRICATION	12
STARTING AND CHARGING	13
TURBOCHARGER	14
AIR COMPRESSOR	15
FAILURE DIAGNOSIS FOR EACH ENGINE STATUS	16
ENGINE DIAGNOSIS CODE	17

For your information:

This documentation does not contain any descriptions in regard to the hatched part

"15. Air Compressors".

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$