



Syringe Pump HP-30

Service Manual

Before maintaining the HP-30 syringe pump, please read this Manual carefully and follow the safety precautions and maintenance instructions contained herein.

MEDCAPTAIN MEDICAL TECHNOLOGY CO., LTD.

Intellectual Property and Statement

MEDCAPTAIN MEDICAL TECHNOLOGY CO., LTD. (hereinafter referred to as “MEDCAPTAIN”) owns the intellectual property rights to this Manual.

© Copyright 2017-2018 MEDCAPTAIN MEDICAL TECHNOLOGY CO., LTD. All rights reserved.

No part of this Manual shall be reproduced, amended or translated by any individual or organization without the written permission of MEDCAPTAIN.

MEDCAPTAIN and its Chinese name,  and  are trademarks or registered trademarks owned by MEDCAPTAIN.

Statement

MEDCAPTAIN reserves the final interpretation right to this Manual.

To provide accurate and efficient product services, MEDCAPTAIN shall have the right to change the contents of this Manual without prior notice under the premise of complying with medical device regulations. The latest version accumulates all changes made in earlier versions.

MEDCAPTAIN is responsible for the safety, reliability and performance of this product, only if:

- The product is used in accordance with this Manual.
- All installations, replacements, tests, modifications and repairs are conducted by professionals authorized by MEDCAPTAIN.
- All replacement components and accessories are provided by MEDCAPTAIN.
- All maintenance service records are kept.

Version Information

V3.0

- Issued on: 2020-01

Contents

Contents

STATEMENT	2
VERSION INFORMATION	2
1 IMPORTANT INFORMATION.....	7
1.1 SERVICE PERSONNEL	7
1.2 LIMITATIONS OF THE SERVICE MANUAL	7
1.3 TECHNICAL SAFETY CHECKS (TSC)	7
1.4 DEVICE MAINTENANCE AND INSPECTION	7
1.5 QUALITY CONTROL.....	8
1.6 SAFETY WARNINGS	8
1.7 ACRONYMS AND ABBREVIATIONS	8
1.8 LIST OF SYMBOLS	9
1.9 CONTACT INFORMATION.....	10
2 SYSTEM OVERVIEW	11
2.1 INTENDED USE.....	11
2.2 COMPOSITION	11
2.3 APPEARANCE	11
ACCESSORIES	12
3 PRODUCT SPECIFICATIONS	12
4 HARDWARE	16
4.1 CIRCUIT BLOCK DIAGRAM.....	16
4.2 POWER BOARD.....	18
4.3 MAIN CONTROL BOARD.....	18
4.4 HP-30 KEY PAD BOARD	19
4.5 HP-30 CLUTCH BOARD.....	20
4.6 MOTOR SPEED DETECTING BOARD.....	20
4.7 HP-30 NUT DETECTION BOARD.....	21
4.8 PRESSURE SENSOR.....	21
4.9 DISTANCE POTENTIOMETER.....	22
4.10 SYRINGE SIZE POTENTIOMETER	22
4.11 BATTERY PACK.....	22
5 SENSOR INFORMATION	23

Contents

5.1	SENSOR INFORMATION TEST.....	23
6	MAINTENANCE	25
6.1	OVERVIEW	25
6.2	PERIODIC MAINTENANCE.....	25
6.3	BATTERY MAINTENANCE.....	25
6.3.1	<i>Checking the internal battery.</i>	25
6.3.2	<i>Remove an internal battery.</i>	26
6.3.3	<i>Install the internal battery.</i>	26
7	CLEANING AND DISINFECTION	27
7.1	PREPARATIONS	27
7.2	CLEANING.....	27
7.3	DISINFECTION.....	28
7.4	AIR DRYING AND TRANSPORTATION	29
8	CALIBRATION	30
8.1	TOUCH SCREEN CALIBRATION	30
8.2	SYRINGE SIZE POTENTIOMETER CALIBRATION	30
8.3	DISTANCE POTENTIOMETER CALIBRATION	30
8.4	CLAW ANGLE SENSOR CALIBRATION	30
8.5	CLUTCH POTENTIOMETER CALIBRATION	31
8.6	PRESSURE SENSOR CALIBRATION	31
8.7	SYRINGE ACCURACY CALIBRATION	31
9	ALARMS AND TROUBLESHOOTING.....	34
9.1	ALARM LEVELS	34
9.2	FAULTS AND TROUBLESHOOTING	35
9.3	SYRINGE PUMP FAULTS AND TROUBLESHOOTING	36
9.4	SYSTEM FAULTS AND TROUBLESHOOTING.....	36
9.5	CHECK AFTER REPAIR.....	40
10	DISASSEMBLY AND ASSEMBLY	41
10.1	DISMANTLING THE LOWER SHELL SMALL COVER PLATE FOR UPGRADE AND LOWER SHELL SCREWS	41
10.2	DISMANTLING THE UPPER SHELL AND BATTERY	42
10.3	DISMANTLING THE MIDDLE PLATE AND LOWER SHELL.....	43
10.4	DISMANTLING THE TRIP POTENTIOMETER.....	44

Contents

10.5	DISMANTLING THE SPECIFICATION POTENTIOMETER	45
10.6	DISMANTLING THE DRIVE ASSEMBLY AND MIDDLE PLATE ASSEMBLY	46
10.7	DISMANTLING THE PUMP DOOR ASSEMBLY AND MIDDLE PLATE ASSEMBLY	47
10.8	DISMANTLING THE HP-30 SCREEN ASSEMBLY	48
10.9	DISMANTLING THE HOLDER	49
10.10	DISMANTLING THE DRIVE HEAD BOARD, CLAW MOTOR, AND PRESSURE SENSOR	51
10.11	DISMANTLING THE NUT DISPLACEMENT DETECTION BOARD AND ITS CONNECTION FFC, CLUTCH MOTOR, AND DRIVE HEAD BOARD CONNECTION FFC.....	53
10.12	DISMANTLING THE SPEED MEASURING BOARD AND ITS CONNECTION FFC, SYNCHRONOUS COG BELT, AND MAIN MOTOR	56
10.13	DISMANTLING THE AC-DC BOARD AND MICRO USB BOARD	57
10.14	DISMANTLING THE REAR VERTICAL SHELL ASSEMBLY, POWER SOCKET, AND LOUDSPEAKER 58	
10.15	DISMANTLING THE MAIN PCBA	60
10.16	DISMANTLING THE FASTENER ASSEMBLY.....	61
10.17	ASSEMBLY	61
11	LIST OF SPARE PARTS.....	63
12	SOFTWARE UPGRADE	72
12.1	SOFTWARE PROGRAMMING TOOLS	72
12.2	LIST OF EXECUTABLE FILES FOR SOFTWARE PROGRAMMING	72
12.3	UPGRADE PROCEDURE.....	72
	APPENDIX I TEST EQUIPMENT AND SPECIAL TOOLS	76
	APPENDIX II CHECKLIST FOR TECHNICAL SAFETY CHECK (TSC)-EVERY 24 MONTHS.....	78
	<i>Hospital:</i> 78	
	<i>Department:</i>	78
	<i>Contact person:</i>	78
	<i>Phone:</i> 78	
	<i>Model:</i> 78	
	<i>SN:</i> 78	
	APPENDIX III CHECKS AFTER REPAIR.....	81
	<i>Hospital:</i> 81	
	<i>Department:</i>	81
	<i>Contact person:</i>	81
	<i>Phone:</i> 81	

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$