



FUSO

2005 SERVICE MANUAL ALL MODELS



FE FG FK FM



FE.FG

SERVICE MANUAL

2005 Model

FOREWORD

This Service Manual contains maintenance and repair methods for the Mitsubishi Fuso Truck FE. FG Series. Read this manual carefully as an aid in providing correct, efficient maintenance. Please note that the information and specifications contained within this manual may change without notice. This is due to product modifications and continued vehicle improvements that are made throughout the model years. Should you encounter any discrepancy in the information provided, please do not hesitate to contact your nearest Mitsubishi Fuso Dealer or Mitsubishi Fuso Truck of America, Inc.

May 2004

GENERAL	00
MAINTENANCE SCHEDULE	01
ENGINE.....	11
LUBRICATION.....	12
FUEL AND ENGINE CONTROL.....	13A
ELECTRONICALLY CONTROLLED FUEL SYSTEM	13E
COOLING.....	14
INTAKE AND EXHAUST	15
EMISSION CONTROL	17
CLUTCH.....	21
MANUAL TRANSMISSION	22
AUTOMATIC TRANSMISSION.....	23
TRANSFER.....	24
PROPELLER SHAFT	25
FRONT AXLE	
<FE>	26A
<FG>.....	26B
REAR AXLE.....	27
WHEEL AND TIRE	31
FRONT SUSPENSION	33
REAR SUSPENSION.....	34
BRAKE.....	35A
ANTI-LOCK BRAKE SYSTEM.....	35E
PARKING BRAKE	36
STEERING	37
FRAME.....	41
CAB.....	42
DOOR.....	43
EXTERIOR.....	51
INTERIOR	52
ELECTRICAL.....	54
AIR-CONDITIONER.....	55A
HEATER.....	55B



Group 00

General

 **MITSUBISHI FUSO TRUCK OF AMERICA, Inc.**



Pub.No.TWSE0405-00

INDEX

EQUIPMENT TYPE CODES LIST	00-2
POWER TRAIN LIST	00-3
HOW TO READ THIS MANUAL	00-4
CHASSIS NUMBER, ENGINE NUMBER, POWER TRAIN LABEL	00-10
VEHICLE IDENTIFICATION NUMBER	00-11
PRECAUTIONS FOR MAINTENANCE OPERATION	00-12
JACKING UP THE VEHICLE	00-24
DIAGNOSIS CODES	
1. Connecting Multi-Use Tester	00-26
2. Accessing / Erasing Diagnosis Codes <Common Rail, Exhaust Gas Recirculation, Pre-heater>	00-30
3. Accessing / Erasing Diagnosis Codes <Automatic Transmission>	00-32
4. Accessing / Erasing Diagnosis Codes <Anti-lock Brake System>	00-34
TABLE OF STANDARD TIGHTENING TORQUES.....	00-36

EQUIPMENT TYPE CODES LIST

Component	Name plate marking	Code description
Engine		
4M50-T	4 M 5 0 T	
		Turbocharged Order of development within same series Order of development among different series Diesel engine No. of cylinders (4)
Clutch		
C5W33	C 5 W 33	
		Disc OD Facing material (W: Woven) Load carrying capacity of truck class (tonnage) on which the clutch is primarily used Initial letter of the clutch
Transmission		
M036S5W	M 036 S 5 W	
		Variation (W: With directly-mounted transfer) Forward speeds Type of mesh (S: Synchromesh) Load carrying capacity of truck class (tonnage) on which the clutch is primarily used Initial letter of the transmission
Propeller shaft		
P3	P 3	
		Load carrying capacity of truck class (tonnage) on which the clutch is primarily used Initial letter of the propeller shaft
Front axle		
F200T	F 200 T	
		Vehicle type (T: Truck) Load carrying capacity of truck class (tonnage) on which the clutch is primarily used Initial letter of the front axle
Rear axle		
R033T	R 03 3 T	
		Vehicle type (T: Truck) Order of development within same series Load carrying capacity of truck class (tonnage) on which the clutch is primarily used Initial letter of the rear axle
Reduction and differential		
D033H	D 03 3 H	
		Tooth profile (H: Hypoid gear) Order of development within same series Load carrying capacity of truck class (tonnage) on which the clutch is primarily used Initial letter of the reduction & differential

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$