

SERVICE MANUAL

**BI00C / BI00C LR / BI00C TC /
BI10C / BI10C TC / BI15C TC**

Stage IV

Tractor Loader Backhoe

Part number 48126557

English

February 2017





SERVICE MANUAL

B100C LR, B100C STAGE IV, STRAIGHT LOADER ARM (SLA), FOUR-WHEEL DRIVE (4WD), MARBLE CUTTING, B100C STAGE IV, STRAIGHT LOADER ARM (SLA), FOUR-WHEEL DRIVE (4WD), B100C TC STAGE IV, TOOL CARRIER (TC), FOUR-WHEEL DRIVE (4WD), B110C STAGE IV, STRAIGHT LOADER ARM (SLA), FOUR-WHEEL DRIVE (4WD), B110C TC STAGE IV, TOOL CARRIER (TC), FOUR-WHEEL DRIVE (4WD), B115C TC STAGE IV, CENTER PIVOT (CP), B115C TC STAGE IV, SIDE SHIFT (SS)

Link Product / Engine

Product	Market Product	Engine
B100C STAGE IV, STRAIGHT LOADER ARM (SLA), FOUR-WHEEL DRIVE (4WD), MARBLE CUTTING	Europe	F5BFL413A*B009
B100C STAGE IV, STRAIGHT LOADER ARM (SLA), FOUR-WHEEL DRIVE (4WD)	Australia New Zealand	F5BFL413A*B009
B100C STAGE IV, STRAIGHT LOADER ARM (SLA), FOUR-WHEEL DRIVE (4WD)	Europe	F5BFL413A*B009
B100C STAGE IV, STRAIGHT LOADER ARM (SLA), FOUR-WHEEL DRIVE (4WD)	Asia Pacific	F5BFL413A*B009
B100C STAGE IV, STRAIGHT LOADER ARM (SLA), FOUR-WHEEL DRIVE (4WD)	Middle East Africa	F5BFL413A*B009
B100C LR	Europe	F5HFL413C*A001
B100C TC STAGE IV, TOOL CARRIER (TC), FOUR-WHEEL DRIVE (4WD)	Australia New Zealand	F5HFL413C*A001
B100C TC STAGE IV, TOOL CARRIER (TC), FOUR-WHEEL DRIVE (4WD)	Middle East Africa	F5HFL413C*A001
B100C TC STAGE IV, TOOL CARRIER (TC), FOUR-WHEEL DRIVE (4WD)	Europe	F5HFL413C*A001
B100C TC STAGE IV, TOOL CARRIER (TC), FOUR-WHEEL DRIVE (4WD)	Asia Pacific	F5HFL413C*A001
B110C STAGE IV, STRAIGHT LOADER ARM (SLA), FOUR-WHEEL DRIVE (4WD)	Latin America	F5HFL413B*A001
B110C STAGE IV, STRAIGHT LOADER ARM (SLA), FOUR-WHEEL DRIVE (4WD)	North America	F5HFL413B*A001
B110C STAGE IV, STRAIGHT LOADER ARM (SLA), FOUR-WHEEL DRIVE (4WD)	Europe	F5HFL413B*A001
B110C TC STAGE IV, TOOL CARRIER (TC), FOUR-WHEEL DRIVE (4WD)	Middle East Africa	F5HFL413B*A001
B110C TC STAGE IV, TOOL CARRIER (TC), FOUR-WHEEL DRIVE (4WD)	Latin America	F5HFL413B*A001
B110C TC STAGE IV, TOOL CARRIER (TC), FOUR-WHEEL DRIVE (4WD)	Australia New Zealand	F5HFL413B*A001

Product	Market Product	Engine
B110C TC STAGE IV, TOOL CARRIER (TC), FOUR-WHEEL DRIVE (4WD)	Asia Pacific	F5HFL413B*A001
B110C TC STAGE IV, TOOL CARRIER (TC), FOUR-WHEEL DRIVE (4WD)	Europe	F5HFL413B*A001
B115C TC STAGE IV, CENTER PIVOT (CP)	Asia Pacific	F5BFL413A*C004
B115C TC STAGE IV, CENTER PIVOT (CP)	Australia New Zealand	F5BFL413A*C004
B115C TC STAGE IV, CENTER PIVOT (CP)	Europe	F5BFL413A*C004
B115C TC STAGE IV, CENTER PIVOT (CP)	Middle East Africa	F5BFL413A*C004
B115C TC STAGE IV, SIDE SHIFT (SS)	Europe	F5BFL413A*C004
B115C TC STAGE IV, SIDE SHIFT (SS)	Asia Pacific	F5BFL413A*C004
B115C TC STAGE IV, SIDE SHIFT (SS)	Australia New Zealand	F5BFL413A*C004
B115C TC STAGE IV, SIDE SHIFT (SS)	Middle East Africa	F5BFL413A*C004

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.206] Fuel filters	10.3
[10.218] Fuel injection system.....	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
[10.400] Engine cooling system	10.6
[10.414] Fan and drive	10.7
Power coupling.....	19
[19.100] Drive shaft.....	19.1
Transmission.....	21
[21.112] Power shuttle transmission.....	21.1
[21.134] Power shuttle transmission external controls	21.2
[21.154] Power shuttle transmission internal components	21.3
[21.113] Powershift transmission	21.4
[21.135] Powershift transmission external controls.....	21.5
[21.105] Powershift transmission hydraulic components.....	21.6
[21.155] Powershift transmission internal components.....	21.7
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$