

# SERVICE MANUAL

## Boomer™ 20 / Boomer™ 25 Compact Tractor

Part number 48017684

English  
June 2016





# **SERVICE MANUAL**

**Boomer™ 20**  
**Boomer™ 25**

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
Boomer™ 20	Europe	S3L2
Boomer™ 25	Europe	S3L2

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.304] Engine lubrication system.....	10.2
[10.400] Engine cooling system .....	10.3
<b>Clutch</b> .....	<b>18</b>
[18.110] Clutch and components .....	18.1
[18.112] Slip clutch or flywheel damper .....	18.2
<b>Transmission</b> .....	<b>21</b>
[21.114] Mechanical transmission .....	21.1
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.310] Final drives .....	25.4
<b>Rear axle system</b> .....	<b>27</b>
[27.106] Rear bevel gear set and differential .....	27.1
[27.124] Final drive hub, steering knuckles, and shafts .....	27.2
<b>Hydrostatic drive</b> .....	<b>29</b>
[29.100] Transmission and steering hydrostatic control .....	29.1
[29.202] Hydrostatic transmission .....	29.2
[29.204] Reservoir, cooler, and lines .....	29.3
[29.218] Pump and motor components.....	29.4
<b>Power Take-Off (PTO)</b> .....	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.104] Rear electro-hydraulic control.....	31.2

[31.110] One-speed rear Power Take-Off (PTO) .....	31.3
[31.120] Central Power Take-Off (PTO) .....	31.4
<b>Brakes and controls .....</b>	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
[33.120] Mechanical service brakes .....	33.2
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump .....	35.2
[35.114] Three-point hitch control valve .....	35.3
[35.116] Three-point hitch cylinder .....	35.4
[35.204] Remote control valves .....	35.5
[35.300] Reservoir, cooler, and filters.....	35.6
[35.350] Safety and main relief valves .....	35.7
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.110] Rear three-point hitch .....	37.1
<b>Steering.....</b>	<b>41</b>
[41.106] Tie rods.....	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders .....	41.3
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.010] Fuel injection system.....	55.2
[55.011] Fuel tank system .....	55.3
[55.012] Engine cooling system .....	55.4

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$