
BOOMER 4055, BOOMER 4060 SERVICE MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	12
SECTION 21 - TRANSMISSION	13
SECTION 23 - FWD DRIVELINE	21
SECTION 25 - FWD FRONT AXLE	22
SECTION 27 - DIFFERENTIAL, REAR AXLE	23
SECTION 31 - POWER TAKE-OFF (PTO)	24
SECTION 33 - BRAKES	25
SECTION 35 - HYDRAULIC SYSTEM	26
SECTION 41 - STEERING	30
SECTION 44 - WHEELS AND TIRES	32
SECTION 50 - CLIMATE CONTROL	33
SECTION 55 - ELECTRICAL SYSTEM	37
SECTION 90 - PLATFORM	55

The following pages are the collation of the contents pages from each section and chapter of the Boomer 4055, Boomer 4060 Service manual. Complete Service part # 84242310.

The sections used through out all New Holland product Service manuals may not be used for each product. Each Service manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Service manual and which sections are in each book.

The sections listed above are the sections utilized for the Boomer 4055, Boomer 4060 Tractors.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 84270065

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Precautionary Statements	3
	Personal Safety	3
	Machine Safety and Information	3
	Safety	4
	Precautionary Statements	4
	The Tractor	4
	Servicing the Tractor	4
	Operating the Tractor	5
	Driving the Tractor	5
	Operating the PTO	6
	Diesel Fuel	6
	Safety Frame (ROPS)	6
	Ecology and the Environment	7
	Helpful Hints	7
	Universal Symbols	8
	General Information	9
	Minimum Hardware Tightening Torques	10
	Lubrication	12
	General Information	12
	Grease Fittings	12
	Chains	12
	Lubrication and Maintenance Chart	
	New Holland Boomer 4055, Boomer 4060 — Front-Wheel Drive	14
	Lubrication Fittings	15
	Diesel Fuel	15
	Fuel Usage Safety	15
	Specifications	16
	General Dimensions	25
	Wheel Tread Settings	28
	Front Axle (FWD) (Not Adjustable)	28
	Rear Axle (FWD)	28

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 84270065

Chapter 1 - General Information (Continued)

CONTENTS

Section	Description	Page
	Liquid Ballast (Optional)	31
	Tire Pressure	31
	Rear Tire Liquid	31
	Ballast Weights (Per Tire)	31

SECTION 10 - ENGINE

BOOK 1 - 84270065

Chapter 1 - Engine Components

CONTENTS

Section	Description	Page
	Specifications	7
	Metric Bolt Torque Specifications	12
	Special Tools	12
	Compression Test and Tools	13
	Troubleshooting	14
	Description of Operation - General Information	18
	Cylinder Head and Valve Train Components	19
	Cylinder Block Assembly	19
	Overhaul	20
	Engine	20
	Removal	20
	Installation	21
	Alternator and Temperature Sending Switch	22
	Removal	22
	Cooling Fan and Pulley	22
	Removal	22
	Glow Plug and Connector	22
	Removal	22

SECTION 10 - ENGINE

BOOK 1 - 84270065

Chapter 1 - Engine Components (Continued)

CONTENTS

Section	Description	Page
	Fuel Injection Tubing	23
	Removal	23
	Fuel Injector	23
	Removal	23
	Water Pump	23
	Removal	23
	Cover/Intake Manifold/Exhaust Manifold	24
	Removal	24
	External Oil Tube	24
	Removal	24
	Rocker Assembly	25
	Removal	25
	Cylinder Head	25
	Removal	25
	Tappets	25
	Removal	25
	Fuel Stop Solenoid	26
	Removal	26
	Timing Gear Cover	26
	Removal	26
	Timing Gears and Camshaft	28
	Removal	28
	Front End Plate	29
	Removal	29
	Oil Sump	29
	Removal	29
	Oil Suction Tube and Strainer	30
	Removal	30
	Balancer Assembly	30
	Removal	30
	Connecting Rods, Bearings and Pistons, Rings	31
	Removal	31

SECTION 10 - ENGINE

BOOK 1 - 84270065

Chapter 1 - Engine Components (Continued)

CONTENTS

Section	Description	Page
	Flywheel	31
	Removal	31
	Backplate and Oil Seal	32
	Removal	32
	Crankshaft and Main Bearings	32
	Removal	32
	Rocker Arm Assembly	33
	Disassembly	33
	Inspection and Repair	33
	Timing Gear	34
	Inspection	34
	Camshaft	34
	Disassembly	34
	Inspection	34
	Oil Pump	35
	Disassembly	35
	Inspection	35
	Assembly	35
	Cylinder Head	36
	Disassembly	36
	Inspection and Repair	36
	Valves	37
	Inspection	37
	Valve Guides	37
	Inspection	37
	Valve Seat	38
	Inspection	38
	Valve Springs	39
	Inspection	39
	Rocker Arms	40
	Inspection	40

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$