

SERVICE MANUAL

Boomer™ 41
Boomer™ 47
Tier 4B (final)
Compact Tractor

Part number 47941902

2nd edition English

March 2016

Replaces part number 47700457





SERVICE MANUAL

Boomer™ 41 TIER 4B (FINAL), ROPS
Boomer™ 41 TIER 4B (FINAL), Cab
Boomer™ 47 TIER 4B (FINAL), ROPS
Boomer™ 47 TIER 4B (FINAL), Cab

Link Product / Engine

Product	Market Product	Engine
Boomer™ 41 TIER 4B (FINAL), ROPS	North America	N844L-F-30
Boomer™ 41 TIER 4B (FINAL), Cab	North America	N844L-F-30
Boomer™ 47 TIER 4B (FINAL), ROPS	North America	N844L-F-34
Boomer™ 47 TIER 4B (FINAL), Cab	North America	N844L-F-34

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.206] Fuel filters	10.3
[10.304] Engine lubrication system.....	10.4
[10.400] Engine cooling system	10.5
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.6
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.110] Clutch and components	18.2
[18.112] Slip clutch or flywheel damper	18.3
Transmission	21
[21.114] Mechanical transmission	21.1
[21.140] Mechanical transmission internal components.....	21.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.310] Final drives	25.4
Rear axle system	27
[27.106] Rear bevel gear set and differential	27.1
[27.120] Planetary and final drives	27.2
Hydrostatic drive	29
[29.100] Transmission and steering hydrostatic control	29.1
[29.202] Hydrostatic transmission	29.2

[29.218] Pump and motor components.....	29.3
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.110] One-speed rear Power Take-Off (PTO)	31.3
[31.120] Central Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.120] Mechanical service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump	35.2
[35.114] Three-point hitch control valve	35.3
[35.116] Three-point hitch cylinder	35.4
[35.204] Remote control valves	35.5
[35.300] Reservoir, cooler, and filters.....	35.6
[35.350] Safety and main relief valves	35.7
[35.355] Hydraulic hand control	35.8
Hitches, drawbars, and implement couplings.....	37
[37.108] Rear three-point hitch external controls.....	37.1
[37.110] Rear three-point hitch	37.2
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders	41.4
Wheels	44

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$