

E805 Tier 3 Crawler Excavators

Table of Contents

DIVISION/SECTION	SECTION N°	REFERENCE N°
1 GENERAL INFORMATION		
Safety, general information and standard torque data	1001	7-27691EN
General specifications and special torque setting	1002	9-94710EN
2 ENGINE		
Radiator and engine, removal and installation	2001	9-94910EN
Engine specifications	*	
Disassembly and assembly of the engine	*	
3 FUEL SYSTEM		
Fuel tank	3001	9-36821EN
Fuel engine system	*	
4 ELECTRICAL SYSTEM		
Electrical system, electrical and electronic troubleshooting	4001	9-94700EN
Inspection and maintenance of batteries and connecting a booster battery	4002	9-36830EN
Main and engine electronic control boxes	4003	9-94510EN
5 UNDERCARRIAGE		
Removal and installation of tracks	5001	9-36860EN
Rollers	5003	9-36881EN
Sprocket	5004	9-36890EN
Idler wheel and tension shock absorber	5005	9-94350EN
6 DRIVE TRAIN		
Drive motor and final drive transmission removal and installation	6001	9-36980EN
Drive motor and final drive transmission disassembly and assembly	6002	9-40351EN
Swing reduction gear, removal and installation	6003	9-36991EN
Swing reduction gear, disassembly and assembly	6004	9-42631EN
7 UNDERCARRIAGE HYDRAULICS		
8 UPPERSTRUCTURE HYDRAULICS		
Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components	8000	9-94430EN
Specifications, troubleshooting, checks and hydraulic pressure settings	8001	9-94740EN
Hydraulic reservoir removal and installation	8002	9-94490EN
Main and pilot pumps, removal and installation	8003	9-40771EN
Main hydraulic control valve, removal and installation	8004	9-94501EN
Attachment cylinders, removal and installation	8005	7-27792EN
Hydraulic swivel, removal and installation	8006	9-94600EN
Pilot blocs, removal and installation	8007	9-94520EN
Swing motor, removal and installation	8008	9-94420EN
Main hydraulic pump, disassembly and assembly	8010	9-94590EN
Main hydraulic control valve, disassembly and assembly	8011	9-94781EN
Attachment cylinders, disassembly and assembly	8012	9-40941EN
Hand control levers, disassembly and assembly	8013	9-94630EN
Foot control levers, disassembly and assembly	8014	9-40992EN
Six-solenoid valves, disassembly and assembly	8015	9-42521EN
Caution valve, disassembly and assembly	8016	9-94531EN
Safety valve	8017	9-42770EN
Hydraulic swivel, disassembly and assembly	8018	9-42511EN
Swing motor, disassembly and assembly	8019	9-42530EN
Hydraulic functions	8020	9-94720EN

DIVISION/SECTION	SECTION N°	REFERENCE N°
Fan motor, removal and installation	8022	9-94660EN
Fan motor, disassembly and assembly	8023	9-94670EN
Fan pump, removal, disassembly, assembly and installation	8024	9-94680EN
Hydraulic component functions	8030	9-94130EN
9 UPPERSTRUCTURE		
Upperstructure, turntable and counterweight	9002	9-42551EN
Boom, dipper and bucket	9003	9-42621EN
Seat and seat belt	9004	9-40960EN
Cab and cab equipment	9005	9-94650EN
Air conditioning troubleshooting	9006	██████████
Air conditioning unit disassembly and assembly	9007	9-94640EN
Air conditioning servicing	9008	██████████
Air conditioning components	9009	██████████
Removal and installation attachment, counterweight and side fram	9010	9-94730EN
Large format hydraulic schematic	Pocket	87520431
Large format electrical schematic	Pocket	9-93930

* Consult the Engine Service Manual

██████████ Sections to be distributed at a later date

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

Section

1001

SAFETY, GENERAL INFORMATION AND TORQUE SPECIFICATIONS

TABLE OF CONTENTS

GENERAL INFORMATION	3
SAFETY.....	4
STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS.....	6



WARNING : *This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.*

GENERAL INFORMATION

Cleanning

Clean all metal parts except bearings, in a suitable cleaning solvent or by steam cleaning. Do not use caustic soda for steam cleaning. After cleaning, dry and put oil on all parts. Clean oil passages with compressed air. Clean bearings in a suitable cleaning solvent, dry the bearings completely and put oil on the bearings.

Inspection

Check all parts when the parts are disassembled. Replace all parts that have wear or damage. Small scoring or grooves can be removed with a hone or crocus cloth. Complete a visual inspection for indications of wear, pitting and the replacement of parts necessary to prevent early failures.

Bearings

Check bearings for easy action. If bearings have a loose fit or rough action replace the bearing. Wash bearings with a suitable cleaning solvent and permit to air dry. **DO NOT DRY BEARINGS WITH COMPRESSED AIR.**

Needle bearings

Before you press needle bearings in a bore always remove any metal protrusions in the bore or edge of the bore. Before you press bearings into position put petroleum jelly on the inside and outside diameter of the bearings.

Gears

Check all gears for wear and damage. Replace gears that have wear or damage.

Oil seals, O-rings and gaskets

Always install new oil seals, O-rings and gaskets. Put petroleum jelly on seals and O-rings.

Shafts

Check all shafts that have wear or damage. Check the bearing and oil seal surfaces of the shafts for damage.

Service parts

Always install genuine NEW HOLLAND service parts. When ordering refer to the Parts Catalog for the correct part number of the genuine NEW HOLLAND replacement items. Failures due to the use of other than genuine NEW HOLLAND replacement parts are not covered by warranty.

Lubrication

Only use the oils and lubricants specified in the Operator's or Service Manuals. Failures due to the use of non-specified oils and lubricants are not covered by warranty.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$