

SERVICE MANUAL

**PowerStar™ 90 / PowerStar™ 100 /
PowerStar™ 110 / PowerStar™ 120**
Tier 4B (final)
Tractor

PIN ELRT5100PJLE50082 and above

Part number 51543580

1st edition English
November 2018





SERVICE MANUAL

PowerStar™ 100 With cab, with Mechanical transmission, PowerStar™ 100 With cab, with Power Shuttle transmission [ELRT5100AJLE50003 -], PowerStar™ 100 Without cab, with Mechanical transmission [ELRT5100LJLE50088 -], PowerStar™ 100 Without cab, with Power Shuttle transmission [ELRT5100PJLE50079 -], PowerStar™ 110 With cab, with Mechanical transmission [ELRT5110JJLE50318 -], PowerStar™ 110 With cab, with Power Shuttle transmission [ELRT5110LJLE50008 -], PowerStar™ 110 Without cab, with Mechanical transmission, PowerStar™ 110 Without cab, with Power Shuttle transmission, PowerStar™ 120 With cab, with Mechanical transmission [ELRT5120TJLE50403 -], PowerStar™ 120 With cab, with Power Shuttle transmission [ELRT5120CJLE50013 -], PowerStar™ 120 Without cab, with Mechanical transmission, PowerStar™ 120 Without cab, with Power Shuttle transmission [ELRT5120TJLE50028 -], PowerStar™ 90 With cab, with Power Shuttle transmission [ELRT5090VJLE50022 -], PowerStar™ 90 With cab, with Mechanical transmission [ELRT5090PJLE50015 -], PowerStar™ 90 Without cab, with Power Shuttle transmission [ELRT5090AJLE50393 -], PowerStar™ 90 Without cab, with Mechanical transmission [ELRT5090JJLE50074 -]

Link Product / Engine

Product	Market Product	Engine
PowerStar™ 100 Without cab, with Mechanical transmission [ELRT5100LJLE50088 -]	North America	F5GFL413H*C006
PowerStar™ 100 With cab, with Mechanical transmission	North America	F5GFL413H*C006
PowerStar™ 100 Without cab, with Power Shuttle transmission [ELRT5100PJLE50079 -]	North America	F5GFL413H*C006
PowerStar™ 100 With cab, with Power Shuttle transmission [ELRT5100AJLE50003 -]	North America	F5GFL413H*C006
PowerStar™ 110 Without cab, with Mechanical transmission	North America	F5GFL413G*C006
PowerStar™ 110 With cab, with Mechanical transmission [ELRT5110JJLE50318 -]	North America	F5GFL413G*C006
PowerStar™ 110 Without cab, with Power Shuttle transmission	North America	F5GFL413G*C006
PowerStar™ 110 With cab, with Power Shuttle transmission [ELRT5110LJLE50008 -]	North America	F5GFL413G*C006
PowerStar™ 120 Without cab, with Mechanical transmission	North America	F5GFL413F*C011
PowerStar™ 120 With cab, with Mechanical transmission [ELRT5120TJLE50403 -]	North America	F5GFL413F*C011
PowerStar™ 120 Without cab, with Power Shuttle transmission [ELRT5120TJLE50028 -]	North America	F5GFL413F*C011
PowerStar™ 120 With cab, with Power Shuttle transmission [ELRT5120CJLE50013 -]	North America	F5GFL413F*C011
PowerStar™ 90 Without cab, with Mechanical transmission [ELRT5090JJLE50074 -]	North America	F5GFL413J*C006
PowerStar™ 90 With cab, with Mechanical transmission [ELRT5090PJLE50015 -]	North America	F5GFL413J*C006
PowerStar™ 90 Without cab, with Power Shuttle transmission [ELRT5090AJLE50393 -]	North America	F5GFL413J*C006
PowerStar™ 90 With cab, with Power Shuttle transmission [ELRT5090VJLE50022 -]	North America	F5GFL413J*C006

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.206] Fuel filters	10.3
[10.202] Air cleaners and lines	10.4
[10.254] Intake and exhaust manifolds and muffler	10.5
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.6
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
[10.310] Aftercooler.....	10.10
[10.304] Engine lubrication system.....	10.11
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components	18.3
[18.112] Slip clutch or flywheel damper	18.4
Transmission	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.100] Mechanical transmission hydraulic components	21.3
[21.112] Power shuttle transmission.....	21.4
[21.110] Master clutch housing	21.5
[21.134] Power shuttle transmission external controls	21.6
[21.104] Power shuttle transmission hydraulic components	21.7
[21.154] Power shuttle transmission internal components	21.8

[21.160] Creeper	21.9
[21.162] Reverser	21.10
[21.109] Transmission cooler and lines.....	21.11
[21.118] Transmission/Rear drive	21.12
[21.148] Transmission/Rear drive internal components	21.13
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.400] Non-powered front axle	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.110] One-speed rear Power Take-Off (PTO)	31.3
[31.114] Two-speed rear Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.224] Trailer brake pneumatic control	33.3
Hydraulic systems.....	35

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$