

SERVICE MANUAL

T4.75F / T4.85F / T4.95F / T4.105F
Tractor

Part number 47888361
English
July 2016





SERVICE MANUAL

T4.105F With cab [ZDJD11527 -], T4.105F Without cab [ZDJD11911 -], T4.75F With cab [ZDJD10166 -], T4.75F Without cab [ZDJD10836 -], T4.85F With cab [ZDJD11099 -], T4.85F Without cab [ZDJD11022 -], T4.95F With cab [ZDJD10640 -], T4.95F Without cab [ZDJD10215 -]

Link Product / Engine

Product	Market Product	Engine
T4.105F With cab [ZDJD11527 -]	Australia New Zealand	F4CE9484
T4.105F With cab [ZDJD11527 -]	Asia Pacific	F4CE9484
T4.105F With cab [ZDJD11527 -]	Latin America	F4CE9484
T4.105F Without cab [ZDJD11911 -]	Australia New Zealand	F4CE9484
T4.105F Without cab [ZDJD11911 -]	Latin America	F4CE9484
T4.105F Without cab [ZDJD11911 -]	Asia Pacific	F4CE9484
T4.75F With cab [ZDJD10166 -]	Latin America	F5AE9484B
T4.75F With cab [ZDJD10166 -]	Australia New Zealand	F5AE9484B
T4.75F With cab [ZDJD10166 -]	Asia Pacific	F5AE9484B
T4.75F Without cab [ZDJD10836 -]	Asia Pacific	F5AE9484B
T4.75F Without cab [ZDJD10836 -]	Australia New Zealand	F5AE9484B
T4.75F Without cab [ZDJD10836 -]	Latin America	F5AE9484B
T4.85F With cab [ZDJD11099 -]	Asia Pacific	F5AE9484G
T4.85F With cab [ZDJD11099 -]	Australia New Zealand	F5AE9484G
T4.85F With cab [ZDJD11099 -]	Latin America	F5AE9484G
T4.85F Without cab [ZDJD11022 -]	Asia Pacific	F5AE9484G
T4.85F Without cab [ZDJD11022 -]	Australia New Zealand	F5AE9484G
T4.85F Without cab [ZDJD11022 -]	Latin America	F5AE9484G
T4.95F With cab [ZDJD10640 -]	Latin America	F4CE9484
T4.95F With cab [ZDJD10640 -]	Asia Pacific	F4CE9484
T4.95F With cab [ZDJD10640 -]	Australia New Zealand	F4CE9484
T4.95F Without cab [ZDJD10215 -]	Asia Pacific	F4CE9484
T4.95F Without cab [ZDJD10215 -]	Australia New Zealand	F4CE9484
T4.95F Without cab [ZDJD10215 -]	Latin America	F4CE9484

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
Clutch	18
[18.104] Clutch hydraulic release control.....	18.1
[18.110] Clutch and components	18.2
[18.100] Clutch mechanical release control	18.3
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.118] Transmission/Rear drive	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.112] Power shuttle transmission.....	21.4
[21.134] Power shuttle transmission external controls	21.5
[21.154] Power shuttle transmission internal components	21.6
[21.160] Creeper	21.7
[21.162] Reverser	21.8
[21.168] Hi-Lo unit.....	21.9
Four-Wheel Drive (4WD) system	23
[23.304] Four-Wheel Drive (4WD) gearbox	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.310] Final drives	25.4
Rear axle system.....	27

[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives.....	27.3
[27.126] Spur gear and final drives.....	27.4
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control.....	31.1
[31.146] Front Power Take-Off (PTO).....	31.2
Brakes and controls.....	33
[33.202] Hydraulic service brakes.....	33.1
[33.110] Parking brake or parking lock.....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.204] Remote control valves.....	35.4
[35.600] High flow hydraulics.....	35.5
[35.100] Main lift system.....	35.6
[35.114] Three-point hitch control valve.....	35.7
[35.116] Three-point hitch cylinder.....	35.8
[35.160] Front hitch controls and lines.....	35.9
[35.410] Header or attachment height system.....	35.10
Hitches, drawbars, and implement couplings.....	37
[37.110] Rear three-point hitch.....	37.1
[37.162] Front hitch.....	37.2
Steering.....	41
[41.101] Steering control.....	41.1
[41.200] Hydraulic control components.....	41.2

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$