

# SERVICE MANUAL

**T8.320 / T8.350 / T8.380 / T8.410 / T8.435 /  
T8.380 SmartTrax™ / T8.410 SmartTrax™ /  
T8.435 SmartTrax™  
Continuously Variable Transmission (CVT)  
Tractor**

*PIN ZFRE03123 and above*

Part number 47917992

1<sup>st</sup> edition English

October 2015





## **SERVICE MANUAL**

**T8.320 CVT TIER 4B [ZFRE03123 - ] , T8.350 CVT TIER 4B [ZFRE03123 - ]  
 , T8.380 CVT TIER 4B [ZFRE03123 - ] , T8.380 SmartTrax™ PST TIER 4B  
 [ZFRE03123 - ] , T8.410 CVT TIER 4B [ZFRE03123 - ] , T8.410 SmartTrax™  
 PST TIER 4B [ZFRE03123 - ] , T8.435 CVT TIER 4B [ZFRE03123 - ] , T8.435  
 SmartTrax™ CVT TIER 4B [ZFRE03123 - ]**

## Link Product / Engine

Product	Market Product	Engine
T8.320 CVT TIER 4B [ZFRE03123 - ]	Europe	F2CFE613G*B002
T8.350 CVT TIER 4B [ZFRE03123 - ]	Europe	F2CFE614G*B003
T8.380 CVT TIER 4B [ZFRE03123 - ]	Europe	F2CFE614D*B003
T8.410 CVT TIER 4B [ZFRE03123 - ]	Europe	F2CFE614C*B002
T8.435 CVT TIER 4B [ZFRE03123 - ]	Europe	F2CFE614A*B002
T8.380 SmartTrax™ PST TIER 4B [ZFRE03123 - ]	Europe	F2CFE614D*B002
T8.410 SmartTrax™ PST TIER 4B [ZFRE03123 - ]	Europe	F2CFE614C*B002
T8.435 SmartTrax™ CVT TIER 4B [ZFRE03123 - ]	Europe	F2CFE614A*B002

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.101] Cylinder heads .....	10.2
[10.202] Air cleaners and lines .....	10.3
[10.216] Fuel tanks .....	10.4
[10.218] Fuel injection system.....	10.5
[10.254] Intake and exhaust manifolds and muffler .....	10.6
[10.304] Engine lubrication system.....	10.7
[10.310] Aftercooler.....	10.8
[10.400] Engine cooling system .....	10.9
[10.414] Fan and drive .....	10.10
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.11
<b>Power coupling</b> .....	<b>19</b>
[19.100] Drive shaft.....	19.1
[19.110] Flywheel damper .....	19.2
[19.120] Drive shaft shield assembly .....	19.3
<b>Transmission</b> .....	<b>21</b>
[21.504] Continuously Variable Transmission (CVT) .....	21.1
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.2
[21.506] Continuously Variable Transmission (CVT) lubrication system .....	21.3
[21.507] Continuously Variable Transmission (CVT) internal components .....	21.4
[21.900] Hydraulic pump drive.....	21.5
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.202] Electro-hydraulic control .....	23.1
[23.314] Drive shaft.....	23.2

<b>Front axle system .....</b>	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.122] Axle suspension control .....	25.4
<b>Rear axle system.....</b>	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
[27.610] Rear axle track yoke assembly .....	27.4
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO) .....	31.2
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.3
[31.146] Front Power Take-Off (PTO) .....	31.4
<b>Brakes and controls .....</b>	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
[33.202] Hydraulic service brakes .....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
[33.224] Trailer brake pneumatic control .....	33.4
[33.240] Emergency brake .....	33.5
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.106] Variable displacement pump .....	35.3
[35.114] Three-point hitch control valve .....	35.4
[35.124] Three-point hitch hydraulic adjustment .....	35.5
[35.204] Remote control valves .....	35.6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$