

SERVICE MANUAL

TI4.70 RS
TI4.80 RS
TI4.90 RS
TI4.100 RS
Tractor

Part number 51427768

English
July 2018



INDEX

Chapter N°	Description
1	INTRODUCTION
2	ENGINE
3	CLUTCH HOUSING
4	FRONT DIFFERENTIAL
5	TRANSMISSION AND REAR POWER TAKE OFF
6	CENTRAL BODY
7	REAR FINAL DRIVE UNITS
8	FRONT FINAL DRIVE UNITS
9	BRAKES
10	REAR LIFT
11	HYDRAULIC SYSTEM
12	ELECTRICAL SYSTEM
	TROUBLESHOOTING TI4.70-TI4.80
	TROUBLESHOOTING TI4.90-TI4.100
13	PLATFORM
14	SPECIAL TOOLS

I : Introduction

Index

I.1	Reading this manual	1-3
1.1.1	Introduction	1-4
1.1.2	Structure of this manual.....	1-4
1.1.3	Identifying the tractor.....	1-5
I.2	Safety rules	1-7
1.2.1	Essential preventive guidelines.....	1-8
1.2.2	Using the tractor safely.....	1-16
I.3	General	1-19
1.3.1	Spare parts	1-20
1.3.2	Specific tools.....	1-20
1.3.3	Oil seals for rotating shafts	1-20
1.3.4	Adjuster shims.....	1-20
1.3.5	O-ring seals.....	1-21
1.3.6	Sealants used.....	1-21
1.3.7	Spring pins.....	1-21
I.4	Technical characteristics	1-23
1.4.1	Engine	1-24
1.4.2	Transmission	1-25
1.4.3	Brakes.....	1-26
1.4.4	Steering wheel.....	1-26
1.4.5	Rear power take off.....	1-26
1.4.6	Rear lift	1-26
1.4.7	Hydraulic System	1-26
1.4.8	Electrical system	1-27
1.4.9	Driver zone.....	1-27
1.4.10	Vehicle's maximum operating inclination	1-27
1.4.11	Towing devices	1-27
1.4.12	Towable masses.....	1-28
1.4.13	Ballast weights	1-28
1.4.14	Weights and dimensions	1-29
1.4.15	Lubricants, fuels, coolant and refrigerant.....	1-31
1.4.16	Speed.....	1-34
1.4.17	Conversion tables.....	1-36

I.5	Tightening torques and sealants	I-37
I.5.1	Tightening torques for nuts.....	I-38
I.5.2	Tightening torques for ring nuts	I-38
I.5.3	Tightening torques for hex head screws.....	I-39
I.5.4	Tightening torques for stud bolts	I-39
I.5.5	Tightening torques for tapered plugs.....	I-39
I.5.6	Loctite sealant types	I-40
I.6	General assembly instructions	I-41
I.6.1	Oil seals	I-42
I.6.2	O-Rings	I-43
I.6.3	Bearings.....	I-44

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$