

# SERVICE MANUAL

**W50C / W60C / W70C / W80C**

**Tier 4A (interim)**

Compact Wheel Loader

**Part number 47829080C**

1<sup>st</sup> edition English

April 2017





## **SERVICE MANUAL**

**W50C TC, W50C ZB, W60C TC, W60C ZB, W70C HS, W70C, W80C HS, W80C**

# Link Product / Engine

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
W50C TC CWL W50C TIER 4 TOOL CARRIER	North America	F5HFL463B*F001
W50C ZB CWL W50C TIER4 Z-BAR	North America	F5HFL463B*F001
W60C TC	North America	F5HFL463C*F001
W60C ZB	North America	F5HFL463C*F001
W70C CWL W70C TIER4 Z-BAR STD	North America	F5HFL463A*F001
W70C HS CWL W70C TIER4 HIGH SPEED	North America	F5HFL463A*F001
W80C CWL W80C TIER4 Z-BAR STD	North America	F5HFL463A*F001
W80C HS CWL W80C TIER4 HIGH SPEED	North America	F5HFL463A*F001

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
Four-Wheel Drive (4WD) system .....	23
[23.314] Drive shaft.....	23.1
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
[27.124] Final drive hub, steering knuckles, and shafts .....	27.4
Hydrostatic drive.....	29
[29.100] Transmission and steering hydrostatic control .....	29.1
Brakes and controls .....	33
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.204] Front axle brake .....	33.3
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.106] Variable displacement pump .....	35.4

[35.359] Main control valve .....	35.5
[35.357] Pilot system .....	35.6
[35.525] Auxiliary hydraulic valves and lines .....	35.7
[35.600] High flow hydraulics .....	35.8
[35.355] Hydraulic hand control .....	35.9
[35.353] Hydraulic travel system .....	35.10
[35.701] Front loader arm hydraulic system .....	35.11
[35.723] Front loader bucket hydraulic system .....	35.12
[35.734] Tool quick coupler hydraulic system .....	35.13
<b>Frames and ballasting .....</b>	<b>39</b>
[39.100] Frame .....	39.1
[39.140] Ballasts and supports .....	39.2
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders .....	41.3
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating.....	50.1
[50.200] Air conditioning.....	50.2
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.045] Front axle control system .....	55.3
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.4
[55.408] Warning indicators, alarms, and instruments .....	55.5
[55.DTC] FAULT CODES.....	55.6
<b>Front loader and bucket.....</b>	<b>82</b>
[82.100] Arm.....	82.1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$