

# SERVICE MANUAL

**Workmaster™ 25S**  
**Tier 4B (final)**  
**Compact Tractor**

**Part number 51421067**

1<sup>st</sup> edition English  
April 2018





# SERVICE MANUAL

**Workmaster™ 25S 25 Hp, without cab**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.206] Fuel filters .....	10.3
[10.202] Air cleaners and lines .....	10.4
[10.254] Intake and exhaust manifolds and muffler .....	10.5
[10.400] Engine cooling system .....	10.6
[10.414] Fan and drive .....	10.7
Four-Wheel Drive (4WD) system .....	23
[23.314] Drive shaft.....	23.1
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
Hydrostatic drive.....	29
[29.200] Mechanical control .....	29.1
[29.218] Pump and motor components.....	29.2
[29.202] Hydrostatic transmission .....	29.3
Power Take-Off (PTO) .....	31
[31.101] Rear mechanical control .....	31.1
[31.104] Rear electro-hydraulic control.....	31.2

[31.110] One-speed rear Power Take-Off (PTO) .....	31.3
<b>Brakes and controls .....</b>	<b>33</b>
[33.120] Mechanical service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump .....	35.3
[35.350] Safety and main relief valves .....	35.4
[35.114] Three-point hitch control valve .....	35.5
[35.355] Hydraulic hand control .....	35.6
[35.726] Excavator and backhoe hydraulic controls.....	35.7
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.120] Rear three-point hitch linkage.....	37.1
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.106] Tie rods.....	41.2
[41.206] Pump .....	41.3
[41.216] Cylinders .....	41.4
<b>Wheels.....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.201] Engine starting system .....	55.3
[55.301] Alternator.....	55.4

[55.302] Battery.....	55.5
[55.202] Cold start aid .....	55.6
[55.011] Fuel tank system .....	55.7
[55.010] Fuel injection system.....	55.8
[55.012] Engine cooling system .....	55.9
[55.013] Engine oil system .....	55.10
[55.610] Ground speed control .....	55.11
[55.522] Cab Power Take-Off (PTO) controls .....	55.12
[55.031] Parking brake electrical system.....	55.13
[55.404] External lighting .....	55.14
[55.405] External lighting switches and relays .....	55.15
[55.510] Cab or platform harnesses and connectors.....	55.16
[55.408] Warning indicators, alarms, and instruments .....	55.17
[55.027] Cruise control .....	55.18
<b>Platform, cab, bodywork, and decals.....</b>	<b>90</b>
[90.114] Operator protections .....	90.1
[90.120] Mechanically-adjusted operator seat.....	90.2
[90.100] Engine hood and panels .....	90.3

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$