

SERVICE MANUAL

Boomer™ 35 **Boomer™ 40** **Tier 4B (final)** **Compact Tractor**

Boomer™ 35 ROPS - From PIN LSM0B35Rxx0010001 to LSM0B35RVH0010043

Boomer™ 40 Cab - From PIN LSM0B40Cxx0010001 to LSM0B40CAH0010053

Boomer™ 40 ROPS - From PIN LSM0B40Rxx0010001 to LSM0B40REH0010028

Part number 48144022

1st edition English
June 2017





SERVICE MANUAL

**Boomer™ 35 Tier 4B (final), ROPS [LSM0B35Rxx0010001 -
LSM0B35RVH0010043]**

**Boomer™ 40 Tier 4B (final), Cab [LSM0B40Cxx0010001 -
LSM0B40CAH0010053]**

**Boomer™ 40 Tier 4B (final), ROPS [LSM0B40Rxx0010001 -
LSM0B40REH0010028]**

Link Product / Engine

Product	Market Product	Engine
Boomer™ 35 Tier 4B (final), ROPS [LSM0B35Rxx0010001 - LSM0B35RVH0010043]	North America	L3C19-T5
Boomer™ 40 Tier 4B (final), ROPS [LSM0B40Rxx0010001 - LSM0B40REH0010028]	North America	L3C19-T4
Boomer™ 40 Tier 4B (final), Cab [LSM0B40Cxx0010001 - LSM0B40CAH0010053]	North America	L3C19-T4

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.206] Fuel filters	10.3
[10.218] Fuel injection system.....	10.4
[10.202] Air cleaners and lines	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.110] Clutch and components	18.2
Power coupling	19
[19.110] Flywheel damper	19.1
Transmission	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.110] Master clutch housing	21.4
Four-Wheel Drive (4WD) system	23
[23.314] Drive shaft.....	23.1
[23.101] Mechanical control	23.2
Front axle system	25
[25.100] Powered front axle	25.1

[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system.....	27
[27.106] Rear bevel gear set and differential.....	27.1
[27.120] Planetary and final drives	27.2
Hydrostatic drive.....	29
[29.200] Mechanical control	29.1
[29.100] Transmission and steering hydrostatic control	29.2
[29.204] Reservoir, cooler, and lines	29.3
[29.218] Pump and motor components.....	29.4
[29.202] Hydrostatic transmission	29.5
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.110] One-speed rear Power Take-Off (PTO)	31.3
[31.120] Central Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.120] Mechanical service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.350] Safety and main relief valves	35.4
[35.204] Remote control valves	35.5
[35.114] Three-point hitch control valve	35.6
[35.116] Three-point hitch cylinder	35.7
[35.724] Front loader hydraulic system control.....	35.8

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$