



Order no.: 5871 977 002

# **ZF - TRACTOR TRANSMISSION**

## **ECCOM 1.5 (SDFG SERIES 20)**

### **REPAIR LEVEL III**



**ZF Passau GmbH**  
Donaustr. 25 - 71  
D- 94034 Passau

# **REPAIR MANUAL** **for** **ZF – TRACTOR TRANSMISSION** **ECCOM 1.5**

## **IMPORTANT INFORMATION:**

Due to the great variety of ZF units it is necessary to limit disassembly and reassembly manuals to a current ZF production unit. Continuous technical upgrading of the ZF units and extensions concerning design options may require differing steps, which can be carried out by qualified specialists without greater difficulties by means of the perspective views included in the corresponding spare parts lists.

This disassembly and reassembly manual is based on the design level of a ZF production unit at the time of issue of the manual.

ZF Passau GmbH reserves the right to replace this disassembly and reassembly manual by a successive edition at any time without advance notice. Upon request, ZF Passau GmbH will advise which edition is the latest one.

## **ACHTUNG:**

Observe the vehicle manufacturer's instructions and specifications for the installation and commissioning of the unit!

For information on operation, maintenance and for descriptions please refer to the corresponding ZF-Operation Manual.

**ZF Passau GmbH**

**Donaustr. 25 - 71**

**D- 94034 Passau**

**Abt. : ASDM / Division : ASDM**

Nachdruck auch auszugsweise ohne die Genehmigung der ZF Passau GmbH nicht gestattet!

Copyright ZF Passau GmbH! Complete or partial reproduction is not permitted!

Copyright ZF Passau GmbH! Toute reproduction, même partielle, est interdite!

Technische Änderungen vorbehalten!

Subject to technical modifications!

Sous réserve de modifications techniques!

Konstruktionsstand / Design Level / Niveau Technique

1.Auflage / 1<sup>st</sup> Edition / 1ère Édition 2005/01

<b>CONTENT</b>	<b>Chapter/page</b>
Preface	0/1
General	0/2 ... 3
Conversion table	0/4
Denomination of standard dimensions	0/5
Tightening torques for screws	0/6
<b>SPECIAL TOOLS</b>	<b>W/1 ... WB/15</b>
List of tools (requested special tool)	W/1 ... 9
ILLUSTRATED TABLES	WB/1 ... 15
<b>DISASSEMBLY</b>	<b>1/1 ... 4/23</b>
<b><u>1. Disassembly of components</u></b>	<b>1/1 ... 6</b>
1.1 Disassembly of the clutch control block	1/1 ... 3
1.2 Disassembly of the system control block	1/4 ... 5
1.3 Disassembly of the pump	1/6
<b><u>2. Separation of the transmission halves</u></b>	<b>2/1 ... 2</b>
<b><u>3. Disassembly of the intermediate housing</u></b>	<b>3/1 ... 17</b>
3.1 Disassembly of the front wheel drive	3/1 ... 3
3.2 Disassembly of clutch (KV/KR) and double gear	3/4 ... 10
3.2.1 Disassembly of clutch KV	3/4 ... 7
3.2.2 Disassembly of clutch KR	3/7 ... 10
3.3 Disassembly of the output gear	3/11 ... 12
3.4 Disassembly of the input shaft (hydrostatic unit))	3/13 ... 14
3.5 Disassembly of the central shaft (clutch KV/KR)	3/15
3.6 Disassembly of the intermediate gear	3/16 ... 17
<b><u>4. Disassembly of the clutch housing</u></b>	<b>4/1 ... 23</b>
4.1 Disassembly of the multi-disk brake (BG)	4/1 ... 2
4.2 Disassembly of the drum selector gear (planetary transmission)	4/3 ... 18
4.2.1 Disassembly of ring gear P4/BG	4/3 ... 4
4.2.2 Disassembly of clutch K3/K4	4/4 ... 6
4.2.3 Disassembly of planetary drive P4	4/7 ... 8
4.2.4 Disassembly of the central shaft	4/8 ... 9
4.2.5 Disassembly of clutch K1/K2	4/10 ... 13
4.2.6 Disassembly of planetary drive P3	4/13 ... 15
4.2.7 Disassembly of planetary drive P2	4/15 ... 17
4.2.8 Disassembly of planetary drive P1	4/17 ... 18
4.3 Disassembly of the hydrostatic unit	4/19 ... 23

<b>CONTENTS</b>	Chapter / Page
<b>REASSEMBLY</b>	<b>5/1 ... 8/12</b>
<b><u>5. Reassembly of the clutch housing</u></b>	<b>5/1 ... 44</b>
5.1 Reassembly of the hydrostatic unit	5/3 ... 7
5.2 Reassembly of the drum selector gear (planetary transmission)	5/8 ... 40
5.2.1 Reassembly of planetary drive P1	5/8 ... 11
5.2.2 Reassembly of planetary drive P2	5/11 ... 13
5.2.3 Reassembly of planetary drive P3	5/14 ... 18
5.2.4 Reassembly of clutch K1/K2	5/18 ... 25
5.2.5 Reassembly of the central shaft	5/25 ... 27
5.2.6 Reassembly of planetary drive P4	5/27 ... 31
5.2.7 Reassembly of clutch K3/K4	5/31 ... 40
5.3 Reassembly of the multi-disk brake (BG)	5/41 ... 44
<b><u>6. Reassembly of the intermediate housing</u></b>	<b>6/1 ... 34</b>
6.1 Reassembly of the input shaft (hydrostatic unit)	6/3
6.2 Reassembly of the intermediate gear	6/4 ... 5
6.3 Reassembly of the central shaft (clutch KV/KR)	6/6 ... 7
6.4 Reassembly of the output gear	6/8 ... 11
6.5 Reassembly of the pump	6/12 ... 13
6.6 Reassembly of clutch KV/KR	6/14 ... 27
6.6.1 Reassembly of clutch KV	6/15 ... 22
6.6.2 Reassembly of clutch KR	6/22 ... 27
6.7 Reassembly of the front wheel drive	6/28 ... 33
<b><u>7. Joining of the preassembled transmission halves</u></b>	<b>7/1 ... 7</b>
7.1 Setting of the axial play drum selector gear/hollow shaft (KV/KR)	7/1 ... 2
7.2 Setting of the axial play of the KV/KR bearing	7/2 ... 3
7.3 Setting of the axial play of the double gear bearing	7/4 ... 5
7.4 Setting of the axial play of the front wheel drive	7/5 ... 6
<b><u>8. Reassembly of components</u></b>	<b>8/1 ... 12</b>
8.1 Reassembly of the system control block	8/1 ... 4
8.2 Reassembly of the clutch control block	8/5 ... 10
8.3 Reassembly of the speed and inductive sensor	8/11 ... 12

## PREFACE

This documentation has been developed for specialized staff trained by ZF Passau for repair and maintenance work to be made on ZF units.

**This documentation describes a ZF series product with a design level valid at the date of edition.**

Due to the continuous technical upgrading of the product, however, the repair of the unit at your disposal may require both deviating work steps and differing setting and testing data.

We would therefore recommend you to entrust masters and servicemen with the work on your ZF product whose practical and theoretical training is constantly updated in our training school.

The Service Stations established by ZF Friedrichshafen all over the world offer you:

1. Permanently trained staff
2. Specified equipment, e.g. special tools
3. State-of-the-art genuine ZF spare parts

All work is done there with utmost care and reliability.

In addition, repair work carried out by ZF Service Stations is covered by the ZF warranty within the terms of the currently applicable contractual conditions.

Any damage resulting from work which is done in an improper and unprofessional manner by third parties and any consequential costs incurred shall be excluded from this contractual liability.

ZF Passau GmbH

Service Department

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$