

2018 HARLEY-DAVIDSON® SERVICE MANUAL SUPPLEMENT: FLHTKSE MODELS

- Foreword
 - Foreword
 - General
 - How To Use Your Service Manual Supplement
 - Preparation For Service
 - Service Bulletins
 - Use Genuine Replacement Parts
 - Warnings and Cautions
 - Product References
 - Product Registered Marks
 - H-D U.S.A., LLC Trademark Information
 - Contents
- Maintenance
 - FASTENER TORQUE VALUES
 - Fastener Torque Values in this Chapter
 - MAINTENANCE SCHEDULE
 - General +[ENG, WORLD]
 - AIR FILTER ELEMENT
 - General
 - Remove
 - Install
 - LUBRICANTS
 - Change and Check Lubricants
 - REAR SUSPENSION ADJUSTMENTS
 - Manual Suspension Preload
- Chassis
 - FASTENER TORQUE VALUES
 - Fastener Torque Values in this Chapter
 - SPECIFICATIONS: CHASSIS
 - General
 - Vehicle Identification Number (VIN)
 - Vehicle Identification Number (VIN)
 - FRONT AXLE COVERS
 - Replacement
 - WHEELS
 - Front Brake Disc
 - Tire Pressure Monitoring System (TPMS)
 - HANDLEBAR
 - Removal and Installation
 - Hand grips
 - Right Hand Grip
 - Left Hand Grip
 - FOOTBOARDS AND CONTROLS
 - Rider Footboards
 - Shift Levers
 - Rear Brake Pedal Pad
 - Adjustable Passenger Footboards
 - HIGHWAY PEGS
 - Disassembly
 - Removing Clamp
 - Installing Clamp

- Assembly
 - SEAT
 - General
 - Removal
 - Installation
 - RIDER BACKREST
 - Removal
 - Installation
 - Adjusting Tilt Angle
 - Adjusting Front to Rear
 - SADDLEBAGS
 - Removal
 - Install
 - Lock
 - SADDLEBAG LATCH
 - SADDLEBAG SUPPORTS
 - General
 - Removal
 - Installation
 - TOUR-PAK
 - Removal and Installation
 - Luggage Rack
 - Tour-Pak Lock Cover Plate
 - Tour-Pak Bottom Liner
- Engine
 - SPECIFICATIONS: ENGINE
 - General
 - Manufacturing Tolerances
 - SERVICE WEAR LIMITS
 - General
 - Troubleshooting
 - General
- Fuel System
 - FASTENER TORQUE VALUES
 - Fastener Torque Values in this Chapter
 - AIR CLEANER BACKPLATE ASSEMBLY
 - General
 - Remove
 - Install
 - EXHAUST
 - Muffler Shields
 - MUFFLER END CAP
 - Replacement
- Drive
 - SPECIFICATIONS: DRIVE
 - General
 - CLUTCH
 - Clutch Repair
- Transmission
 - SPECIFICATIONS: TRANSMISSION
 - General
- Electrical
 - FASTENER TORQUE VALUES
 - Fastener Torque Values in this Chapter
 - ELECTRICAL PROTECTION

Fuses and Relays

- AUXILIARY LAMPS AND BRACKETS
 - Auxiliary Lamp Housing
- PERIMETER LIGHTING
 - Interior Lamp
 - Saddlebag Lamps
- LED TURN SIGNAL LAMPS
 - LED Assembly
- Tail Lamp Lens
 - Tail Lamp Lens
- Fork Lock
 - Fork Lock
- DASH PANEL AND SWITCHES
 - Remove
 - Installation
- RADIO SOFTWARE UPDATE
 - General
 - Updating Radio Software
- Radio
 - General
 - XM Satellite Radio Module
 - XM Antenna and Bracket
 - XM Radio Activation
 - Wireless Headset Interface Module (WHIM)
- Audio Amplifier
 - Removal
 - Installation
- GARAGE DOOR OPENER
 - Transmitter
 - Receiver
 - Remote Control Garage Door Opener
- POWER LOCKS
 - Power Locks: Tour-Pak
 - Actuator: Saddlebag
 - KEY FOB
 - Relay Bracket
- Initial Diagnostics
 - Description and Operation
 - Symptoms
- No Vehicle Power, DTC U0140
 - Description and Operation
 - No Vehicle Power, DTC U0140
- HEATED SEAT DIAGNOSTICS
 - Description and Operation
 - Heated Seat Inoperative
- Power Lock Diagnostics
 - Description and Operation
 - DTC B2188
 - DTC B2193
 - DTC B2231
 - DTC B2232
 - Power Locks Inoperative
 - DTC B2233
 - Power Locks Dash Switch Inoperative
- Garage Door Opener Diagnostics

- Description and Operation
 - Garage Door Opener Inoperative
- PERIMETER LIGHTING DIAGNOSTICS
 - Description and Operation
 - DTC B2198
 - Lamps Inoperative
- BACKLIT HAND CONTROLS INOPERATIVE
 - Description and Operation
 - Backlit Hand Control Buttons Inoperative
- TPMS DIAGNOSTICS
 - Description and Operation
 - DTC C0077
 - DTCs C2000, C2001, C2003, C2004
 - DTCs C2006, C2007
- AUDIO VOLTAGE DIAGNOSTICS
 - Description and Operation
 - DTC B1401
 - DTC B1402
- RADIO DIAGNOSTICS
 - Description and Operation
 - DTC B1337
 - DTC B1339
 - DTC B1340
 - DTC B1345
 - DTC B1347
 - DTC B1348
- AUDIO DIAGNOSTICS
 - Description and Operation
 - DTC B1403, B1404
 - DTC B1410
 - DTC B1411
 - DTC B1412
 - DTC B1413
 - DTC B1420
 - DTC B1421
 - DTC B1422
 - DTC B1423
 - DTC B1430
 - DTC B1431
 - DTC B1432
 - DTC B1433
 - DTC B1440
 - DTC B1441
 - DTC B1442
 - DTC B1443
 - All Speakers Inoperative
 - Left Front Fairing Speaker Low or No Audio
 - Both Left Speakers Low or No Audio
 - Left Speaker Pod No or Low Audio
 - Right Front Fairing Speaker Low or No Audio
 - Both Right Speakers Low or No Audio
 - Right Speaker Pod Low or No Audio
- WIRELESS HEADSET DIAGNOSTICS
 - Description and Operation
 - DTC U0185, U1405

DTC U1302

- Loss of Wireless Headsets
 - Software Update Fails
 - Front Microphone Inoperative
 - Rear Microphone Inoperative
 - Front Headset Right Speaker Inoperative
 - Front Headset Left Speaker Inoperative
 - Rear Headset Right Speaker Inoperative
 - Rear Headset Left Speaker Inoperative
 - Intermittent Volume Level Front or Rear Headsets
- Wiring
 - WIRING DIAGRAMS
 - General
 - Wiring Diagrams
 - WIRE HARNESS CONNECTORS
 - General
 - Connector End Views
 - Connector Locations
 - Reference
 - GLOSSARY
 - Acronyms and Abbreviations
 - METRIC CONVERSION
 - Conversion Table
 - FLUID CONVERSION
 - United States System
 - Metric System
 - British Imperial System
 - TORQUE CONVERSION
 - United States System
 - Metric System
 - Backmatter
 - Backmatter
 - Backmatter
 - Backmatter

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$