

SERVICE MANUAL

Cursor[®] 9 Tier 4B (final) and Stage IV Engine

See the following page for engine model numbers



SERVICE MANUAL

**F2CFE613A*B041, F2CFE613A*B, F2CFE613B*B, F2CFE613C*B006,
F2CFE613C*B041, F2CFE613C*B043, F2CFE613D*B, F2CFE613E*B043 ,
F2CFE613F*B003, F2CFE613F*B041 , F2CFE613G*B001, F2CFE613G*B002,
F2CFE614A*B002, F2CFE614A*B003, F2CFE614A*B, F2CFE614B*B006,
F2CFE614C*B002, F2CFE614C*B003, F2CFE614D*B002, F2CFE614D*B003,
F2CFE614E*B006, F2CFE614F*B004, F2CFE614F*B005, F2CFE614G*B002,
F2CFE614G*B003, F2CFE614H*B004, F2CFE614H*B005**

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.102] Pan and covers	10.2
[10.106] Valve drive and gears	10.3
[10.101] Cylinder heads	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.103] Crankshaft and flywheel.....	10.6
[10.110] Balancer and damper	10.7
[10.114] Pump drives	10.8
[10.210] Lift pump and lines	10.9
[10.206] Fuel filters	10.10
[10.218] Fuel injection system.....	10.11
[10.250] Turbocharger and lines.....	10.12
[10.254] Intake and exhaust manifolds and muffler	10.13
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment	10.14
[10.400] Engine cooling system	10.15
[10.414] Fan and drive	10.16
[10.304] Engine lubrication system.....	10.17
[10.408] Oil cooler and lines.....	10.18
Electrical systems.....	55
[55.015] Engine control system.....	55.1
[55.201] Engine starting system.....	55.2
[55.301] Alternator.....	55.3
[55.010] Fuel injection system.....	55.4
[55.014] Engine intake and exhaust system.....	55.5
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.6

[55.012] Engine cooling system	55.7
[55.013] Engine oil system	55.8
[55.640] Electronic modules	55.9

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$