

# SERVICE MANUAL

## NEF Four Cylinder Mechanical Tier 2 and Stage II Engine

*See the following page for engine model numbers*



## **SERVICE MANUAL**

**F4GE0404B\*D602**

**F4GE0454B\*D601**

**F4GE0454B\*D651**

**F4GE0454E\*D601**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.101] Cylinder heads .....	10.2
[10.102] Pan and covers .....	10.3
[10.103] Crankshaft and flywheel.....	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.106] Valve drive and gears .....	10.6
[10.110] Balancer and damper .....	10.7
[10.114] Pump drives .....	10.8
[10.206] Fuel filters .....	10.9
[10.210] Lift pump and lines .....	10.10
[10.218] Fuel injection system.....	10.11
[10.250] Turbocharger and lines.....	10.12
[10.254] Intake and exhaust manifolds and muffler .....	10.13
[10.304] Engine lubrication system.....	10.14
[10.400] Engine cooling system .....	10.15
[10.408] Oil cooler and lines.....	10.16
[10.414] Fan and drive .....	10.17
Electrical systems.....	55
[55.010] Fuel injection system.....	55.1
[55.012] Engine cooling system .....	55.2
[55.013] Engine oil system .....	55.3
[55.201] Engine starting system.....	55.4
[55.202] Cold start aid .....	55.5
[55.301] Alternator.....	55.6



## INTRODUCTION

# Contents

---

## INTRODUCTION

Foreword - Important notice regarding equipment servicing .....	3
Safety rules .....	4
Safety rules - Ecology and the environment .....	5
Torque .....	6
Torque - Minimum tightening torques for normal assembly .....	8
Basic instructions - Shop and assembly .....	13

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$