
MXU VALUE AND LIMITED SERIES 100, 110, 115, 125, 130, 135, AND MAXXUM VALUE AND PRO SERIES 110, 115, 120, 125, 130, AND 140

SECTION 00 - GENERAL	3
SECTION 01 - SEPARATING THE TRACTOR	3
SECTION 10 - ENGINE	7
SECTION 18 - CLUTCH	19
SECTION 21 - TRANSMISSION SYSTEMS	20
SECTION 23 - DRIVE LINES	28
SECTION 25 - MECHANICAL FRONT AXLE	29
SECTION 27 - MECHANICAL REAR WHEEL DRIVE	33
SECTION 31 - POWER TAKE-OFF	35
SECTION 33 - BRAKING SYSTEM	37
SECTION 35 - HYDRAULIC SYSTEMS	41
SECTION 41 - STEERING	65
SECTION 44 - FRONT AXLE AND WHEELS	68
SECTION 50 - AUXILIARY UNITS	69
SECTION 55 - ELECTRICAL SYSTEM	72

The following pages are the collation of the contents pages from each section and chapter of the MXU Series and Maxxum Series Repair manual. Complete Repair part # 87659930.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the MXU Series and Maxxum Series Tractors.

Some sections of this Repair Manual have been revised to include the New Maxxum Value and Pro Series Models 110, 115, 120, 125, 130, and 140.

Please note the following to locate new Maxxum Tractor Model Repair information:

For complete engine repair information for the new Maxxum Series Tractors use Engine Repair Manual # 87661796.

Most all repairs can be carried out by following the Tractor's systems and specific product configurations in the repair manual. Example; 16 x16 Transmission, Air Conditioning and MXU Value Series Closed Center Hydraulic System.

"MXU Value Series" Repair Information also applies to the New Maxxum Value Series Models.

Where Specific Maxxum Tractor Models are not identified use the following MXU to Maxxum cross reference:

Maxxum Tractor Models	Use MXU tractor Model
Maxxum 110	MXU 110
Maxxum 115	MXU 115
Maxxum 120	MXU 110
Maxxum 125	MXU 125
Maxxum 130	MXU 130
Maxxum 140	MXU 135

SECTION 00 - GENERAL

BOOK 1 - 87520738

Chapter 1 - General Information

CONTENT

Section	Description	Page
00 000	General Instructions	2
	Precautionary Statements	3
	Health and Safety	7
	Ecology and the Environment	15
	Product Identification	16
	International Symbols	19
	Specifications - Limited Models	20
	General Dimensions	20
	Specifications - Value Tractors	27
	General Dimensions	27
	Minimum Hardware Tightening Torques	34

SECTION 01 - SEPARATING THE TRACTOR

BOOK 1 - 87520738

Chapter 1 - Separating Front Axle and Front Support from the Engine

CONTENT

Tightening Torques	2
Special Tools	2
Overhaul	3
Front Axle and Front Support	3
Removal	3
Installation	8
Front Axle to Support Shim Thickness Calculation	13

SECTION 01 - SEPARATING THE TRACTOR

BOOK 1 - 87520738

Chapter 2 - Separating Engine and Front Support from the Transmission

CONTENT

Section	Description	Page
	Tightening Torques	2
	Special Tools	2
	Overhaul	3
	Engine and Front Support from the Transmission	3
	Removal	3
	Installation	10

SECTION 01 - SEPARATING THE TRACTOR

BOOK 1 - 87520738

Chapter 3 - Separating Transmission, Engine and Front Support from the Rear Axle

CONTENT

Section	Description	Page
	Tightening Torques	2
	Special Tools	2
	Overhaul	3
	Transmission, Engine and Front Support from the Rear Axle	3
	Removal	3
	Installation	7

SECTION 01 - SEPARATING THE TRACTOR

BOOK 1 - 87520738

Chapter 4 - Engine Removal

CONTENT

Section	Description	Page
	Tightening Torques	2
	Special Tools	2
	Overhaul	3
	Engine	3
	Removal	3
	Installation	12

SECTION 01 - SEPARATING THE TRACTOR

BOOK 1 - 87520738

Chapter 5 - Transmission Removal

CONTENT

Section	Description	Page
	Tightening Torques	2
	Special Tools	2
	Overhaul	3
	Transmission	3
	Removal	3
	Installation	6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$