




SERVICE MANUAL
WHEEL LOADER
521E
TIER 3

84243970
(Replaces 87728450)

Revised June 2009
Issued February 2008

Please cut where indicated and place the label on the spine of the binder

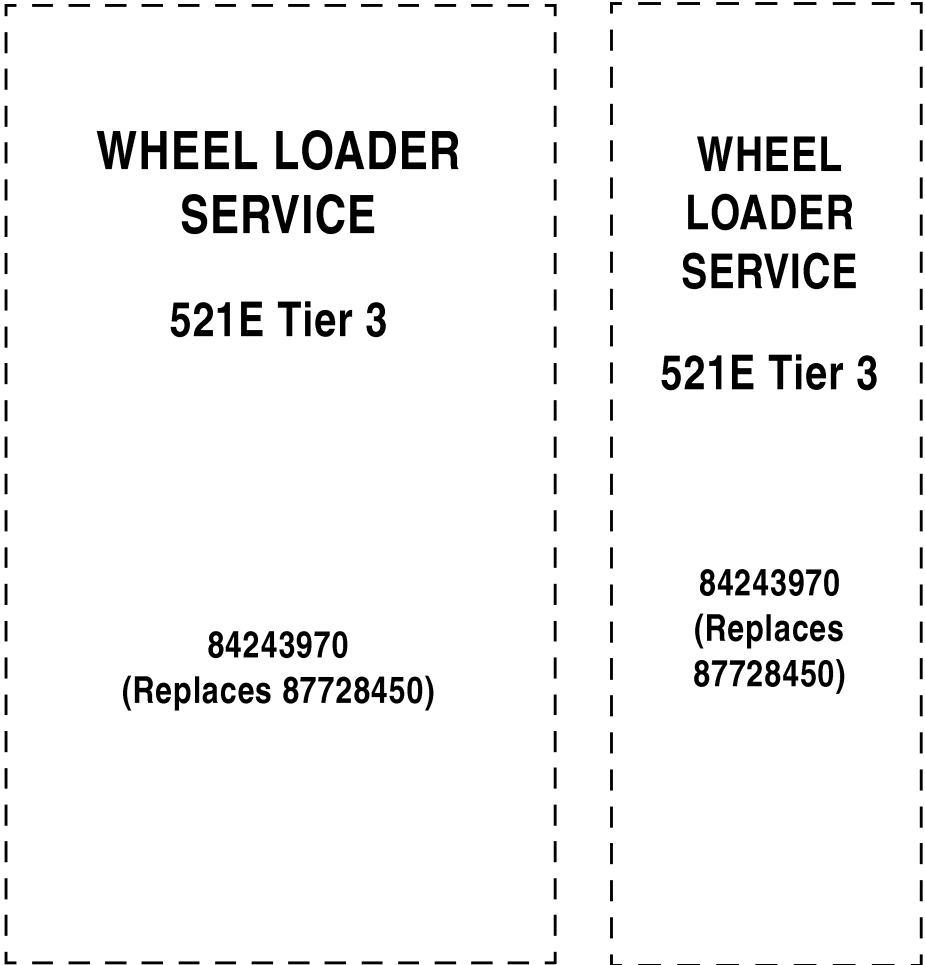

**521E Wheel Loader
Service Manual
84243970 (Replaces 87728450)**

Table of Contents

Description	Section No.	Form No.
General		
	Tab 1	
Section Index - General		5-10830
Standard Torque Specifications	1001	8-71603
Fluids and Lubricants	1002	5-10840
Metric Conversion Chart	1003	7-52950
Engines		
	Tab 2	
Section Index - Engines		5-10850
Engine and Radiator Removal and Installation	2000	5-10860
Stall Tests	2002	5-10870
After Cooler	2003	6-49850
For Engine Repair, See the Engine Service Manual		87630273
Fuel System		
	Tab 3	
Section Index - Fuel System		5-11830
For Fuel System Repair, See the Engine Service Manual		87630273
Electrical		
	Tab 4	
Section Index - Electrical		5-10880
Removal and Installation of Starter and Alternator	4001	5-10890
Electrical Specifications and Troubleshooting	4002	5-11190
Batteries	4003	6-42331
Instrument Cluster	4005	5-10900
Steering		
	Tab 5	
Section Index - Steering		5-10911
Removal and Installation of Steering Components	5001	5-10920
Steering Specifications, Pressure Checks, and Troubleshooting	5002	5-7410
Steering Cylinders	5005	5-10930
Center Pivot	5006	5-10940
Auxiliary Steering Motor and Pump	5008	5-10950
Joystick Steering	5009	5-17000

521E Wheel Loader Service Manual 84243970 (Replaces 87728450)

Table of Contents

Description	Section No.	Form No.
Power Train		
	Tab 6	
Section Index - Power Train		5-10960
Removal and Installation of Power Train Components	6001	5-10970
Transmission Specifications, Pressure Checks, and Troubleshooting	6002	5-11840
Transmission	6003	5-11820
Front Axle	6004	5-10980
Rear Axle	6004	84243973 Replaces 5-10990
Drive Shafts, Center Bearing, and Universal Joints	6005	5-11000
Wheels and Tires	6006	5-11010
Transmission Control Valve	6007	6-81450
Brakes		
	Tab 7	
Section Index - Brakes		5-11020
Removal and Installation of Brake Components	7001	5-11030
Hydraulic Brake Troubleshooting	7002	5-11040
Brake Pump	7003	5-11050
Brake Accumulators	7004	5-11060
Parking Brake	7008	5-11070
Hydraulics		
	Tab 8	
Section Index - Hydraulics		5-11080
How to Read Hydraulic Schematics	8000	5-5670
Removal and Installation of Hydraulic Components	8001	5-11090
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	5-11100
Cleaning the Hydraulic System	8003	7-49641
Loader Control Valve	8005	5-11110
Cylinders	8006	5-11610
Coupler Solenoid Locking Valve	8007	6-42600
Ride Control Accumulator	8013	5-11120
Ride Control Valve	8014	5-3010

**521E Wheel Loader
Service Manual
84243970 (Replaces 87728450)**

Table of Contents

Description	Section No.	Form No.
Mounted Equipment		Tab 9
Section Index - Mounted Equipment		5-11130
Air Conditioning Troubleshooting and System Checks	9002	5-4030
Air Conditioner System Service	9003	5-11140
Removal And Installation Of Air Conditioning And Heater Components	9004	5-11150
Loader	9006	5-11160
Roll Over Protective Structure (ROPS), Cab Structural Frame (CSF)	9007	5-11170
Cab Glass Installation	9010	6-42710
Electrical Schematic Foldouts and Hydraulic Schematic Foldout	In Rear Pocket	5-11180

NOTE: *CNH America LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.*

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$