

REPAIR MANUAL
LOADER BACKHOE
580M
580 SUPER M
580 SUPER M+
590 SUPER M
590 SUPER M+
SERIES 3
87728449NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

REPAIR MANUAL
LOADER BACKHOE
580M
580 SUPER M
580 SUPER M+
590 SUPER M
590 SUPER M+
SERIES 3
87728449NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

REPAIR MANUAL
LOADER BACKHOE
580M
580 SUPER M
580 SUPER M+
590 SUPER M
590 SUPER M+
SERIES 3
87728449NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

REPAIR MANUAL
LOADER BACKHOE
580M
580 SUPER M
580 SUPER M+
590 SUPER M
590 SUPER M+
SERIES 3
87728449NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

M SERIES 3 LOADER/BACKHOE

Service Manual

Bur 87728449

Table of Contents

Description	Section Number	Publication Form Number
General		Tab 1
Section Index - General		5-11910
Standard Torque Specifications	1001	8-71603
Fluids and Lubricants	1002	5-11920
Metric Conversion Chart	1003	7-52950
Engine		Tab 2
Section Index - Engine		5-11930
Engine and Radiator Removal and Installation 580M	2000	5-11940
Engine and Radiator Removal and Installation 580SM, 580SM+, 590SM and 590SM+	2000	5-11950
Stall Test	2002	5-11960
Counter Balance Removal and Installation	2447	6-74700
<i>NOTE: For Engine Repair See Engine Service Manual 87630273.</i>		
Fuel System		Tab 3
Section Index - Fuel System		5-11970
In Vehicle Injector Pump Removal and Installation 580M	3416	5-11980
<i>NOTE: For Fuel System Repair See Engine Service Manual 87630273.</i>		
Electrical		Tab 4
Section Index - Electrical		5-11990
Removal and Installation of Electrical Components	4000	6-74530
Electrical Specifications and Troubleshooting 580M	4001	5-12000
Electrical Specifications and Troubleshooting 580SM, 580SM+, 590SM and 590SM+	4001	5-12010
Batteries	4003	6-42331
Starter and Starter Solenoid	4004	6-74560
Instrument Cluster and Fault Codes	4005	5-12020

M SERIES 3 LOADER/BACKHOE

Service Manual

Bur 87728449

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Steering		Tab 5
Section Index - Steering		5-12030
Removal and Installation of Steering Components	5000	5-12040
Steering Specification, Pressure Checks and Troubleshooting	5001	5-12050
Steering Control Valve Standard Steering	5002	5-12060
Steering Cylinders	5003	5-12070
Front Axle - Two Wheel Drive	5005	6-74640
Front Axle - Four Wheel Drive 580M and 580SM	5006	5-12080
Front Axle - Four Wheel Drive 580SM+, 590SM and 590SM+	5006	5-12090
Power Train		Tab 6
Section Index - Power Train		5-12100
Removal and Installation of Power Train Components	6000	5-12110
Standard Transmission Specifications, Pressure Checks, and Troubleshooting	6002	5-12120
Power Shift Transmission Specifications, Pressure Checks, and Troubleshooting	6002	5-12130
Wheels and Tires	6003	6-74730
Rear Axle and Planetaries - 580M and 580SM	6004	5-12140
Rear Axle and Planetaries - 580SM+, 590SM and 590SM+	6004	5-12150
Standard Transmission	6007	5-12160
Power Shift Transmission	6007	5-12170
Brakes		Tab 7
Section Index - Brakes		5-12180
Removal and Installation of Brake Components	7000	5-12190
Hydraulic Brake Troubleshooting	7002	5-12200
Hydraulics		Tab 8
Section Index - Hydraulics		5-12210
Removal and Installation of Hydraulic Components	8001	5-12220
Hydraulic System Specifications and Troubleshooting For 580M, 580SM and 590SM With Mechanical Controls	8002	5-12230
Hydraulic System Specifications and Troubleshooting For 580M and 580SM With Pilot Controls	8002	5-12240
Hydraulic System Specifications and Troubleshooting For 580SM+ and 590SM+	8002	5-12250
Cleaning the Hydraulic System and Hydrostatic System	8003	7-49641
Gear Hydraulic Pump - 580SM and 590SM	8004	5-12260
Cylinders	8006	6-74920

M SERIES 3 LOADER/BACKHOE

Service Manual

Bur 87728449

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Hydraulics (Cont)		Tab 8
Backhoe Control Valve Mechanical Controls	8007	6-74931
Backhoe Control Valve Pilot Controls For 580M and 580SM	8007	5-12270
Accumulator for Machines With Ride Control and Pilot Control Accumulator	8009	6-74960
Solenoid Valve for Machines with Optional Ride Control	8010	6-74970
Boom Lock Solenoid Valve	8011	6-74980
Quick Coupler	8012	5-11280
Swing Dampening Valve	8013	6-75000
Pilot Control Unit	8014	5-12290
Proportional Pilot Pressure Control	8015	6-79960
Mounted Equipment		Tab 9
Section Index - Mounted Equipment		5-12300
Pedals and Levers	9001	5-12310
Air Conditioning Troubleshooting	9002	5-12320
Air Conditioning System Service	9004	5-12330
Air Conditioning Components Service	9005	5-12340
Loader	9006	5-12350
ROPS Cab and Canopy	9007	5-12360
Backhoe	9008	5-12370
Standard and Mechanical Suspension Seat	9009	6-80000
Air Suspension Seat	9010	6-75111
Rear Window Replacement	9012	6-75040
Schematic Set		
Hydraulic and Electrical Schematics	In Rear Pocket	5-12380

NOTE: CNH Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$