

586G 588G SERIES 3 TIER 3 FORKLIFT
Repair Manual
Bur 87728464
Table of Contents

Description	Section Number	Publication Form Number
General		Tab 1
Section Index - General		5-12840
Standard Torque Specifications	1001	8-71603
Fluids and Lubricants	1002	5-12850
Metric Conversion Chart	1003	7-52950
Engine		Tab 2
Section Index - Engine		5-12860
Engine and Radiator Removal and Installation	2000	5-12870
Stall Test	2002	5-12880
Diagnosing Engine Oil Consumption	2445	5-13620
Engine Balancer	2447	5-12890
Turbocharger Diagnosis Procedure Family 3 Engines	2465	5-13630
<i>NOTE: For Engine Repair See Engine Repair Manual 87630273.</i>		
Fuel System		Tab 3
Section Index - Fuel System		5-12900
In Vehicle Injector Pump Removal and Installation	3416	5-12910
<i>NOTE: For Fuel System Repair See Engine Repair Manual 87630273.</i>		
Electrical		Tab 4
Section Index - Electrical		5-12920
Removal and Installation of Electrical Components	4000	5-12930
Electrical Specifications and Troubleshooting	4001	5-12940
Batteries	4003	6-42331
Starter and Starter Solenoid	4004	6-74560
Steering		Tab 5
Section Index - Steering		5-12960
Removal and Installation of Steering Components	5000	5-12970
Steering Specification, Pressure Checks and Troubleshooting	5001	5-12980
Steering Control Valve	5002	5-12990
Steering Cylinders	5003	5-13610
Steering Axle - Two Wheel Drive	5005	5-13000
Steering Axle - Four Wheel Drive	5006	5-13010

586G 588G SERIES 3 TIER 3 FORKLIFT Repair Manual Bur 87728464

Table of Contents (Continued)

Description	Section Number	Publication Form Number
Power Train		Tab 6
Section Index - Power Train		5-13020
Removal and Installation of Power Train Components	6000	5-13030
Standard Transmission Specifications, Pressure Checks, and Troubleshooting	6002	6-74710
Wheels and Tires	6003	5-13040
Drive Axle and Planetaries	6004	5-13050
Standard Transmission	6007	6-74782
Brakes		Tab 7
Section Index - Brakes		5-13060
Removal and Installation of Brake Components	7000	5-13070
Hydraulic Brake Troubleshooting	7002	5-13080
Master Cylinder	7003	6-74830
Hydraulics		Tab 8
Section Index - Hydraulics		5-13090
Removal and Installation of Hydraulic Components	8001	5-13100
Hydraulic System Specifications and Troubleshooting	8002	5-13110
Cleaning the Hydraulic System and Hydrostatic System	8003	7-49641
Hydraulic Pump	8004	5-13120
Control Valve	8005	5-13130
Flow Control Priority Valve	8006	5-13140
Cylinders	8007	5-13150
Mounted Equipment		Tab 9
Section Index - Mounted Equipment		5-13160
Pedals and Levers	9001	5-13170
ROPS Canopy	9007	5-13180
Seat and Seat Belt	9009	5-13190
Forklift Mast	9010	5-13200
Schematic Set		
Hydraulic and Electrical Schematics	In Rear Pocket	5-13210

NOTE: CNH Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

SECTION INDEX

GENERAL

Section Title	Section Number
Standard Torque Specifications	1001
Fluid and Lubricants	1002
Metric Conversion Chart	1003

Section 1001

GENERAL TORQUE SPECIFICATIONS

TABLE OF CONTENTS

TORQUE SPECIFICATIONS - DECIMAL HARDWARE	3
TORQUE SPECIFICATIONS - METRIC HARDWARE	4
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS	5
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS	6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$