

# **721E** **Wheel Loader**

## **Service Manual**

**Part Number**

**71114022**

2<sup>nd</sup> Edition

English 02/2016

**CASE**  
CONSTRUCTION



## **SERVICE MANUAL**

**721E Tier3 XT. [N8AE12517 - ]**  
**721E Tier3 Z-bar Bagage suggar. [N8AE12525 - ]**  
**721E Tier3 Z-bar Fertilizer. [ N8AE12547 - ]**  
**721E Tier3 Z-bar. [N7AE12500 - ]**

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
721E Tier3 Z-bar. [N7AE12500 - ]	Latin America	F4HE9684F*J100
721E Tier3 Z-bar Fertilizer. [ N8AE12547 - ]	Latin America	F4HE9684F*J100
721E Tier3 Z-bar Bagage suggar. [N8AE12525 - ]	Latin America	F4HE9684F*J100
721E Tier3 XT. [N8AE12517 - ]	Latin America	F4HE9684F*J100

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.400] Engine cooling system .....	10.2
[10.310] Aftercooler.....	10.3
<b>Transmission</b> .....	<b>21</b>
[21.113] Powershift transmission .....	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.155] Powershift transmission internal components.....	21.3
[21.145] Gearbox internal components.....	21.4
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Brakes and controls</b> .....	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.359] Main control valve .....	35.2
[35.701] Front loader arm hydraulic system .....	35.3
<b>Steering</b> .....	<b>41</b>
[41.910] Auxiliary steering .....	41.1

Wheels .....	44
[44.511] Front wheels .....	44.1
Cab climate control .....	50
[50.200] Air conditioning .....	50.1
Electrical systems .....	55
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors .....	55.2
[55.015] Engine control system .....	55.3
[55.201] Engine starting system .....	55.4
[55.301] Alternator .....	55.5
[55.302] Battery .....	55.6
[55.202] Cold start aid .....	55.7
[55.011] Fuel tank system .....	55.8
[55.012] Engine cooling system .....	55.9
[55.519] Cab brake controls .....	55.10
[55.030] Service brake electrical system .....	55.11
[55.031] Parking brake electrical system .....	55.12
[55.512] Cab controls .....	55.13
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls .....	55.14
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system .....	55.15
[55.047] Steering control system .....	55.16
[55.524] Cab controls (Lift arm, Boom, Dipper, Bucket) .....	55.17
[55.415] Loader arm and bucket control system .....	55.18
[55.518] Wiper and washer system .....	55.19
[55.510] Cab or platform harnesses and connectors .....	55.20
[55.408] Warning indicators, alarms, and instruments .....	55.21
[55.DTC] FAULT CODES .....	55.22
Platform, cab, bodywork, and decals .....	90

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$