



SERVICE MANUAL
WHEEL LOADER
821E
TIER 3

84299244
(Replaces 87364100)

Revised December 2009
Issued September 2006

Please cut where indicated and place the label on the spine of the binder

**WHEEL LOADER
SERVICE**

821E Tier 3

**84299244
(Replaces 87364100)**

**WHEEL
LOADER
SERVICE**

821E Tier 3

**84299244
(Replaces
87364100)**

**821E Wheel Loader
Service Manual 84299244
(Replaces 87364100)**

Table of Contents

Description	Section No.	Form No.
General Tab 1		
Section Index - General		5-3090
Standard Torque Specifications	1001	8-71603
Fluids and Lubricants	1002	5-3100
Metric Conversion Chart	1003	7-52950
Engines Tab 2		
Section Index - Engines		5-3110
Engine and Radiator Removal and Installation	2000	5-2700
Stall Tests	2002	5-3120
After Cooler	2003	6-49850
For Engine Repair, See the Engine Service Manual		87519803
Fuel System Tab 3		
Section Index - Fuel System		5-3130
For Fuel System Repair, See the Engine Service Manual		
Electrical Tab 4		
Section Index - Electrical		5-3140
Removal and Installation of Starter and Alternator	4001	5-2740
Electrical Specifications and Troubleshooting	4002	5-2750
Batteries	4003	6-42330
Instrument Cluster	4005	5-2760
Steering Tab 5		
Section Index - Steering		84299247 (Replaces 5-3150)
Removal and Installation of Steering Components	5001	5-2780
Steering Specifications, Pressure Checks, and Troubleshooting	5002	5-2790
Steering Cylinders	5005	5-3160
Center Pivot	5006	5-3170
Auxiliary Steering Motor and Pump	5008	6-42430
Joystick Steering	5009	5-15960

821E Wheel Loader Service Manual 84299244 (Replaces 87364100)

Table of Contents

Description	Section No.	Form No.
Power Train		
	Tab 6	
Section Index - Power Train		5-3180
Removal and Installation of Power Train Components	6001	5-4010
Transmission Specifications, Pressure Checks, and Troubleshooting	6002	5-2840
Transmission	6003	5-2850
Front Axle	6004	5-3190
Rear Axle	6004	5-3200
Drive Shafts, Center Bearing, and Universal Joints	6005	5-3210
Wheels and Tires	6006	5-3220
Transmission Control Valve	6007	6-81450
Brakes		
	Tab 7	
Section Index - Brakes		5-3230
Removal and Installation of Brake Components	7001	5-3240
Hydraulic Brake Troubleshooting	7002	5-3250
Brake Pump	7003	5-2920
Brake Accumulators	7004	6-47761
Parking Brake	7008	5-2930
Hydraulics		
	Tab 8	
Section Index - Hydraulics		5-3260
Removal and Installation of Hydraulic Components	8001	5-4050
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	5-3270
Cleaning the Hydraulic System	8003	7-49641
Hydraulic Pump	8004	5-2970
Loader Control Valve	8005	5-2980
Cylinders	8006	5-3280
Coupler Solenoid Locking Valve	8007	6-42600
Ride Control Accumulator	8013	5-3000
Ride Control Valve	8014	5-3010

**821E Wheel Loader
Service Manual 84299244
(Replaces 87364100)**

Table of Contents

Description	Section No.	Form No.
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		5-3290
Air Conditioning Troubleshooting and System Checks For Systems with HFC-134a Refrigerant	9002	5-4030
Air Conditioner System Service	9003	5-3030
Removal and Installation of Air Conditioning and Heater Components	9004	5-3040
Loader	9006	5-3300
Rollover Protective Structure (ROPS) Cab Structural Frame (CSF)	9007	5-4070
Cab Glass Installation	9010	6-42710
Electrical Schematic Foldouts and Hydraulic Schematic Foldout	In Rear Pocket	5-3310

NOTE: CNH America LLC. reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$