CX210B CX230B CX240B Crawler Excavator

SERVICE MANUAL

Part number 47780297

English

October 2014

Copyright © 2014 CNH Industrial Italia S.p.A. All Rights Reserved.



CRAWLER EXCAVATOR CX210B-CX230B-CX240B SERVICE MANUAL

TABLE OF CONTENTS

DIVISION/SECTION SECT		SECTION N°	REFERENCE N°
1	GENERAL INFORMATION Safety, general information and torque specifications Specifications and special torque settings		7-27691EN SC210B1002-1EN
2	Removal and installation of the engine	2001 2004 2005 2006	SM210B2000-1EN SM210B2001-0EN SM210B2004-0EN SM210B2005-0EN SM210B2006-0EN
3	FUEL SYSTEM Removal and installation of the fuel tank	3004 3005	SM210B3001-0EN SM130B3004-0EN SM210B3005-0EN
4	Service connector kit	4001 4004 4005 4020 4021 4022	SM350B4000-1EN SM210B4001-2EN SM210B4004-0EN SM210B4005-0EN SM210B4020-1EN SM210B4021-0EN SM210B4022-0EN SM210B4023-0EN
5	UNDERCARRIAGE Removal and installation of tracks Upper and lower rollers Take-up roller	5003	SM130B5001-0EN SM210B5003-0EN SM210B5005-0EN
6	DRIVE TRAIN Removal and installation of the drive motor and final drive transmission	6002 6003 6003 6004	SM130B6001-0EN SM210B6002-0EN SM210B6003-0EN SM240B6003-0EN SM210B6004-1EN SM240B6004-1EN
7	UNDERCARRIAGE HYDRAULICS		

^{*} Consult the Engine Service Manual

DIVISION/SECTION	SECTION N°	REFERENCE N°
8 UPPERSTRUCTURE HYDRAULICS Specifications, troubleshooting, inspections and		
hydraulic pressure settings	8001	SM210B8001-3EN
Removal and installation of the hydraulic reservoir	8002	SM210B8002-0EN
Removal and installation of the main hydraulic pump	8003	SM210B8003-1EN
Removal and installation of the main hydraulic control valve	8004	SM210B8004-1EN
Removal and installation of the attachment cylinders	8005	SM210B8005-0EN
Removal and installation of the hydraulic swivel	8006	SM210B8006-0EN
Removal and installation of the pilot function blocks	8007	SM210B8007-0EN
Disassembly and assembly of the main hydraulic pump	8010	SM210B8010-1EN
Disassembly and assembly of the main hydraulic pump, CX2	210B NLC8010	SM210BNLC-8010-0EN
Disassembly and assembly of the main hydraulic control valv	/e8011	SM350B8011-0EN
Disassembly and assembly of the attachment cylinders	8012	SM130B8012-0EN
Disassembly and assembly of the hand control levers	8013	SM130B8013-0EN
Disassembly and assembly of the foot control pedals		SM130B8014-0EN
Disassembly and assembly of the cushion control valve	8016	SM130B8016-0EN
Removal and installation of the safety valve	8017	SM210B8017-0EN
Disassembly and assembly of the swing motor, CX210B-CX2	230B8019	SM210B8019-0EN
Disassembly and assembly of the swing motor, CX240B	8019	SM240B8019-1EN
Hydraulic functions	8020	SC210B8020-2EN
Hydraulic component functions	8030	SC210B8030-0EN
9 UPPERSTRUCTURE		
Removal and installation of the counterweight	9002	SM210B9002-0EN
Removal and installation of the boom, dipper and bucket	9003	SM210B9003-0EN
Removal and installation of the seat	9004	SM130B9004-0EN
Removal and installation of the cab and cab equipment	9005	SM130B9005-0EN
Air conditioner functions and troubleshooting	9006	SC210B9006-3EN
Air conditioning unit	9007	SM130B9007-0EN
Air conditioning components	9009	SM210B9009-0EN
Large size hydraulic schematics, CX210B	Pocket	KRJ10100
Large size hydraulic schematics, CX210B LR		KRJ20680
Large size hydraulic schematics, CX210B-CX230B NLC & 21	PCPocket	KRJ19670
Large size hydraulic schematics, CX240B		KBJ12720
Large size hydraulic schematics, CX240B LR	Pocket	KBJ12740
Large size electrical schematics		KRR13270
Large size electrical schematics	Pocket	KRR13280

NOTE: CNH Industrial Italia S.p.A. reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

All data given in this manual is subject to production variations. Dimensions and weights are provided with approximate values and the machine fitting shown in the illustrations may not correspond with standard models. For precise information on specific machine models and versions, please contact your CASE dealer.

Reproduction or translation, even partial, is prohibited without written authorization from CNH Industrial Italia S.p.A.

Section 1001

SAFETY, GENERAL INFORMATION AND TORQUE SPECIFICATIONS

TABLE OF CONTENTS

GENERAL INFORMATION	3
SAFETY	. 4
STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS	
STANDARD TORQUE DATATOR CAP SCILLING AND INCTO	0

 Λ

WARNING: This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.

It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$