
DX55

SSS - PIN Number Z7NFP1001 and Above
EHSS - PIN Number Z7NFS1001 and Above

DX60

REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	12
SECTION 21 - TRANSMISSION	13
SECTION 23 - FWD DRIVELINE	21
SECTION 25 - FWD FRONT AXLE	22
SECTION 27 - DIFFERENTIAL, REAR AXLE	23
SECTION 31 - POWER TAKE-OFF (PTO)	25
SECTION 33 - BRAKES	26
SECTION 35 - HYDRAULIC SYSTEM	27
SECTION 41 - STEERING	31
SECTION 44 - WHEELS AND TIRES	33
SECTION 50 - CLIMATE CONTROL	34
SECTION 55 - ELECTRICAL SYSTEM	38
SECTION 90 - PLATFORM	56

The following pages are the collation of the contents pages from each section and chapter of the DX55, DX60 Repair manual. Complete Repair part # 84140461.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the DX55, DX60 Tractors.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87711137

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Precautionary Statements	3
	Personal Safety	3
	Machine Safety	3
	Information	3
	Safety	4
	Precautionary Statements	4
	The Tractor	4
	Servicing the Tractor	4
	Operating the Tractor	5
	Driving the Tractor	5
	Operating the PTO	6
	Diesel Fuel	6
	Safety Frame (ROPS)	6
	Safety Decals	7
	Instruction Decals	10
	Decal Placement Guide	13
	Ecology and the Environment	14
	Helpful Hints	14
	Universal Symbols	15
	General Information	16
	Minimum Hardware Tightening Torques	17
	Lubrication	19
	General Information	19
	Grease Fittings	19
	Recommended Lubricants	20
	Lubrication and Maintenance Chart DX55, DX60 — Front-wheel Drive	21
	Lubrication Fittings	22
	Diesel Fuel	22
	Fuel Usage Safety	22
	Specifications	23

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87711137

Chapter 1 - General Information (Continued)

CONTENTS

Section	Description	Page
	General Dimensions	32
	Wheel Tread Settings	35
	Front Axle (FWD) (Not Adjustable)	35
	Rear Axle (FWD)	35
	Liquid Ballast (Optional)	38
	Tire Pressure	38
	Rear Tire Liquid	38
	Ballast Weights (Per Tire)	38

SECTION 10 - ENGINE

BOOK 1 - 87711137

Chapter 1 - Engine Components

CONTENTS

Section	Description	Page
	Specifications	6
	Metric Bolt Torque Specifications	11
	Special Tools	11
	Compression Test and Tools	12
	Description of Operation - General Information	13
	Troubleshooting	14
	Cylinder Head and Valve Train Components	18
	Cylinder Block Assembly	18
	Engine	19
	Removal	19
	Installation	20
	Overhaul	21
	Engine	21

SECTION 10 - ENGINE

BOOK 1 - 87711137

Chapter 1 - Engine Components (Continued)

CONTENTS

Section	Description	Page
	Alternator	21
	Removal	21
	Cooling Fan and Pulley	21
	Removal	21
	Glow Plug and Connector	21
	Removal	21
	Nozzle/Holder	22
	Removal	22
	Fuel Injection Pipe	22
	Removal	22
	Injector	22
	Removal	22
	Water Pump	22
	Removal	22
	Cover/Intake Manifold/Exhaust Manifold	23
	Removal	23
	External Oil Pipe	23
	Removal	23
	Rocker Assembly	24
	Removal	24
	Cylinder Head	24
	Removal	24
	Tappets	24
	Removal	24
	Fuel Stop Solenoid	25
	Removal	25
	Timing Gear Cover	25
	Removal	25
	Timing Gears and Camshaft	27
	Removal	27
	Front End Plate	28
	Removal	28
	Oil Sump	28
	Removal	28

SECTION 10 - ENGINE

BOOK 1 - 87711137

Chapter 1 - Engine Components (Continued)

CONTENTS

Section	Description	Page
	Oil Suction Pipe and Strainer	29
	Removal	29
	Balancer Assembly	29
	Removal	29
	Connecting Rods, Bearings and Pistons, Rings	30
	Removal	30
	Flywheel	30
	Removal	30
	Backplate and Oil Seal	31
	Removal	31
	Crankshaft and Main Bearings	31
	Removal	31
	Rocker Arm Assembly	32
	Disassembly	32
	Inspection and Repair	32
	Timing Gear	33
	Inspection	33
	Camshaft	33
	Disassembly	33
	Inspection	33
	Oil Pump	34
	Disassembly	34
	Inspection	34
	Assembly	34
	Cylinder Head	35
	Disassembly	35
	Inspection and Repair	35
	Valves	36
	Valve Guides	36
	Valve Seat	37
	Valve Springs	38
	Rocker Arms	39
	Push Rods	40
	Rocker Arm Shaft	40
	Installation	40

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$