

**FARMALL® 105U EP  
FARMALL® 115U EP  
With 16x16 Semi-Powershift Transmission  
Tractor**

*FARMALL® 105U EP PIN ZxJKxxxxx and above  
FARMALL® 115U EP PIN ZEJK14976 and above*

**SERVICE MANUAL**

**Part number 47841819**

1<sup>st</sup> edition English

February 2015





## **SERVICE MANUAL**

**Farmall® 105U EP with 16x16 Semi-Powershift transmission [ZxJKxxxxx - ]**  
**Farmall® 115U EP with 16x16 Semi-Powershift transmission [ZEJK14976 - ]**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment .....	10.3
[10.414] Fan and drive .....	10.4
Transmission.....	21
[21.111] Semi-Powershift transmission .....	21.1
[21.133] Semi-Powershift transmission external controls .....	21.2
[21.103] Semi-Powershift transmission lubrication system.....	21.3
[21.152] Semi-Powershift transmission internal components .....	21.4
[21.160] Creeper .....	21.5
[21.118] Transmission/Rear drive .....	21.6
Four-Wheel Drive (4WD) system .....	23
[23.202] Electro-hydraulic control .....	23.1
[23.314] Drive shaft.....	23.2
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
[27.126] Spur gear and final drives.....	27.4

<b>Power Take-Off (PTO)</b> .....	<b>31</b>
[31.104] Rear electro-hydraulic control .....	31.1
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.2
[31.116] Three-speed rear Power Take-Off (PTO) .....	31.3
[31.146] Front Power Take-Off (PTO) .....	31.4
<b>Brakes and controls</b> .....	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.220] Trailer brake hydraulic control .....	33.3
[33.224] Trailer brake pneumatic control .....	33.4
[33.204] Front axle brake .....	33.5
<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems .....	35.1
[35.104] Fixed displacement pump .....	35.2
[35.322] Regulated/Low pressure system .....	35.3
[35.204] Remote control valves .....	35.4
[35.114] Three-point hitch control valve .....	35.5
[35.162] Front hitch cylinders and lines .....	35.6
<b>Hitches, drawbars, and implement couplings</b> .....	<b>37</b>
[37.110] Rear three-point hitch .....	37.1
[37.162] Front hitch .....	37.2
<b>Steering</b> .....	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components .....	41.2
[41.216] Cylinders .....	41.3
<b>Cab climate control</b> .....	<b>50</b>
[50.100] Heating .....	50.1
[50.200] Air conditioning .....	50.2

<b>Electrical systems</b> .....	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors .....	55.2
[55.201] Engine starting system .....	55.3
[55.301] Alternator .....	55.4
[55.302] Battery .....	55.5
[55.640] Electronic modules .....	55.6
[55.408] Warning indicators, alarms, and instruments .....	55.7
[55.DTC] FAULT CODES .....	55.8
<b>Platform, cab, bodywork, and decals</b> .....	<b>90</b>
[90.150] Cab .....	90.1
[90.160] Cab interior trim and panels .....	90.2
[90.100] Engine hood and panels .....	90.3

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$