

**FARMALL® 40C**  
**FARMALL® 50C**  
**Tier 4B (final)**  
Compact Tractor

**SERVICE MANUAL**

**Part number 47941906**

2<sup>nd</sup> edition English

March 2016

*Replaces part number 47700459*





## **SERVICE MANUAL**

**Farmall® 40C TIER 4B (FINAL), ROPS  
Farmall® 40C TIER 4B (FINAL), Cab  
Farmall® 50C TIER 4B (FINAL), ROPS  
Farmall® 50C TIER 4B (FINAL), Cab**

## Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
Farmall® 40C TIER 4B (FINAL), ROPS	North America	N844L-F-30
Farmall® 40C TIER 4B (FINAL), Cab	North America	N844L-F-30
Farmall® 50C TIER 4B (FINAL), ROPS	North America	N844L-F-34
Farmall® 50C TIER 4B (FINAL), Cab	North America	N844L-F-34

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.202] Air cleaners and lines .....	10.2
[10.206] Fuel filters .....	10.3
[10.304] Engine lubrication system.....	10.4
[10.400] Engine cooling system .....	10.5
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.6
<b>Clutch</b> .....	<b>18</b>
[18.100] Clutch mechanical release control .....	18.1
[18.110] Clutch and components .....	18.2
[18.112] Slip clutch or flywheel damper .....	18.3
<b>Transmission</b> .....	<b>21</b>
[21.114] Mechanical transmission .....	21.1
[21.140] Mechanical transmission internal components.....	21.2
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.310] Final drives .....	25.4
<b>Rear axle system</b> .....	<b>27</b>
[27.106] Rear bevel gear set and differential .....	27.1
[27.120] Planetary and final drives .....	27.2
<b>Hydrostatic drive</b> .....	<b>29</b>
[29.100] Transmission and steering hydrostatic control .....	29.1
[29.202] Hydrostatic transmission .....	29.2

[29.218] Pump and motor components.....	29.3
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.104] Rear electro-hydraulic control .....	31.2
[31.110] One-speed rear Power Take-Off (PTO) .....	31.3
[31.120] Central Power Take-Off (PTO) .....	31.4
<b>Brakes and controls .....</b>	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
[33.120] Mechanical service brakes .....	33.2
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump .....	35.2
[35.114] Three-point hitch control valve .....	35.3
[35.116] Three-point hitch cylinder .....	35.4
[35.204] Remote control valves .....	35.5
[35.300] Reservoir, cooler, and filters.....	35.6
[35.350] Safety and main relief valves .....	35.7
[35.355] Hydraulic hand control .....	35.8
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.108] Rear three-point hitch external controls.....	37.1
[37.110] Rear three-point hitch .....	37.2
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders .....	41.4
<b>Wheels .....</b>	<b>44</b>

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$