

FARMALL® 90C
FARMALL® 100C
FARMALL® 110C
FARMALL® 120C
Efficient Power
Tier 4B (final)
Tractor

SERVICE MANUAL

Part number 47878246

1st edition English

June 2015





SERVICE MANUAL

Farmall® 100C with cab, with Hi-Lo transmission , Farmall® 100C with cab, with mechanical or Power shuttle transmission , Farmall® 100C without cab, with Hi-Lo transmission , Farmall® 100C without cab, with mechanical or Power shuttle transmission , Farmall® 110C with cab, with Hi-Lo transmission , Farmall® 110C with cab, with mechanical or Power shuttle transmission , Farmall® 110C without cab, with Hi-Lo transmission , Farmall® 110C without cab, with mechanical or Power shuttle transmission , Farmall® 120C with cab, with Hi-Lo transmission , Farmall® 120C with cab, with mechanical or Power shuttle transmission , Farmall® 120C without cab, with Hi-Lo transmission , Farmall® 120C without cab, with mechanical or Power shuttle transmission , Farmall® 90C with cab, with Hi-Lo transmission , Farmall® 90C with cab, with mechanical or Power shuttle transmission , Farmall® 90C without cab, with Hi-Lo transmission , Farmall® 90C without cab, with mechanical or Power shuttle transmission

Link Product / Engine

Product	Market Product	Engine
Farmall® 100C without cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
Farmall® 100C with cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
Farmall® 100C without cab, with Hi-Lo transmission	North America	F5GFL413A*B006
Farmall® 100C with cab, with Hi-Lo transmission	North America	F5GFL413A*B006
Farmall® 110C without cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
Farmall® 110C with cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
Farmall® 110C without cab, with Hi-Lo transmission	North America	F5GFL413A*B006
Farmall® 110C with cab, with Hi-Lo transmission	North America	F5GFL413A*B006
Farmall® 120C without cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
Farmall® 120C with cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
Farmall® 120C without cab, with Hi-Lo transmission	North America	F5GFL413A*B006
Farmall® 120C with cab, with Hi-Lo transmission	North America	F5GFL413A*B006
Farmall® 90C without cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
Farmall® 90C with cab, with mechanical or Power shuttle transmission	North America	F5GFL413A*B007
Farmall® 90C without cab, with Hi-Lo transmission	North America	F5GFL413A*B006
Farmall® 90C with cab, with Hi-Lo transmission	North America	F5GFL413A*B006

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.202] Air cleaners and lines	10.3
[10.254] Intake and exhaust manifolds and muffler	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
[10.400] Engine cooling system	10.6
[10.414] Fan and drive	10.7
[10.310] Aftercooler.....	10.8
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components	18.3
Transmission	21
[21.130] Mechanical transmission external controls.....	21.1
[21.112] Power shuttle transmission.....	21.2
[21.110] Master clutch housing	21.3
[21.134] Power shuttle transmission external controls	21.4
[21.154] Power shuttle transmission internal components	21.5
[21.160] Creeper	21.6
[21.162] Reverser	21.7
[21.168] Hi-Lo unit.....	21.8
[21.109] Transmission cooler and lines.....	21.9
[21.118] Transmission/Rear drive	21.10
[21.148] Transmission/Rear drive internal components	21.11
[21.AAA] Transmission generic sub-group	21.12

Four-Wheel Drive (4WD) system	23
[23.101] Mechanical control	23.1
[23.202] Electro-hydraulic control	23.2
[23.314] Drive shaft	23.3
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.400] Non-powered front axle	25.4
Rear axle system	27
[27.106] Rear bevel gear set and differential	27.1
[27.120] Planetary and final drives	27.2
[27.100] Powered rear axle	27.3
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control	31.2
[31.110] One-speed rear Power Take-Off (PTO)	31.3
[31.114] Two-speed rear Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.220] Trailer brake hydraulic control	33.3
Hydraulic systems	35
[35.104] Fixed displacement pump	35.1
[35.204] Remote control valves	35.2
[35.114] Three-point hitch control valve	35.3
[35.116] Three-point hitch cylinder	35.4

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$