

Farmlift 632
Farmlift 635
Farmlift 735
Farmlift 742
Farmlift 935
Stage IIIB
Telescopic Handler

SERVICE MANUAL

Part number 48192604

English

August 2017

© 2017 CNH Industrial Italia S.p.A. All Rights Reserved.

CASE II
AGRICULTURE

Link Product / Engine

Product	Market Product	Engine
Farmlift 632 telehandler 6m 120 HP	Europe	F4HFE413C*A
Farmlift 635 Telehandler 6m 140 hp	Europe	F4HFE413J*A
Farmlift 735 Telehandler 7m 120 HP - Dump Angle Increased [FNHZF735NGKC35101 -]	Europe	F4HFE413C*A
Farmlift 742 Telehandler 7m 140 HP	Europe	F4HFE413J*A
Farmlift 935 Telehandler 10m 120 HP	Europe	F4HFE413C*A

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.218] Fuel injection system.....	10.2
[10.202] Air cleaners and lines	10.3
[10.254] Intake and exhaust manifolds and muffler	10.4
[10.400] Engine cooling system	10.5
[10.304] Engine lubrication system.....	10.6
Transmission	21
[21.113] Powershift transmission	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.155] Powershift transmission internal components.....	21.3
[21.120] Gearbox	21.4
[21.700] Torque converter	21.5
Four-Wheel Drive (4WD) system	23
[23.314] Drive shaft.....	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2

[33.220] Trailer brake hydraulic control.....	33.3
[33.204] Front axle brake	33.4
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump	35.2
[35.106] Variable displacement pump	35.3
[35.359] Main control valve	35.4
[35.357] Pilot system	35.5
[35.128] Auxiliary hydraulic function control	35.6
[35.752] Hydraulic fan drive cooling system.....	35.7
[35.100] Main lift system.....	35.8
[35.701] Front loader arm hydraulic system	35.9
[35.736] Boom hydraulic system	35.10
[35.734] Tool quick coupler hydraulic system	35.11
[35.740] Telescopic arm hydraulic system.....	35.12
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders	41.3
Cab climate control	50
[50.104] Ventilation	50.1
[50.200] Air conditioning	50.2
Electrical systems	55
[55.100] Harnesses and connectors.....	55.1
[55.201] Engine starting system	55.2
[55.301] Alternator	55.3
[55.011] Fuel tank system	55.4
[55.512] Cab controls.....	55.5

[55.404] External lighting	55.6
[55.514] Cab lighting	55.7
[55.408] Warning indicators, alarms, and instruments	55.8
[55.DTC] FAULT CODES.....	55.9
Telescopic single arm	83
[83.122] Telescopic arm	83.1
Platform, cab, bodywork, and decals	90
[90.150] Cab.....	90.1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$