

MAXXUM 110 EP
MAXXUM 115 EP
MAXXUM 120 EP
MAXXUM 125 EP
MAXXUM 130 EP
MAXXUM 140 EP
MAXXUM 110 Multicontroller EP
MAXXUM 115 Multicontroller EP
MAXXUM 120 Multicontroller EP
MAXXUM 125 Multicontroller EP
MAXXUM 130 Multicontroller EP
MAXXUM 140 Multicontroller EP
MAXXUM CVT 110
MAXXUM CVT 120
MAXXUM CVT 130
Tractor

SERVICE MANUAL

Part number 47665857

English

February 2014

Copyright © 2014 CNH Industrial Österreich GmbH. All Rights Reserved.

CASE II
AGRICULTURE

SERVICE MANUAL



**MAXXUM 110 EP , MAXXUM 110 Multicontroller EP , MAXXUM 115 EP
 , MAXXUM 115 Multicontroller EP , MAXXUM 120 EP , MAXXUM 120
 Multicontroller EP , MAXXUM 125 EP , MAXXUM 125 Multicontroller EP ,
 MAXXUM 130 EP , MAXXUM 130 Multicontroller EP , MAXXUM 140 EP ,
 MAXXUM 140 Multicontroller EP , MAXXUM CVT 110 , MAXXUM CVT 120 ,
 MAXXUM CVT 130**

Link Product / Engine

| Product | Market Product | Engine |
|-------------------------------|-----------------------|---------------|
| MAXXUM CVT 110 | International Region | F4DFE413C*A |
| MAXXUM CVT 120 | International Region | F4DFE413B*A |
| MAXXUM CVT 130 | International Region | F4DFE413A*A |
| MAXXUM 110 EP | International Region | F4DFE413E*A |
| MAXXUM 110 Multicontroller EP | International Region | F4DFE413C*A |
| MAXXUM 115 EP | International Region | F4DFE613F*A |
| MAXXUM 115 Multicontroller EP | International Region | F4DFE613F*A |
| MAXXUM 120 EP | International Region | F4DFE413D*A |
| MAXXUM 120 Multicontroller EP | International Region | F4DFE413B*A |
| MAXXUM 125 EP | International Region | F4DFE613E*A |
| MAXXUM 125 Multicontroller EP | International Region | F4DFE613E*A |
| MAXXUM 130 EP | International Region | F4DFE413C*A |
| MAXXUM 130 Multicontroller EP | International Region | F4DFE413A*A |
| MAXXUM 140 EP | International Region | F4DFE6132*A |
| MAXXUM 140 Multicontroller EP | International Region | F4DFE6132*A |

Contents

INTRODUCTION

| | |
|---|-----------|
| Engine | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.216] Fuel tanks | 10.2 |
| [10.218] Fuel injection system..... | 10.3 |
| [10.202] Air cleaners and lines | 10.4 |
| [10.250] Turbocharger and lines..... | 10.5 |
| [10.254] Intake and exhaust manifolds and muffler | 10.6 |
| [10.500] Selective Catalytic Reduction (SCR) exhaust treatment..... | 10.7 |
| [10.400] Engine cooling system | 10.8 |
| [10.414] Fan and drive | 10.9 |
| [10.310] Aftercooler..... | 10.10 |
| Clutch | 18 |
| [18.112] Slip clutch or flywheel damper | 18.1 |
| Transmission | 21 |
| [21.112] Power shuttle transmission..... | 21.1 |
| [21.134] Power shuttle transmission external controls | 21.2 |
| [21.154] Power shuttle transmission internal components | 21.3 |
| [21.111] Semi-Powershift transmission | 21.4 |
| [21.133] Semi-Powershift transmission external controls | 21.5 |
| [21.103] Semi-Powershift transmission lubrication system..... | 21.6 |
| [21.152] Semi-Powershift transmission internal components | 21.7 |
| [21.504] Continuously Variable Transmission (CVT) | 21.8 |
| [21.505] Continuously Variable Transmission (CVT) external controls..... | 21.9 |
| [21.506] Continuously Variable Transmission (CVT) lubrication system | 21.10 |
| [21.507] Continuously Variable Transmission (CVT) internal components | 21.11 |
| [21.160] Creeper | 21.12 |

| | |
|---|-----------|
| [21.166] Overdrive | 21.13 |
| Four-Wheel Drive (4WD) system | 23 |
| [23.202] Electro-hydraulic control | 23.1 |
| [23.314] Drive shaft | 23.2 |
| Front axle system | 25 |
| [25.100] Powered front axle | 25.1 |
| [25.102] Front bevel gear set and differential | 25.2 |
| [25.108] Final drive hub, steering knuckles, and shafts | 25.3 |
| [25.122] Axle suspension control | 25.4 |
| Rear axle system | 27 |
| [27.100] Powered rear axle | 27.1 |
| [27.106] Rear bevel gear set and differential | 27.2 |
| [27.120] Planetary and final drives | 27.3 |
| Power Take-Off (PTO) | 31 |
| [31.104] Rear electro-hydraulic control | 31.1 |
| [31.114] Two-speed rear Power Take-Off (PTO) | 31.2 |
| [31.116] Three-speed rear Power Take-Off (PTO) | 31.3 |
| [31.142] Front Power Take-Off (PTO) control | 31.4 |
| [31.146] Front Power Take-Off (PTO) | 31.5 |
| Brakes and controls | 33 |
| [33.202] Hydraulic service brakes | 33.1 |
| [33.110] Parking brake or parking lock | 33.2 |
| [33.204] Front axle brake | 33.3 |
| [33.220] Trailer brake hydraulic control | 33.4 |
| [33.224] Trailer brake pneumatic control | 33.5 |
| Hydraulic systems | 35 |
| [35.000] Hydraulic systems | 35.1 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$