

NOTE: Engine repair information is not contained within this tractor Repair Manual. For engine repair, refer to publication number 87515687 for the 8.3 & 9.0L 6 Cylinder, 24 Valve CNH Engine with High Pressure Common Rail Fuel System.

BOOK 1 - General, Electrical, Engine, Steering - 87525613

STANDARD TORQUE SPECIFICATIONS	SECTION 1000
TORQUE SPECIFICATIONS - METRIC HARDWARE	1000-4
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS	1000-5
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS	1000-6
 SAFETY, GENERAL INFORMATION, MAINTENANCE SCHEDULE	 SECTION 1001
SAFETY	1001-3
GENERAL INFORMATION	1001-5
LUBRICATION/MAINTENANCE CHART	1001-6
SYSTEM CAPACITIES	1001-7
 COOLING SYSTEM MODULE REMOVAL AND INSTALLATION	 SECTION 2001
COOLING SYSTEM MODULE REMOVAL	2001-3
COOLING SYSTEM MODULE INSTALLATION	2001-7
 ENGINE REMOVAL AND INSTALLATION	 SECTION 2002
SPECIAL TORQUES	2002-3
ENGINE REMOVAL	2002-4
ENGINE INSTALLATION	2002-21
 VISCOUS FAN DRIVE TEST	 SECTION 2003
REQUIRED TOOLS	2003-3
DIAGNOSTIC PROCEDURE	2003-4
FAN SPEED TEST	2003-7
 FUEL TANK / FUEL SENDER REMOVAL AND INSTALLATION	 SECTION 3001
SPECIAL TORQUES	3001-3
FUEL TANK REMOVAL AND INSTALLATION	3001-3
FUEL LEVEL SENDER REMOVAL AND INSTALLATION	3001-10
 ELECTRICAL SCHEMATIC POSTER - Prior to P.I.N. Z6RZ04001	 87389708
 ELECTRICAL SCHEMATIC POSTER - P.I.N. Z6RZ04001 and After	 87588600
 ELECTRICAL SCHEMATIC POSTER - P.I.N. Z7RZ01521 and After	 87624272
 ELECTRICAL SYSTEM - HOW IT WORKS AND TROUBLESHOOTING	 SECTION 4001
SPECIAL TOOLS	4001-4
FUSES AND RELAY IDENTIFICATION	4001-5
Cab Fuses/Relay Location	4001-5
Engine Compartment Fuse/Relay Identification (Power Distribution Box)	4001-5
Fuse Identification	4001-6
Relays	4001-7
INSTRUMENTATION AND CONTROLS	4001-8
CONNECTOR AND COMPONENT LOCATIONS	4001-12
ELECTRICAL CONNECTORS	4001-35
ELECTRICAL SYSTEMS SCHEMATICS AND DIAGNOSTICS	4001-142
Power Distribution System Circuit Operation	4001-142
Power Distribution Circuit Troubleshooting	4001-142
Power Distribution Schematic	4001-142

MX AND MAGNUM 215/245/275/305 MASTER TABLE OF CONTENTS - 87710915

POWER DISTRIBUTION SYMPTOM CHART	4001-143
Diagnostic Tests	4001-144
AUDIO SYSTEM	4001-146
Audio System Circuit Operation	4001-146
Audio System Circuit Troubleshooting	4001-146
Audio System Symptom Chart	4001-146
Audio System Diagnostic Tests	4001-148
CHARGING SYSTEM	4001-152
Charging System Circuit Operation	4001-152
Charging System Circuit Troubleshooting	4001-152
Charging System Symptom Chart	4001-153
Charging System Diagnostic Tests	4001-154
EXTERIOR LIGHTING SYSTEM	4001-158
Exterior Lighting System Circuit Operation	4001-158
Exterior Lighting System Circuit Troubleshooting	4001-158
Exterior Lighting System Symptom Chart	4001-159
Exterior Lighting System Diagnostic Tests	4001-159
INSTRUMENTATION AND WARNING SYSTEM	4001-164
Instrumentation and Warning System Circuit Troubleshooting	4001-164
Instrumentation and Warning System Symptom Chart	4001-164
Instrumentation and Warning System Diagnostic Tests	4001-165
INTERIOR LIGHTING AND HORN SYSTEM	4001-168
Interior Lighting and Horn System Circuit Operation	4001-168
Interior Lighting and Horn System Circuit Troubleshooting	4001-168
Interior Lighting and Horn System Symptom Chart	4001-169
Interior Lighting and Horn System Diagnostic Tests	4001-169
POWER MIRROR SYSTEM	4001-173
Power Mirror Circuit Operation	4001-173
Power Mirror Circuit Troubleshooting	4001-173
Power Mirror System Symptom Chart	4001-174
Power Mirror System Diagnostic Tests	4001-176
POWER SEAT SYSTEM	4001-185
Power Seat System Circuit Operation	4001-185
Power Seat System Circuit Troubleshooting	4001-185
Power Seat System Symptom Chart	4001-186
Power Seat System Diagnostic Tests	4001-187
STARTING SYSTEM	4001-191
Starting System Circuit Operation	4001-191
Starter Motor Circuit Troubleshooting	4001-191
Starting System Symptom Chart	4001-191
Starting System Diagnostic Tests	4001-193
WIPER/WASHER SYSTEM	4001-198
Wiper/Washer System Circuit Operation	4001-198
Wiper/Washer System Circuit Troubleshooting	4001-198
Wiper/Washer System Symptom Chart	4001-199
Wiper/Washer System Diagnostic Tests	4001-200
STEERING COLUMN AND STEERING HAND PUMP	SECTION 5001
SPECIAL TOOLS	5001-2
SPECIAL TORQUES	5001-3
STEERING COLUMN AND STEERING HAND PUMP	5001-3
REMOVAL	5001-3
STEERING HAND PUMP SERVICE	5001-7
STEERING COLUMN ASSEMBLY	5001-9
INSTALLATION	5001-10

BOOK 1A - Electrical (continued) - 87611218

ELECTRICAL SYSTEM - HOW IT WORKS AND TROUBLESHOOTING, P.I.N. Z6RZ04001 AND AFTER
SPECIAL TOOLS 4002-4
FUSES AND RELAY IDENTIFICATION 4002-5
 Cab Fuses/Relay Location 4002-5
 Engine Compartment Fuse/Relay Identification (Power Distribution Box) 4002-5
 Fuse Identification 4002-6
 Relays 4002-7
INSTRUMENTATION AND CONTROLS 4002-8
CONNECTOR AND COMPONENT LOCATIONS 4002-12
ELECTRICAL CONNECTORS 4002-34
ELECTRICAL SYSTEMS SCHEMATICS AND DIAGNOSTICS 4002-141
 Power Distribution System Circuit Operation 4002-141
 Power Distribution Circuit Troubleshooting 4002-141
 Power Distribution Schematic 4002-141
POWER DISTRIBUTION SYMPTOM CHART 4002-142
 Diagnostic Tests 4002-143
AUDIO SYSTEM 4002-145
 Audio System Circuit Operation 4002-145
 Audio System Circuit Troubleshooting 4002-145
 Audio System Symptom Chart 4002-145
 Audio System Diagnostic Tests 4002-147
CHARGING SYSTEM 4002-151
 Charging System Circuit Operation 4002-151
 Charging System Circuit Troubleshooting 4002-151
 Charging System Symptom Chart 4002-152
 Charging System Diagnostic Tests 4002-153
EXTERIOR LIGHTING SYSTEM 4002-157
 Exterior Lighting System Circuit Operation 4002-157
 Exterior Lighting System Circuit Troubleshooting 4002-157
 Exterior Lighting System Symptom Chart 4002-158
 Exterior Lighting System Diagnostic Tests 4002-158
INSTRUMENTATION AND WARNING SYSTEM 4002-163
 Instrumentation and Warning System Circuit Troubleshooting 4002-163
 Instrumentation and Warning System Symptom Chart 4002-163
 Instrumentation and Warning System Diagnostic Tests 4002-164
INTERIOR LIGHTING AND HORN SYSTEM 4002-167
 Interior Lighting and Horn System Circuit Operation 4002-167
 Interior Lighting and Horn System Circuit Troubleshooting 4002-167
 Interior Lighting and Horn System Symptom Chart 4002-168
 Interior Lighting and Horn System Diagnostic Tests 4002-168
POWER MIRROR SYSTEM 4002-172
 Power Mirror Circuit Operation 4002-172
 Power Mirror Circuit Troubleshooting 4002-172
 Power Mirror System Symptom Chart 4002-173
 Power Mirror System Diagnostic Tests 4002-175
POWER SEAT SYSTEM 4002-184
 Power Seat System Circuit Operation 4002-184
 Power Seat System Circuit Troubleshooting 4002-184
 Power Seat System Symptom Chart 4002-185
 Power Seat System Diagnostic Tests 4002-186

MX AND MAGNUM 215/245/275/305 MASTER TABLE OF CONTENTS - 87710915

STARTING SYSTEM 4002-190
Starting System Circuit Operation 4002-190
Starter Motor Circuit Troubleshooting 4002-190
Starting System Symptom Chart 4002-190
Starting System Diagnostic Tests 4002-192
WIPER/WASHER SYSTEM 4002-197
Wiper/Washer System Circuit Operation 4002-197
Wiper/Washer System Circuit Troubleshooting 4002-197
Wiper/Washer System Symptom Chart 4002-198
Wiper/Washer System Diagnostic Tests 4002-199

BOOK 1B - Electrical (Continued) - 87678524

ELECTRICAL SCHEMATIC POSTER - P.I.N. Z7RZ01521 and After..... 87624272

ELECTRICAL SYSTEM - HOW IT WORKS AND TROUBLESHOOTING,
P.I.N. Z7RZ01521 AND AFTER SECTION 4003

SPECIAL TOOLS 4003-4
FUSES AND RELAY IDENTIFICATION 4003-5
Cab Fuses/Relay Location 4003-5
Engine Compartment Fuse/Relay Identification (Power Distribution Box) 4003-5
Fuse Identification 4003-6
Relays 4003-7
INSTRUMENTATION AND CONTROLS 4003-8
CONNECTOR AND COMPONENT LOCATIONS 4003-12
Cab Exterior 4003-12
Cab Interior 4003-15
Engine/Engine Compartment 4003-20
Transmission 4003-27
Hitch System 4003-31
ELECTRICAL CONNECTORS 4003-33
ELECTRICAL SYSTEMS SCHEMATICS AND DIAGNOSTICS 4003-141
Power Distribution System Circuit Operation 4003-141
Power Distribution Circuit Troubleshooting 4003-141
Power Distribution Schematic 4003-141
POWER DISTRIBUTION SYMPTOM CHART 4003-142
Diagnostic Tests 4003-143
AUDIO SYSTEM 4003-147
Audio System Circuit Operation 4003-147
Audio System Circuit Troubleshooting 4003-147
Audio System Symptom Chart 4003-147
Audio System Diagnostic Tests 4003-149
CHARGING SYSTEM 4003-153
Charging System Circuit Operation 4003-153
Charging System Circuit Troubleshooting 4003-153
Charging System Symptom Chart 4003-154
Charging System Diagnostic Tests 4003-155
EXTERIOR LIGHTING SYSTEM 4003-159
Exterior Lighting System Circuit Operation 4003-159
Exterior Lighting System Circuit Troubleshooting 4003-159
Exterior Lighting System Symptom Chart 4003-160
Exterior Lighting System Diagnostic Tests 4003-160
INSTRUMENTATION AND WARNING SYSTEM 4003-165
Instrumentation and Warning System Circuit Troubleshooting 4003-165
Instrumentation and Warning System Symptom Chart 4003-165
Instrumentation and Warning System Diagnostic Tests 4003-166

INTERIOR LIGHTING AND HORN SYSTEM	4003-169
Interior Lighting and Horn System Circuit Operation	4003-169
Interior Lighting and Horn System Circuit Troubleshooting	4003-169
Interior Lighting and Horn System Symptom Chart	4003-170
Interior Lighting and Horn System Diagnostic Tests	4003-170
POWER MIRROR SYSTEM	4003-174
Power Mirror Circuit Operation	4003-174
Power Mirror Circuit Troubleshooting	4003-174
Power Mirror System Symptom Chart	4003-175
Power Mirror System Diagnostic Tests	4003-177
POWER SEAT SYSTEM	4003-186
Power Seat System Circuit Operation	4003-186
Power Seat System Circuit Troubleshooting	4003-186
Power Seat System Symptom Chart	4003-187
Power Seat System Diagnostic Tests	4003-188
STARTING SYSTEM	4003-192
Starting System Circuit Operation	4003-192
Starter Motor Circuit Troubleshooting	4003-192
Starting System Symptom Chart	4003-192
Starting System Diagnostic Tests	4003-194
WIPER/WASHER SYSTEM	4003-199
Wiper/Washer System Circuit Operation	4003-199
Wiper/Washer System Circuit Troubleshooting	4003-199
Wiper/Washer System Symptom Chart	4003-200
Wiper/Washer System Diagnostic Tests	4003-201

BOOK 2 - Power Train - 87678525

POWERSHIFT TRANSMISSION SYSTEM - HOW IT WORKS AND TROUBLESHOOTING.....	SECTION 6000
TRANSMISSION SYSTEM INTRODUCTION	6000-3
TRANSMISSION SYSTEM CONTROLS	6000-5
TRANSMISSION SYSTEM COMPONENTS	6000-6
TRANSMISSION LUBE AND DISTRIBUTION TUBES	6000-8
POWERSHIFT TRANSMISSION CLUTCH LAYOUT	6000-10
POWERSHIFT VALVE CLUTCH ENGAGEMENTS	6000-11
POWER FLOW (REVERSE SPEEDS)	6000-30
POWER FLOW (REVERSE SPEEDS)	6000-32
POWER FLOW (FORWARD CREEPER DRIVE SPEEDS)	6000-34
POWER FLOW (REVERSE CREEPER DRIVE SPEEDS)	6000-40
INCHING VALVE OPERATION	6000-42
INSTRUMENTATION CLUSTER - TRANSMISSION LEAKAGE CHECK	6000-46
MASTER CLUTCH PRESSURE CHECK	6000-49
TRANSMISSION INPUT SHAFT AND DRIVE PLATE.....	SECTION 6001
SPECIAL TORQUES	6001-3
TRANSMISSION INPUT SHAFT AND DRIVE PLATE REMOVAL	6001-4
TRANSMISSION INPUT SHAFT AND DRIVE PLATE INSTALLATION	6001-8
INPUT DROP BOX.....	SECTION 6002
SPECIAL TOOLS	6002-3
SPECIAL TORQUES	6002-3
INPUT DROP BOX	6002-4
DISASSEMBLY	6002-6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$