

**WX168**  
**WX188**  
Wheeled Excavator

**SERVICE MANUAL**

Part number 48005370

English

April 2016

© 2016 CNH Industrial Italia S.p.A. All Rights Reserved.

**CASE**  
CONSTRUCTION



## **SERVICE MANUAL**

**WX168  
WX188**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.202] Air cleaners and lines .....	10.1
[10.206] Fuel filters .....	10.2
[10.216] Fuel tanks .....	10.3
[10.218] Fuel injection system.....	10.4
[10.254] Intake and exhaust manifolds and muffler .....	10.5
[10.310] Aftercooler.....	10.6
[10.400] Engine cooling system .....	10.7
Transmission.....	21
[21.105] Powershift transmission lubrication system .....	21.1
[21.113] Powershift transmission .....	21.2
[21.135] Powershift transmission external controls.....	21.3
[21.155] Powershift transmission internal components.....	21.4
Four-Wheel Drive (4WD) system .....	23
[23.314] Drive shaft.....	23.1
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.122] Axle suspension control.....	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
Brakes and controls .....	33

[33.110] Parking brake or parking lock .....	33.1
[33.202] Hydraulic service brakes .....	33.2
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems .....	35.1
[35.106] Variable displacement pump .....	35.2
[35.300] Reservoir, cooler, and filters.....	35.3
[35.304] Combination pump units .....	35.4
[35.352] Hydraulic swing system .....	35.5
[35.353] Hydraulic travel system .....	35.6
[35.354] Hydraulic central joint .....	35.7
[35.357] Pilot system .....	35.8
[35.359] Main control valve .....	35.9
[35.360] Hammer and rotating bucket hydraulic system .....	35.10
[35.703] Stabilizer hydraulic system.....	35.11
[35.730] Positioning arm hydraulic system .....	35.12
[35.736] Boom hydraulic system .....	35.13
[35.737] Dipper hydraulic system.....	35.14
[35.738] Excavator and backhoe bucket hydraulic system.....	35.15
[35.741] Dozer blade cylinders .....	35.16
<b>Frames and ballasting .....</b>	<b>39</b>
[39.103] Swing ring assembly .....	39.1
[39.129] Stabilizers .....	39.2
[39.140] Ballasts and supports .....	39.3
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders .....	41.4

<b>Wheels</b> .....	<b>44</b>
[44.511] Front wheels .....	44.1
[44.520] Rear wheels .....	44.2
<b>Cab climate control</b> .....	<b>50</b>
[50.200] Air conditioning .....	50.1
<b>Electrical systems</b> .....	<b>55</b>
[55.000] Electrical system .....	55.1
[55.010] Fuel injection system .....	55.2
[55.011] Fuel tank system .....	55.3
[55.012] Engine cooling system .....	55.4
[55.014] Engine intake and exhaust system .....	55.5
[55.015] Engine control system .....	55.6
[55.020] Transmission speed sensors .....	55.7
[55.036] Hydraulic system control .....	55.8
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system .....	55.9
[55.100] Harnesses and connectors .....	55.10
[55.110] Electrical rotary joint .....	55.11
[55.302] Battery .....	55.12
[55.404] External lighting .....	55.13
[55.416] Swing control system .....	55.14
[55.425] Boom, dipper, and bucket control system .....	55.15
[55.512] Cab controls .....	55.16
[55.514] Cab lighting .....	55.17
[55.525] Cab engine controls .....	55.18
[55.530] Camera .....	55.19
[55.640] Electronic modules .....	55.20
<b>Booms, dippers, and buckets</b> .....	<b>84</b>
[84.100] Bucket .....	84.1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$