

DX300LCA

Shop Manual

950106-00075E

Serial Number 5001 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

DX300LCA

Serial Number 5001 and Up

Pub.No. 950106-00075E

Product Label



Instructions

**Trim Out The Label Along
The Lines And Insert Into
Pocket On The Binder Spine**

Table of Contents

Safety

Track Excavator Safety.....	SP002025
-----------------------------	----------

Specifications

Specification for DX300LCA.....	SP002026
---------------------------------	----------

General Maintenance

General Maintenance Procedures.....	SP000016
Standard Torques.....	SP000813

Upper Structure

Cabin.....	SP001737
Counterweight.....	SP001748
Fuel Tank.....	SP002027
Fuel Transfer Pump (Opt).....	SP000021
Swing Bearing.....	SP001856
Swing Reduction Gear.....	SP002028

Lower Structure and Chassis

Track Assembly	SP001741
------------------------	----------

Engine and Drive Train

Drive Coupling (Main Pump).....	SP002029
---------------------------------	----------

Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment.....	SP001751
Accumulator.	SP000028
Center Joint (Swivel).	SP001620
Cylinders.	SP000030

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$