

# **FARMALL® 45C FARMALL® 55C Tier 4B (final) Compact Tractor**

*FARMALL® 45C Cab: PIN LSMF45CCxx0010001 to LSMF45CCPH0010018  
FARMALL® 45C ROPS: PIN LSMF45CRxx0010001 to LSMF45CRVH0010031  
FARMALL® 55C Cab: PIN LSMF55CCxx0010001 to LSMF55CCAH0010024  
FARMALL® 55C ROPS: PIN LSMF55CRxx0010001 to LSMF55CRLH0010014*

## **SERVICE MANUAL**

**Part number 48144021**

1<sup>st</sup> edition English  
June 2017

**CASE II**  
AGRICULTURE



## **SERVICE MANUAL**

- Farmall® 45C Tier 4B (final), Cab [LSMF45CCxx0010001 -  
LSMF45CCPH0010018]**
- Farmall® 45C Tier 4B (final), ROPS [LSMF45CRxx0010001 -  
LSMF45CRVH0010031]**
- Farmall® 55C Tier 4B (final), Cab [LSMF55CCxx0010001 -  
LSMF55CAH0010024]**
- Farmall® 55C Tier 4B (final), ROPS [LSMF55CRxx0010001 -  
LSMF55CRLH0010014]**

## Link Product / Engine

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
Farmall® 45C Tier 4B (final), ROPS [LSMF45CRxx0010001 - LSMF45CRVH0010031]	North America	L3C19-T3
Farmall® 45C Tier 4B (final), Cab [LSMF45CCxx0010001 - LSMF45CCPH0010018]	North America	L3C19-T3
Farmall® 55C Tier 4B (final), ROPS [LSMF55CRxx0010001 - LSMF55CRLH0010014]	North America	L3C19-T1
Farmall® 55C Tier 4B (final), Cab [LSMF55CCxx0010001 - LSMF55CCAH0010024]	North America	L3C19-T1

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.206] Fuel filters .....	10.3
[10.218] Fuel injection system.....	10.4
[10.202] Air cleaners and lines .....	10.5
[10.254] Intake and exhaust manifolds and muffler .....	10.6
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.7
[10.400] Engine cooling system .....	10.8
[10.414] Fan and drive .....	10.9
<b>Clutch</b> .....	<b>18</b>
[18.100] Clutch mechanical release control .....	18.1
[18.110] Clutch and components .....	18.2
<b>Power coupling</b> .....	<b>19</b>
[19.110] Flywheel damper .....	19.1
<b>Transmission</b> .....	<b>21</b>
[21.114] Mechanical transmission .....	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.110] Master clutch housing .....	21.4
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.314] Drive shaft.....	23.1
[23.101] Mechanical control .....	23.2
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1

[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
<b>Rear axle system.....</b>	<b>27</b>
[27.106] Rear bevel gear set and differential.....	27.1
[27.120] Planetary and final drives .....	27.2
<b>Hydrostatic drive.....</b>	<b>29</b>
[29.200] Mechanical control .....	29.1
[29.100] Transmission and steering hydrostatic control .....	29.2
[29.204] Reservoir, cooler, and lines .....	29.3
[29.218] Pump and motor components.....	29.4
[29.202] Hydrostatic transmission .....	29.5
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.110] One-speed rear Power Take-Off (PTO) .....	31.3
[31.120] Central Power Take-Off (PTO) .....	31.4
<b>Brakes and controls .....</b>	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
[33.120] Mechanical service brakes .....	33.2
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.350] Safety and main relief valves .....	35.4
[35.204] Remote control valves .....	35.5
[35.114] Three-point hitch control valve .....	35.6
[35.116] Three-point hitch cylinder .....	35.7
[35.724] Front loader hydraulic system control.....	35.8

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$