

**KOBELCO**

**SERVICE MANUAL**

**HYDRAULIC EXCAVATOR**

**SK80CS-1E**

Applicable: SK80CS-1E LF02-01001~

**KOBELCO®**

SK80CS-1E  
HYDRAULIC EXCAVATOR

**SHOP  
MANUAL**

APPLICABLE

SK80CS-1E . . . . . LF02-01001~

---

Kobelco Construction Machinery America, LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

All data given in this publication is subject to production variations. Dimensions and weights are only approximate. Illustrations do not necessarily show products in standard condition. For exact information about any particular product, please consult your Dealer.

Revision History			
Issue	Issue Date	Applicable Machines	Remarks
First Edition	03-2003	SK80CS-1E	S5LF0004E-00 NA

# HYDRAULIC EXCAVATOR

**SHOP**  
**MANUAL**      model **SK80CS-1E**

## INDEX

1	SPECIFICATION SECTION
2	MAINTENANCE SECTION
3	SYSTEM SECTION
4	DISASSEMBLY SECTION
5	TROUBLESHOOTING
6	ENGINE SECTION
7	INSTALLATION PROCEDURES FOR OPTIONAL ATTACHMENT

SPECIFICATION

MAINTENANCE

SYSTEM

DISASSEMBLING

TROUBLESHOOTING

E/G

OPT.

**KOBELCO**

Book code No. S5LF0004E

Book Code No. Distribution Year—Month		Index No.	Title		
S5LF0104E 2003-03			<b>SPECIFICATION</b>	OUTLINE	<b>LF01</b>
S5LF0204E 2003-03		SPECIFICATION		<b>LF02</b>	
S5LF0304E 2003-03		ATTACHMENT DIMENSION		<b>LF03</b>	
S5LF1104E 2003-03			<b>MAINTENANCE</b>	TOOLS	<b>LF11</b>
S5LF1204E 2003-03		STANDARD MAINTENANCE TIME SCHEDULE		<b>LF12</b>	
S5LF1304E 2003-03		MAINTENANCE STANDARD AND TEST PROCEDURE		<b>LF13</b>	
S5LF2104E 2003-03			<b>SYSTEM</b>	MECHATRO CONTROL SYSTEM	<b>LF21</b>
S5LF2204E 2003-03		HYDRAULIC SYSTEM		<b>LF22</b>	
S5LF2304E 2003-03		ELECTRICAL SYSTEM		<b>LF23</b>	
S5LF2404E 2003-03		COMPONENTS SYSTEM		<b>LF24</b>	
S5LF2504E 2003-03		AIR-CONDITIONER SYSTEM		<b>LF25</b>	
—				—	
S5LF3104E 2003-03			<b>DISASSEMBLING</b>	DISASSEMBLING AND ASSEMBLING	<b>LF31</b>
S5LF3204E 2003-03		ATTACHMENT		<b>LF32</b>	
S5LF3304E 2003-03		UPPER STRUCTURE		<b>LF33</b>	
S5LF3404E 2003-03		TRAVEL SYSTEM		<b>LF34</b>	
S5LF4104E 2003-03			<b>TROUBLESHOOTING</b>	MECHATRO CONTROL	<b>LF41</b>
S5LF4204E 2003-03		HYDRAULIC		<b>LF42</b>	
S5LF4304E 2003-03		ELECTRICAL		<b>LF43</b>	
S5LF4404E 2003-03		ENGINE		<b>LF44</b>	
S5LF5104E 2003-03			<b>E/G</b>	ENGINE	<b>LF51</b>
LF02-01001~				APPLICABLE MACHINES	

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$