

SERVICE MANUAL

NEF Tier 4B (final) and Stage IV Engine

See the following page for engine model numbers



SERVICE MANUAL

F4DFE4131*B001, F4DFE4131*B002, F4DFE4131*B007, F4DFE4131*B008,
F4DFE4132*B001, F4DFE4132*B002, F4DFE4132*B005, F4DFE4132*B006,
F4DFE4133*B001, F4DFE4133*B002, F4DFE4133*B007, F4DFE4133*B008,
F4DFE4134*B001, F4DFE4134*B002, F4DFE4134*B005, F4DFE4134*B006,
F4DFE413R*B001, F4DFE413S*B001, F4DFE413T*B001, F4DFE413U*B001,
F4DFE414B*B001, F4DFE414C*B001, F4DFE414D*B001, F4DFE414E*B001,
F4DFE6132*B001, F4DFE6132*B007, F4DFE613B*B001, F4DFE613B*B002,
F4DFE613B*B003, F4DFE613B*B005, F4DFE613B*B006, F4DFE613H*B001,
F4DFE613H*B002, F4DFE613H*B003, F4DFE613J*B001, F4DFE613J*B002,
F4DFE613J*B003, F4DFE613J*B005, F4DFE613J*B006, F4DFE613K*B001,
F4DFE613K*B002, F4DFE613K*B003, F4DFE613K*B004, F4DFE613K*B006,
F4DFE613K*B007, F4DFE613K*B008, F4DFE613L*B001, F4DFE613M*B001,
F4DFE613M*B002, F4DFE613M*B003, F4DFE613N*B001, F4DFE613N*B002,
F4DFE613N*B003, F4DFE613N*B005, F4DFE613N*B006, F4DFE613P*B001,
F4DFE613P*B002, F4DFE613P*B003, F4DFE617L*B002, F4DFE617M*B001,
F4HFE413H*B001, F4HFE413H*B002, F4HFE413L*B001, F4HFE413M*B001,
F4HFE413N*B001, F4HFE413P*B001, F4HFE413V*B001, F4HFE413W*B001,
F4HFE413X*B001, F4HFE413Y*B001, F4HFE6133*B001, F4HFE6133*B003,
F4HFE6135*B001, F4HFE6136*B003, F4HFE6137*B003, F4HFE613A*B001,
F4HFE613A*B002, F4HFE613B*B001, F4HFE613B*B002, F4HFE613B*B003,
F4HFE613B*B005, F4HFE613B*B006, F4HFE613C*B001, F4HFE613C*B002,
F4HFE613C*B004, F4HFE613C*B006, F4HFE613D*B001, F4HFE613D*B006,
F4HFE613D*B007, F4HFE613E*B001, F4HFE613E*B005, F4HFE613F*B001,
F4HFE613F*B002, F4HFE613F*B004, F4HFE613G*B001, F4HFE613G*B002,
F4HFE613H*B001, F4HFE613H*B003, F4HFE613J*B001, F4HFE613J*B002,
F4HFE613J*B004, F4HFE613J*B005, F4HFE613K*B001, F4HFE613K*B002,
F4HFE613R*B001, F4HFE613R*B002, F4HFE613R*B005, F4HFE613R*B006,
F4HFE613S*B001, F4HFE613S*B002, F4HFE613S*B003, F4HFE613S*B004,
F4HFE613T*B001, F4HFE613T*B002, F4HFE613T*B005, F4HFE613T*B006,
F4HFE613U*B001, F4HFE613U*B002, F4HFE613W*B001, F4HFE613W*B002,
F4HFE613W*B003, F4HFE613W*B005, F4HFE613W*B006, F4HFE613X*B001,
F4HFE613Y*B001, F4HFE613Y*B002, F4HFE613Y*B003, F4HFE613Z*B001,
F4HFE613Z*B002

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.102] Pan and covers	10.2
[10.106] Valve drive and gears	10.3
[10.101] Cylinder heads	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.103] Crankshaft and flywheel.....	10.6
[10.110] Balancer and damper	10.7
[10.114] Pump drives	10.8
[10.210] Lift pump and lines	10.9
[10.206] Fuel filters	10.10
[10.218] Fuel injection system.....	10.11
[10.250] Turbocharger and lines.....	10.12
[10.254] Intake and exhaust manifolds and muffler	10.13
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment	10.14
[10.400] Engine cooling system	10.15
[10.414] Fan and drive	10.16
[10.304] Engine lubrication system.....	10.17
[10.408] Oil cooler and lines.....	10.18
Electrical systems.....	55
[55.100] Harnesses and connectors.....	55.1
[55.015] Engine control system.....	55.2
[55.201] Engine starting system.....	55.3
[55.301] Alternator.....	55.4
[55.202] Cold start aid	55.5
[55.010] Fuel injection system.....	55.6

[55.014] Engine intake and exhaust system.....	55.7
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.8
[55.012] Engine cooling system	55.9
[55.013] Engine oil system	55.10
[55.640] Electronic modules	55.11

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$